

**XI STEERING SYSTEM, EMERGENCY SYSTEM**

Boats who are fitted with a steering wheel carry an emergency tiller ; keep clear emergency tiller access.

Check once a year at least that the steering cables are tight properly.

Lift the aft hatch, open the cap, drive the emergency tiller into the print on the rudderstock head.

REF	DESCRIPTION
1	Emergency Tiller
2	Cap to Get to the Rudder Stock
3	Rudder Stock
4	Steering Cable
5	Quadrant
6	Rudder Shaft Bearing
7	Split Sleeve
8	Compensation Washer

