

# OWNER'S MANUAL

## BENETEAU 393

### HULL IDENTIFICATION NUMBER:

**US-BEY** \_ \_ \_ \_ \_

OWNER'S MANUAL BENETEAU PART #: 111702

### SUMMARY:

|        |   |    |
|--------|---|----|
| I)     | INTRODUCTION .....                        | 3  |
| II)    | ANTI-FOULING .....                        | 4  |
| III)   | WARRANTY .....                            | 5  |
| IV)    | HULL IDENTIFICATION NUMBERS .....         | 7  |
| V)     | DEALER'S RESPONSIBILITIES .....           | 7  |
| VI)    | OWNER'S/OPERATOR'S RESPONSIBILITIES ..... | 8  |
| VII)   | SAFE OPERATION AND WARNING LABELS .....   | 12 |
| VIII)  | FEDERAL REGULATIONS .....                 | 17 |
| IX)    | COMMISSIONING .....                       | 20 |
| X)     | SPECIFICATIONS OF THE BOAT .....          | 23 |
| XI)    | INTERIOR LAYOUT .....                     | 25 |
| XII)   | DECK .....                                | 27 |
| XIII)  | SAILS AND RIGGING .....                   | 28 |
| XIV)   | FRESH WATER SYSTEM .....                  | 38 |
| XV)    | BILGE PUMP SYSTEM .....                   | 40 |
| XVI)   | SEACOCKS AND THRU-HULLS .....             | 42 |
| XVII)  | ELECTRIC SYSTEMS .....                    | 44 |
| XVIII) | LP GAS SYSTEM .....                       | 55 |
| XIX)   | EMERGENCY STEERING SYSTEM .....           | 57 |
| XX)    | ENGINE .....                              | 58 |
| XXI)   | HANDLING .....                            | 61 |
| XXII)  | MAINTENANCE .....                         | 62 |
| XXIII) | WINTERIZING PROCEDURES .....              | 68 |
| XXIV)  | ENVIRONMENT .....                         | 73 |

### EXPLANATION OF THE TYPOGRAPHY USED:

**DANGER**

**WARNING**

TAKE CARE

**RECEIPT**

OWNER'S NAME .....

ADDRESS .....

.....

.....

Owner of the BENETEAU 393 number .....

Do certify that I have accepted delivery and read the information in the owner's manual delivered with the boat.

On .....

Signature

Please keep this copy for your records

.....

**RECEIPT**

OWNER'S NAME : .....

ADDRESS : .....

.....

.....

Owner of the BENETEAU 393 number .....

Do certify that I have taken delivery and read the information in the owner's manual delivered with the boat.

On .....

Signature

Please send back this copy to BENETEAU USA  
After Sales Dept  
1313 W Hwy 76  
Marion, SC 29571  
U.S.A.

## **I) INTRODUCTION**

Many parts and systems installed on your boat are supplied by other manufacturers and each carries a specific warranty and may require specific care. This manual supplements the literature supplied with the various equipment and we will refer to manufacturer's literature throughout this booklet. We recommend referring to original manufacturer's literature whenever possible.

This manual is broken down into several sections to help explain your boat, your warranty, responsibilities as an owner, and maintenance of your new Beneteau. The systems and procedures described in this manual were correct to the best of our knowledge at the time of printing and may be changed at any time or may have been changed on your boat. While we have tried to describe the major points of your boat within this book, we cannot cover every detail. Please call your dealer or feel free to call us if any question should arise.

Should you need to contact Beneteau please use the following addresses and numbers, be sure to include your model and hull number with any correspondence.

**Beneteau Customer Service**

(Customer Service Dept.)

1313 Highway 76 West

P.O. Drawer 1218

Marion, SC 29571

Tel (843)-423-6459

Fax (843)-423-5516

**Beneteau USA Inc.**

(Sales & Marketing)

24 North Market Street, Suite 201

Charleston, SC 29401

Tel (843)-805-5000

Fax (843)-805-5010

We would like to sincerely thank you for choosing a Beneteau and we wish you good sailing.



## **II) ANTI-FOULING**

The primary function of your Beneteau is to maximize your boating pleasure. Your new Beneteau was made to last through weather and time. From the very beginning, great care has been taken in building your boat. Her molds have been designed and built to resist any deformation of her lines and meticulously maintained to guarantee a superior finish. This is very important because the mold is the cocoon from which your boat emerges.

Between the gel coat layer and the fiberglass laminate, Beneteau applied a nearly impervious Vinylester layer that will virtually eliminate the phenomenon of osmotic blistering in the fiberglass hull. The addition of this product assures that the mechanical properties of your hull remain solid and it's life span is greatly improved.

All materials used in the construction of your Beneteau are of the highest quality. Sampling of materials and operational standards are constantly monitored so that the structural design matches the engineered standard.

Beneteau USA takes great care in the manufacturing of fiberglass parts, as well as in the control of raw materials and their applications. This coupled with the mastery of building techniques allows Beneteau USA to offer you the most favorable warranties in the marine industry.

### **Methodology for anti-fouling application when new:**

1. Clean and degrease hull thoroughly using a denatured ethyl alcohol
2. Sand hull using sandpaper with a minimum grit of #220. (i.e., 220, 300, or 400)
3. Rinse with fresh water.

**DO NOT USE DETERGENTS. DO NOT PRESSURE WASH.**

4. **APPLY ANTI-FOULING TO MANUFACTURER'S DIRECTIONS.**

**NOTE: It cannot be emphasized enough that thorough de-waxing must occur. Furthermore, if the gel coat is abraded with coarse sandpaper, it will no longer be impervious to water.**

### III)

## LIMITED WARRANTY

Beneteau USA Inc. ("Beneteau USA") warrants to the original purchaser or any subsequent buyer during the time of this Limited Warranty (the "Owner"), that the boat, excluding parts or accessories not manufactured by Beneteau USA or Chantiers Beneteau, S.A., will be free from defects in material and workmanship for a period of ONE year from the date of the delivery to the original purchaser.

In addition, Beneteau USA warrants to the Owner, except for the prototypes and boats from the California series, that the hull and deck structure of the boat will be free from defects in material and workmanship for a period of FIVE years from the earliest of the following events: delivery of the boat to the original purchaser, first date of utilization, last day of the boat model year.

Beneteau USA's obligation under this warranty shall be limited to the repairing or replacing (or causing to be repaired or replaced), at Beneteau USA's option, the part or parts which are recognized defective by it in material or workmanship within the applicable warranty period to the exclusion of all other remedies. This Warranty shall apply only provided that the Owner presents the boat's Certificate of Origin and gives the selling dealer written notice of any claimed defect within 15 days after such defect is first discovered and satisfactory proof thereof. Warranty repairs do not result in a renewal or extension of the original Warranty for the boat or a part thereof. Transportation charges and duties shall be borne by the Owner.

This Warranty does not extend to: (1) any losses due to misuse, accident, disaster, abuse, neglect, normal wear and tear or improper maintenance; (2) boats or any part thereof which have been repaired or altered without Beneteau USA's prior written approval; (3) accessories or parts not supplied by Beneteau USA or Chantiers Beneteau, S.A., or parts or accessories installed during the process of manufacturing that were not manufactured by Beneteau USA or Chantiers Beneteau, S.A., for which the Warranty will be the one provided by the supplier of the part or accessory; (4) damages resulting from any modification made to the boat; (5) boats for rental, lease, or charter; (6) splits, discoloration, or cracks in the gel-coat (hull, rudder, and deck); (7) disorders in the hull, or deck such as, without limitation, blisterings, which are caused by use of improper maintenance products or by improper sanding of the gel-coat; (8) anti fouling, varnishes, paints, acrylon, naugahyde, fabrics, headliners, chrome, anodized coatings, keel coatings, sails, cushions, or running rigging, as these items are subject to deterioration caused by climate, erosion, normal use conditions, or wear and tear; (9) reasonable and necessary maintenance, including, but not limited to, periodic re-bedding of chain plates, stanchion bases, windows and/or window frames, and winches; (10) damages or deterioration due to the non-observance of maintenance recommendations as described in the owner's manual or non-compliance with the normal rules of boat maintenance; (11) failure to take reasonable measures necessary to protect the boat; (12) any damage or deterioration to the boat resulting from participation in a competitive sporting event.

In addition, if (1) any structural damage to the boat is suffered as a result of any cause other than a defect in material or workmanship (whether or not such damage requires or results in any repairs to the hull or deck), or (2) any repairs or alterations to the boat of any nature whatsoever are made at a shipyard not approved in writing by Beneteau USA, then the five-year hull/deck Warranty set forth above will immediately thereupon terminate and be of no further force or effect.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ALL OTHER LIABILITIES ON BENETEAU USA'S PART, AND BENETEAU USA NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON, INCLUDING THE DEALER, TO ASSUME FOR IT, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF BENETEAU USA'S BOATS.

Beneteau shall in no event be liable to the Owner or any other person or entity for damages of any kind, including but not limited to direct, indirect, special or consequential damages, arising from the sale or in connection with the use or inability to use the boat for any purpose whatsoever, irrespective of whether the claims or actions for such damages are based upon contract, tort, negligence, strict liability, warranty, or otherwise.

For the purpose of compliance with the Federal Boat Safety Act of 1971 and all notification procedures set forth therein, Beneteau USA requests that you complete the information requested below concerning your current address, which shall be returned to Beneteau USA by your Dealer.

Beneteau USA reserves the right, at any time, to make changes in design or additions to or improvements in the boats without liability or obligation to incorporate such change, addition, or improvement in any boat manufactured prior thereto.

This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

I hereby acknowledge that Beneteau USA Inc. Limited Warranty was attached to Dealer's purchase order in its entirety at the time that I purchased my boat from said Dealer; that I have read such Limited Warranty in its entirety; and that I have a copy of such Limited Warranty, as attached to Dealer's purchase order, for future reference.

|   |                  |
|---|------------------|
| Signature _____                             | Boat Model _____ |
| Purchaser's Name/Please Print Clearly _____ | Hull # _____     |
| Mailing Address of Purchaser _____          | Dealer _____     |
| City State Zip _____                        | _____            |
| (Area Code) _____                           | Date _____       |
| Telephone Number _____                      |                  |

## **WARRANTY/REGISTRATION PROCEDURES**

### **Warranty Procedure**

All Beneteau boats carry a one year limited warranty, as well as an extended hull and deck structural warranty (see warranty form for details). As the first owner of your new Beneteau, your warranty only becomes valid upon receipt, by Beneteau, of the completed and signed warranty form. It is important that you were presented with this document at the time of your contract with your dealer and that both you and your dealer have signed this form. Your warranty will then take effect upon final delivery to you of your new Beneteau.

### **Registration Procedure**

As a new Beneteau owner you will automatically become a member of Club Beneteau. Club Beneteau will entitle you to many added benefits and advantages as well as providing you with a valuable line of communication with Beneteau. We will forward a new owner's package directly to 30 day after receipt of the completed and signed warranty form from your dealer.

Subsequent owners of Beneteaus are invited to become a member of Club Beneteau as well. We will automatically enroll these boat owners upon receipt of their warranty transfer cards.

In the event that you change your address, please fill out and mail in the change of address card at the back of the manual (to the address below) so that you will not miss any of Club Beneteau's opportunities. You can also find a change of address form on line under CLUB BENETEAU at [www.beneteauusa.com](http://www.beneteauusa.com).

If you have any questions concerning this procedure please feel free to contact Beneteau Customer Service at (843) 805-5000.

### **Warranty Transfer**

Your new Beneteau has a transferable, limited hull and deck warranty. In the event of selling your Beneteau, the new owner must be registered with Beneteau within 30 days of the date of sale for the warranty to be transferred.

Please fill in the appropriate warranty registration card at the back of this owner's manual and mail it to:

Beneteau USA Inc.  
24 North Market Street  
Suite 201  
Charleston, SC 29401

## **IV) HULL IDENTIFICATION NUMBERS**

The hull identification or "BEY" number is a unique number given to your Beneteau alone. This number begins with "BEY" which has been assigned to Beneteau by the USCG followed by an alpha-numeric code which details the model, serial no., month of construction, year of construction and model year.

**Please clearly identify your boat using your model and "BEY" number during any correspondence with Beneteau.**

Your boat identification number appears in two places:

The main hull identification number is located on the aft starboard side, near the transom, stamped into the hull, approximately 3 inches below the toerail.

The second hull identification number is in a hidden area for anti-theft purposes.

## **V) DEALER'S RESPONSIBILITIES**

Your Beneteau Dealer is part of a worldwide distribution network, with dealers in 28 countries. As a Beneteau Dealer, he has certain obligations to you as our customer and to Beneteau as our representative. A Dealer's responsibility does not end with the sale of your boat. Your Dealer is responsible for the following:

- Deliver your new Beneteau to you complete as ordered in your purchase agreement.
- Preparation of your boat for commissioning by their personnel, another yard or by providing you with the correct commissioning procedures.
- Checking of all systems on the boat for fit, proper function and to familiarize you with the usage of each system.
- Sea trial of your new Beneteau with you as a final verification that all systems are in good order.
- Providing customer support and parts after you take delivery and any warranty service under the terms of the limited warranty. All warranty questions/claims or processing should be directed through your dealer.

## **VI) OWNER'S/OPERATOR'S RESPONSIBILITIES**

### **STATE REGISTRATION OR FEDERAL DOCUMENTATION**

For State Registration please consult your Dealer or the State Marine Police, who can provide the correct governmental department handling registration in your state.

### **SAFETY AND MAINTENANCE**

For maximum enjoyment of your Beneteau, due respect should be given to proper safety and maintenance procedures.

Be sure that your boat is operated according to the U.S. Coast Guard Regulations as outlined in the "Federal Requirements for Recreational Boats". Please familiarize yourself with all operating requirements.

Prepare yourself for any situation before going out on the water. Follow the instructions provided in the sections of this owner's manual, the individual supplier instruction manuals, and all applicable U.S. Coast Guard and other regulations. If you are not an experienced sailor, you should complete an accredited sailing course.

Before leaving the dock, be sure that all your equipment is in working order, that you are aware of the weather conditions, and someone ashore is familiar with your destination or sailing activities.

### **MANDATORY COAST GUARD SAFETY EQUIPMENT**

Many safety items are required for compliance with the U.S. Coast Guard regulations. Note that these regulations are subject to change. It is the owner's responsibility to be aware of current regulations as outlined in the "Federal Requirements for Recreational Boats". For your convenience a copy is included with your yacht's documentation, and additional copies may be obtained by calling the U.S. Coast Guard Boating Safety Hotline at (800) 368-5647.

Good safety equipment should be a priority of every sailor for the protection and comfort of passengers. Passengers aboard should be made familiar with the safety equipment and operation of the boat in the event of an emergency.

Depending on the length, passenger capacity, and operating conditions, your boat must be equipped according to the current USCG requirements. Be sure that you operate your boat with the necessary number of life preservers, fire extinguishers, signaling devices, distress signals, navigation lights as referred to in the "Federal Requirements for Recreational Boats."



## RECOMMENDED SAFETY EQUIPMENT

Preparation is the key to safety on the water.

Your new Beneteau has been fitted with the following equipment:

- Compass - be sure that it is properly calibrated to give the correct magnetic reading.
- A large capacity bilge pump.

**We recommend that you fully outfit your Beneteau with safety equipment that can be obtained through your dealer or marine supply outlets. These items should include but not be limited to:**

- Up to date nautical charts covering your intended cruising area.
- Boat hook.
- Large waterproof flashlight with spare batteries.
- Fenders.
- Docking lines - a good rule of thumb to follow dictates that your bow, stern, and spring line be equal to the length of the boat.
- Life jackets, anchor, anchor chain and line, throwing line, flares, soft wooden plugs for thru-hulls, life ring, fire extinguisher, and foghorn.
- Electronics - Depth Sounder, Log Speedometer, and VHF Radio.

## SAFETY COURSES

It is recommended that owners and operators gain knowledge and experience in boat safety skills such as:

- (a) Navigation
- (b) Seamanship and boat handling
- (c) Rules of the road, international and inland waterway
- (d) Weather prediction
- (e) Safety at sea
- (f) Survival in bad weather
- (g) Respect for others on the water
- (h) First aid
- (i) Radio communication
- (j) Distress signals
- (k) Pollution controls

To find out where one can attend these courses in your area, please call your dealer or "The Boaters Educational Course Line" at (800) 336-2628.

## **ANCHORING**

Various sea and bottom conditions require different anchoring systems. Your dealer can help in choosing rode size and length, anchor chains, and working and storm anchors most appropriate for your boat and location.

In general, a minimum of two anchors should be carried at all times and enough anchor rode and chain necessary for the depth of water to be navigated during storm conditions.

Certain anchors are useful for a variety of bottom conditions. Study the charts of the area to be navigated for information concerning bottom conditions and water depth.

The greatest hazard with a sound permanent mooring is the chafe, which can occur to the rode at the bow chocks. This is the single most common site of failure. Care is advised in the selection and protection of the rode pennant with appropriate chafing gear. Careful and regular inspection of moored boats on a regular basis is necessary to ensure the boat's safety.

## **ADDITIONAL SAFETY EQUIPMENT**

A number of additional safety items are worthy of your consideration. These range from safety harnesses to emergency beacons, life rafts, and survival suits. Their use depends upon the intended use of the yacht. We suggest you investigate the necessity of these items through discussion with your dealer or local chandler.

## **MEDICAL KIT**

Every yacht should carry a first aid manual, and a medical kit tailored to the specific needs of the owner. Any ship's store should carry a standard type medical kit. Items in the kit should include but not be limited to the following:

- |                                  |  |
|----------------------------------|--|
| • Aspirin                        | • Motion sickness pills                  |
| • Adhesive strips and tape       | • Ammonia inhalants                      |
| • Antiseptic wipes               | • Antiseptic germicide ointment          |
| • Gauze bandages                 | • Zinc oxide ointment                    |
| • Sunscreen first aid/burn cream | • Insect/bee sting relief ointment/spray |
| • Sterile pads                   | • Cold packs for sprains                 |
| • Ace bandages & splints         | • Scissors & tweezers                    |

## TOOL KIT

A basic kit should consist of:

- Wrenches - adjustable, Metric and SAE open end, box, socket
- Hammers - large and small
- Knife - with marlinespike
- Screwdrivers - large and small, standard and Phillips
- Pliers - regular, cutting and needle nose, vise grips
- Wire cutter - capable of cutting standing rigging
- Hacksaw - with spare blades

## SPARE PARTS

A basic kit should consist of the following:

- Standing and Running Rigging: Turnbuckles, monel seizing wire, clevis and cotter pins, shackles, blocks, extra line, rigging tape, duct tape.
- Fasteners: Assortment of stainless steel screws, nuts, bolts, and washers
- Hose clamps.
- Electrical: Electrical tape, wire, crimps on lugs, spare navigation light bulbs.
- Lubricating supplies: WD-40 and silicone grease.
- Engine: Check engine manual for spare parts, engine oil and transmission fluid recommendations.
- Sails: Sail repair kit and sail slides.

## VII) SAFE OPERATION AND WARNING LABELS

Ensure that the boat operator is not under the influence of drugs and/or alcohol.


Do not venture out in weather or sea conditions beyond the skill or experience of the operator.

There are "Warning" and "Caution" statements affixed to your Beneteau. These are detailed below with location:

### FUEL WARNING LABEL

- Affixed to the fuel tank.


Beneteau Part #00001027

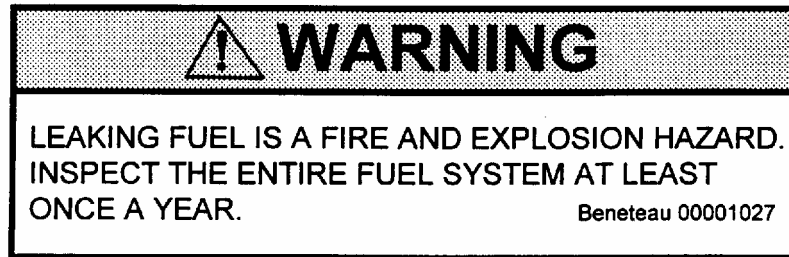

### SHORE-POWER LABEL

- At the 110V distribution panel.


Beneteau Part #00001028

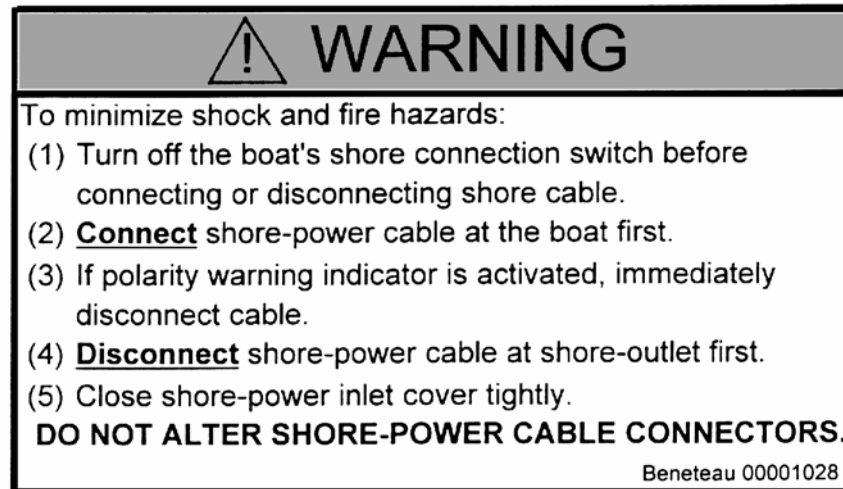

## PROPANE LABELS

- At the propane stove affixed to the bulkhead in the galley

Beneteau Part #00001021


|  |                |
|--|----------------|
|   | <b>CAUTION</b> |
| <p>(1) <b>THIS APPLIANCE IS DESIGNED FOR USE WITH LIQUEFIED PETROLEUM GAS (LPG) ONLY. DO NOT CONNECT COMPRESSED NATURAL GAS (CNG) TO THIS SYSTEM.</b></p> <p>(2) Keep cylinder valve(s) and solenoid valve(s) closed when boat is unattended. Close them immediately in any emergency. When on board, cylinder valve(s) or solenoid valve(s) shall be closed when appliances are not in use. Keep empty cylinder valves tightly closed.</p> <p>(3) Close appliance valve(s) before opening cylinder valve(s).</p> <p>(4) Test LPG system as recommended in sign posted in vicinity of LPG cylinder.</p> <p>(5) Apply ignition source to burner before opening appliance valve.</p> <p><b>NEVER USE FLAME TO TEST FOR LEAKS.</b></p> <p>Beneteau 00001021</p> |                |

Beneteau Part #00001026

|  |                |
|--|----------------|
|   | <b>WARNING</b> |
| <p><b>OPEN FLAME COOKING APPLIANCES<br/>CONSUME OXYGEN<br/>THIS CAN CAUSE ASPHYXIATION OR DEATH<br/>MAINTAIN OPEN VENTILATION<br/>DO NOT USE THIS APPLIANCE FOR COMFORT<br/>HEATING</b></p> <p>Beneteau 00001026</p> |                |


- In the propane locker affixed under the propane locker lid

Beneteau Part #00001024

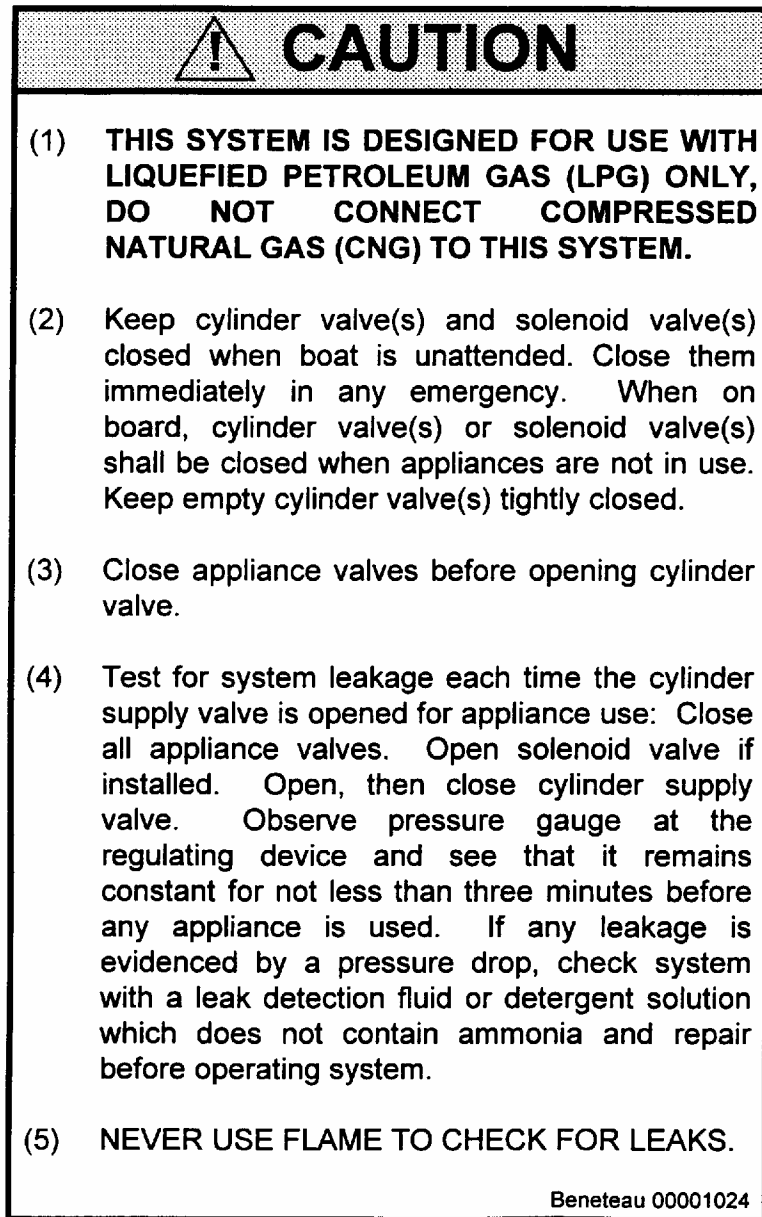

- On or next to the LP Gas Line


Beneteau Part #00001030

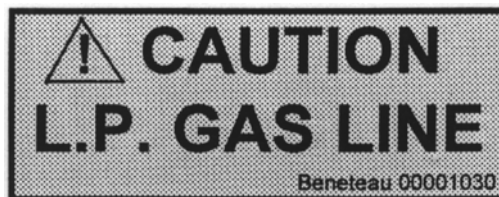

## SWIM LADDER WARNING LABEL

- Located on the transom


Beneteau Part # 00001022

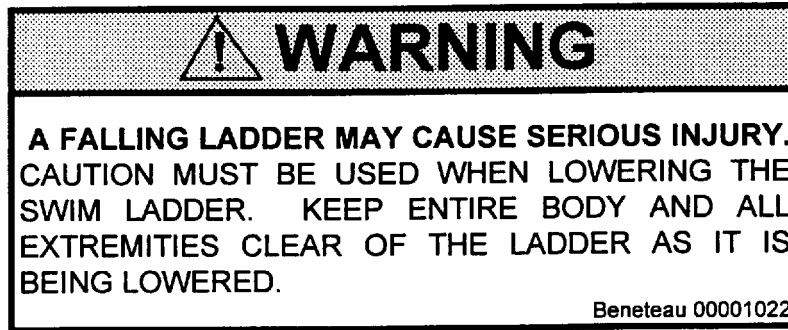

## HIGH VOLTAGE WARNING LABEL

- Located beside the 110v electric panel.

Beneteau Part #00001034

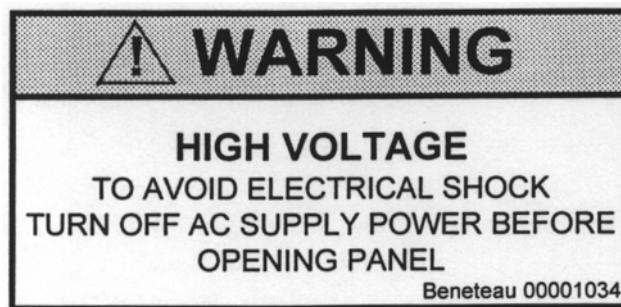

## TRANSOM DOOR WARNING LABEL


- Located on or next to the helmsman's seat. (Not applicable on all models)

Beneteau Part #00001031




### STANDARD BATTERY SWITCH LABEL

- Located at the standard battery switches.  
Beneteau Part #00001032

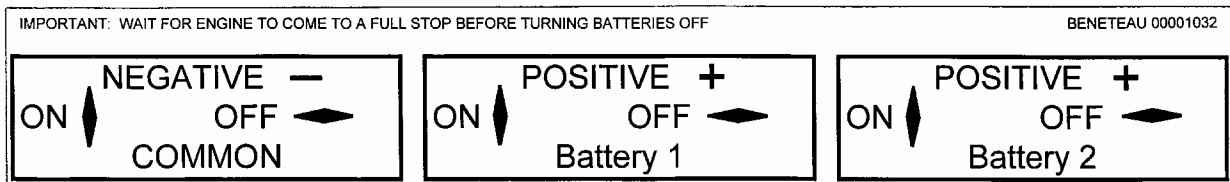


### OPTIONAL BATTERY SWITCH LABEL

- Located at the optional battery switches  
Beneteau Part #00001023

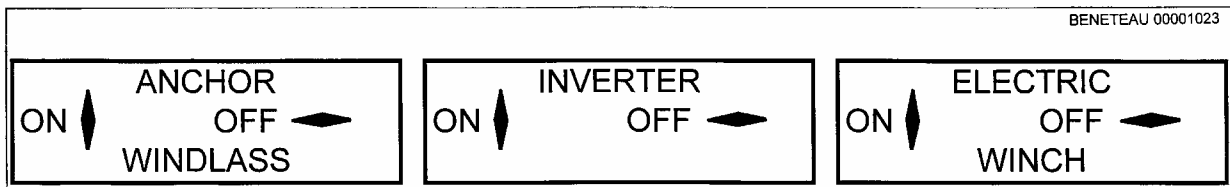


### SLING LOCATION ARROWS LABEL

- Located at or near the hull to deck joint  
Beneteau Part #00001033

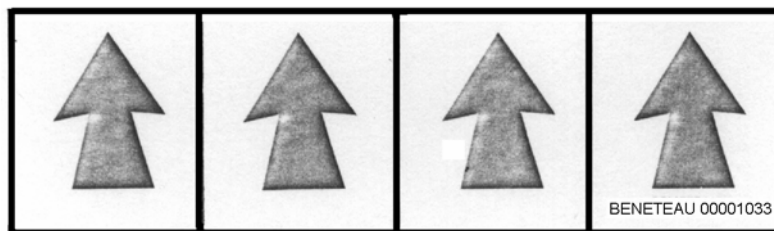

### ANTI FREEZE CAUTION TAG

- Tied to the breaker for the water  
Beneteau Part #00001038

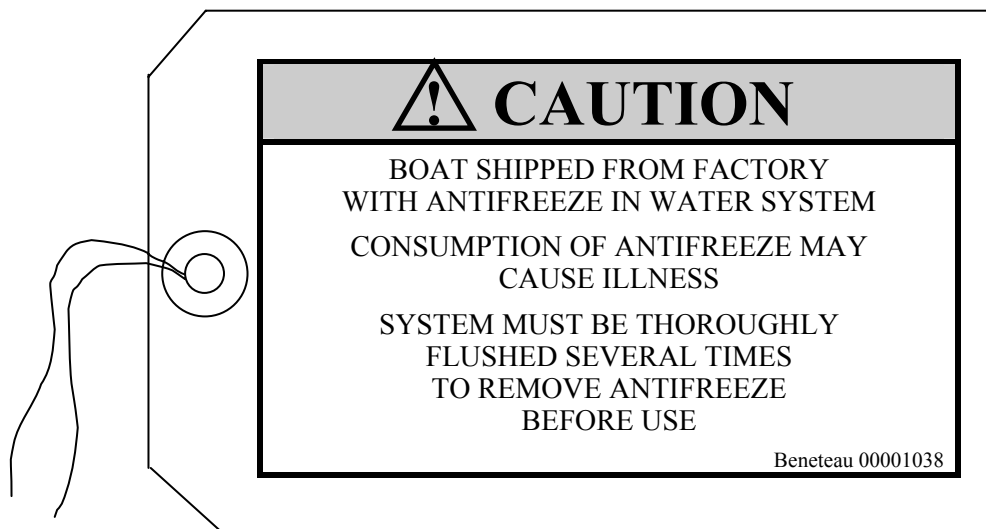



## **VIII) FEDERAL/STATE REGULATIONS**

### **DISCHARGE OF OIL**

- Located: under the sail locker lid.

Beneteau Part #00001007

## **DISCHARGE OF OIL PROHIBITED**

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters of the United States or waters of the contiguous zone if such discharge causes a film or sheen upon, or discoloration of, the surface of the water, or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty of \$5,000.


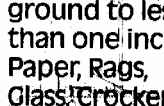


**BENETEAU**

0000 1007

## SOLID WASTE DISPOSAL

- Located under the sail locker lid.

Beneteau Part #00001025

|   |  |  |  |
|---|--|--|--|
| <p>It is illegal for any vessel to dump plastic trash <b>anywhere</b> in the ocean or navigable waters of the United States. Annex V of the MARPOL TREATY is an International</p>   |  | <p>Law for a cleaner, safer marine environment. Violation of these requirements may result in civil penalty up to \$25,000, fine and imprisonment.</p>   |  |
| <p><b>3 Miles from Shore</b></p> <p>U.S. Lakes, Rivers, Bays and Sounds<br/><b>ILLEGAL TO DUMP</b><br/>Plastic &amp; Garbage, Paper, Rags, Glass, Food, Metal, Crockery, Dunnage.</p>  | <p><b>3-12 Miles from Shore</b></p> <p><b>ILLEGAL TO DUMP</b><br/>Plastic, Dunnage, lining &amp; packing materials that float, also if not ground to less than one inch; Paper, Rags, Glass, Crockery, Metal, Food</p>  | <p><b>12-25 Miles from Shore</b></p> <p><b>ILLEGAL TO DUMP</b><br/>Plastic, Dunnage, lining &amp; packing materials that float</p>  | <p><b>Outside 25 Miles</b></p> <p><b>ILLEGAL TO DUMP</b><br/>Plastic</p>  |
| <p>State and local regulations may further restrict the disposal of garbage.</p>  |  |  | <p><b>BENETEAU</b><br/>00001025</p>  |

## MARINE SANITATION

Your Beneteau is equipped with an USCG approved marine head and holding tank.

**By law you must use a holding tank in all U.S. waters, Check with local authorities for regional laws governing your area before selecting the overboard discharge option.**

## **ACCIDENT REPORTING**

Knowledge of accident reporting requirements. Please refer to the following list for a copy of the U.S. Coast Guard Boating Accident form. For further information on where to obtain more forms, please call the U.S. Coast Guard Boating Safety Hotline at (800) 368-5647

NATIONAL VESSEL DOCUMENTATION CENTER  
2039 STONEWALL JACKSON DR.  
FALLING WATERS, WV 25419  
TOLL FREE: 1-800-799-8362  
PHONE: (304) 271-2400  
FAX: (304) 271-2405

## **RENDERING ASSISTANCE**

United States Code, Title 46:

"The owner or operator of a vessel is required by law to render assistance to any individual or vessel in distress, so long as his vessel is not endangered in the process."

## **IX) COMMISSIONING**

### **COMMISSIONING PROCEDURES**

The first commissioning of a yacht is essentially the start of its life, and the importance of proper commissioning procedures at this time cannot be overstated. The first commissioning procedure must be performed by Beneteau dealer personnel or those authorized by them. The dealer will also have a commissioning checklist to be signed by the owner and a dealer representative at the time of the first commissioning. The owner also needs to concern himself with items such as safety equipment, which is considered to be his responsibility. See the Owner's Operator's Responsibilities section for details.

Lists of the pre-launch and post-launch checks employed during commissioning are provided in this section for those owners interested in understanding the decommissioning procedure, as well as for future use in any recommissionings that may be required after periods of wet or dry storage. The lists are of a general nature and do not attempt to provide step-by-step instructions.

**The following is a list of minimum commissioning duties. Additional operations may be required dependent upon the model & equipment**

#### **PRIOR TO LAUNCH**

- \_\_\_\_\_ All accessories & options supplied per shipping list and boat order
- \_\_\_\_\_ Check hull and repair any shipping damage - aft end of keel, rudder, etc.
- \_\_\_\_\_ Prep bottom and apply bottom paint if needed.
- \_\_\_\_\_ Thru hulls inspected and closed.
- \_\_\_\_\_ Clean hull thoroughly.
- \_\_\_\_\_ Check clamps on all thru hulls below waterline.
- \_\_\_\_\_ Wax hull topsides.
- \_\_\_\_\_ Dock lines and fenders should be supplied by owner and aboard.
- \_\_\_\_\_ Check tightness of nuts on prop shaft and zinc. (Folding props require additional steps).
- \_\_\_\_\_ Check steering system (rudder moving freely stop to stop and does not touch hull?).  
(Hydraulic steering requires all fittings be checked and the system is bled)
- \_\_\_\_\_ Zincs installed.
- \_\_\_\_\_ Thru hulls unobstructed and speed/log impeller in place (if applicable).
- \_\_\_\_\_ Fuel valve turned ON.
- \_\_\_\_\_ Check keel bolts for tightness.

## OPERATIONS AFTER LAUNCH

- \_\_\_\_\_ No water leaks, stuffing box, shaft log, strut, rudder post.
- \_\_\_\_\_ No leaks at thru hulls; all hose clamps secure with seacocks open.
- \_\_\_\_\_ Fill water tanks, no leaks at fill pipes, overflows or connections.
- \_\_\_\_\_ Fill fuel tank.
- \_\_\_\_\_ Batteries secured, connected, filled and charged.
- \_\_\_\_\_ Check all cabin lights.
- \_\_\_\_\_ Check all navigation lights.
- \_\_\_\_\_ Water pressure system - air bled, no leaks at connections.
- \_\_\_\_\_ Check electric sump pumps and bilge pump.
- \_\_\_\_\_ Check manual bilge pump
- \_\_\_\_\_ Check emergency tiller fit.
- \_\_\_\_\_ 110V shore power polarity ok and breakers on
- \_\_\_\_\_ Battery charger ok.
- \_\_\_\_\_ Hot water heater works-must be filled before turning on.
- \_\_\_\_\_ Check head operation and holding tank for leaks.
- \_\_\_\_\_ Test wash down pumps, refrigeration, heaters, etc.
- \_\_\_\_\_ Test stove and LPG tank for leaks and proper operation
- \_\_\_\_\_ **DO NOT TEST FOR LEAKS WITH AN OPEN FLAME, WIPE EACH JOINT WITH A SOAPY SOLUTION AND LOOK FOR BUBBLES**

## ENGINE START-UP

- \_\_\_\_\_ Check transmission for proper fluid and proper level.
- \_\_\_\_\_ Check crankcase dipstick for proper fluid and proper level.
- \_\_\_\_\_ Check shift and throttle cables for proper adjustment and secure end fittings.
- \_\_\_\_\_ Engine alarms work when key is on.
- \_\_\_\_\_ Open engine water intake.
- \_\_\_\_\_ Start engine, check gauges and water flow at exhaust is normal.
- \_\_\_\_\_ Check water level in heat exchanger and expansion tank.
- \_\_\_\_\_ Check belts and mounts.
- \_\_\_\_\_ Run engine at operating temperature. Note temperature \_\_\_\_\_ degrees.
- \_\_\_\_\_ No engine or fuel line leaks-no chafe problems with wires.
- \_\_\_\_\_ Forward and reverse gears operate.
- \_\_\_\_\_ After warm-up, shut engine down, check oil, and fluid levels again.
- \_\_\_\_\_ Alignment to under .003 - coupling bolts tightened.
- \_\_\_\_\_ Idle set correctly , engine won't stall when put in gear.
- \_\_\_\_\_ Allow engine to run for at least (1) hour.
- \_\_\_\_\_ No leaks at the shaft seal.
- \_\_\_\_\_ Shift and throttle operate smoothly with engine running.
- \_\_\_\_\_ No leaks at keel bolts after engine run.

## **PRIOR TO STEPPING MAST**

- \_\_\_\_\_ Clean or wax spar.
- \_\_\_\_\_ Mast sheaves free running.
- \_\_\_\_\_ Run halyards if necessary– Make sure you have clean hands on clean ground.
- \_\_\_\_\_ Attach and secure all stays and shrouds.
- \_\_\_\_\_ Attach and secure spreaders to mast and upper shrouds.
- \_\_\_\_\_ Check boom gooseneck fitting.
- \_\_\_\_\_ Install mast boot on spar if applicable.
- \_\_\_\_\_ Check all mast lights.
- \_\_\_\_\_ Attach and secure boom topping lift.
- \_\_\_\_\_ Check running lights and electrical connections.
- \_\_\_\_\_ Protect against chafe on spreader ends and any fitting.
- \_\_\_\_\_ Check sail track for burrs.
- \_\_\_\_\_ Turnbuckles attached.
- \_\_\_\_\_ Re-check all pins, cotters, and Locktite any shackles.
- \_\_\_\_\_ Check with salesman and work order for additional mast gear.
- \_\_\_\_\_ Furling system built and connected to mast

## **AFTER STEPPING MAST**

- \_\_\_\_\_ Protect spar from scratching on mast collar on keel stepped masts.
- \_\_\_\_\_ Turnbuckles lubricated.
- \_\_\_\_\_ Attach standing rigging to chain plates.
- \_\_\_\_\_ Chock mast partner and seal mast boot on keel stepped masts.
- \_\_\_\_\_ All mast wiring connected.
- \_\_\_\_\_ Preliminary tune - spar straight - shrouds proper tension.
- \_\_\_\_\_ Run reefing lines and halyards.
- \_\_\_\_\_ All cotter pins in place on turnbuckles and opened.
- \_\_\_\_\_ Run main sheets and attach topping lift.
- \_\_\_\_\_ Tape chain plates and cotter pins to prevent chafe.
- \_\_\_\_\_ Check and double-check all turnbuckles, cotter and clevis pins.

## **PRIOR TO DELIVERY**

- \_\_\_\_\_ Hose test all ports, deck hardware, chain plates, and stanchion posts for leaks.
- \_\_\_\_\_ Tighten lifelines and tape split rings.
- \_\_\_\_\_ All doors, drawers, floorboards, hatches, and cabinets operate freely - fit if necessary.
- \_\_\_\_\_ Clean thoroughly: sinks, bulkheads and counter tops, all lockers and drawers, bilge, cushions, deck and cockpit lockers.
- \_\_\_\_\_ Dry the bilge completely.
- \_\_\_\_\_ Clean and oil exterior teak if needed.
- \_\_\_\_\_ Clean cabin sole, deck area and ports.
- \_\_\_\_\_ All Coast Guard and safety gear aboard.
- \_\_\_\_\_ Sails bent on, ALL HEADSAILS FIT FURLING.
- \_\_\_\_\_ All electronics and optional gear tested and working.

## **X) SPECIFICATIONS OF THE BOAT**

Type..... BENETEAU 393  
Name of Builder ..... BENETEAU USA INC.  
Design Category ..... A  
No. of acknowledged body ..... CE 0607

|                  |       |         |          |
|------------------|-------|---------|----------|
| Hull Length      |       | 11.62 m | 38.12 ft |
| Hull Beam        |       | 3.96 m  | 12.99 ft |
| Draft:           | Shoal | 1.55 m  | 5.08 ft  |
|                  | Deep  | 1.90m   | 6.23 ft  |
| Clearance Height |       | 15.65 m | 51.35 ft |

### FOR U.S. COAST GUARD DOCUMENTATION

The “*depth*” from the top of hull to the bottom of hull at the midship line is 1.8m (5.9 ft)

|                                   |       |       |
|-----------------------------------|-------|-------|
| Maximum Authorized Engine Power : | 50 kW | 67 hp |
|-----------------------------------|-------|-------|

|                      |                             |
|----------------------|-----------------------------|
| Fuel Capacity        | 135 L (35 US gal)           |
| Fresh Water Capacity | 500 L (132 US gal)          |
| Battery Capacity     | 100A engine      200A house |

### DESIGN CATEGORIES

Category A: OCEAN – Designed for extended voyages where conditions may exceed wind force 8 (Beaufort scale) and significant wave heights of 4 m and above, and vessels largely self sufficient

Category B: OFFSHORE – Designed for offshore voyages where conditions up to, and including, wind force 8 and significant wave heights up to, and including, 4 m may be experienced.

Category C: INSHORE – Designed for voyages in coastal waters, large bays, estuaries, lakes and rivers where conditions up to, and including, wind force 6 and significant wave heights up to, and including, 2 m may be experienced.

Category D: SHELTERED WATERS – Designed for voyages on small lakes, rivers, and canals where conditions up to, and including, wind force 4 and significant wave heights up to, and including, 0.5 m may be experienced.

| Category | Height of the Waves (ft) | Wind Force (Beaufort) |
|----------|--------------------------|-----------------------|
| A        | > 4 m (13.0 ft)          | > 8                   |
| B        | < 4 m (13.0 ft)          | ≤ 8                   |
| C        | < 2 m (6.5 ft)           | ≤ 6                   |
| D        | < .5 m (1.6 ft)          | ≤ 4                   |

For additional information concerning the standard equipment, please refer to the manuals enclosed with the boat.

Maximum recommended number of persons on board by design category:

| Category | Maximum Number of Persons |
|----------|---------------------------|
| A        | 8                         |
| B        | 10                        |
| C        | 12                        |
| D        | 12                        |

The C.E. Certified equipment includes: The fuel tanks, parts of the steering system, parts of the gas system and the hatches and portholes.

## **WEIGHT ESTIMATION**

| SAILING CATEGORIES                        | A                    | B                    | C                    | D                    |
|---|----------------------|----------------------|----------------------|----------------------|
|   | Kg (lbs)             | Kg (lbs)             | Kg (lbs)             | Kg (lbs)             |
| Light Boat :                              | 7650 (16,866)        | 7650 (16,866)        | 7650 (16,866)        | 7650 (16,866)        |
| Safety Equipment :                        | 100 (220)            | 100 (220)            | 100 (220)            | 100 (220)            |
| Sail :                                    | 30 (66)              | 30 (66)              | 30 (66)              | 30 (66)              |
| <b>Light Displacement :</b>               | <b>7780 (17,152)</b> | <b>7780 (17,152)</b> | <b>7780 (17,152)</b> | <b>7780 (17,152)</b> |
|   |                      |                      |                      |                      |
| Life Raft :                               | 80 (176)             | 80 (176)             | 80 (176)             | 80 (176)             |
| Crew :                                    | 600 (1,323)          | 750 (1,653)          | 900 (1,944)          | 900 (1,944)          |
| Water :                                   | 480 (1,058)          | 480 (1,058)          | 480 (1,058)          | 480 (1,058)          |
| Fuel :                                    | 112 (247)            | 112 (247)            | 112 (247)            | 112 (247)            |
| Personal Equipment :                      | 210 (463)            | 210 (463)            | 210 (463)            | 210 (463)            |
|   |                      |                      |                      |                      |
| <b>Optional Equipment</b>                 |                      |                      |                      |                      |
| Holding Tank :                            | 90 (199)             | 90 (199)             | 90 (199)             | 90 (199)             |
| Air Conditioning :                        | 80 (176)             | 80 (176)             | 80 (176)             | 80 (176)             |
| Teak Deck                                 | 140 (309)            | 140 (309)            | 140 (309)            | 140 (309)            |
| Auto Pilot Gear :                         | 20 (44)              | 20 (44)              | 20 (44)              | 20 (44)              |
| Mech. Refrigeration                       | 20 (44)              | 20 (44)              | 20 (44)              | 20 (44)              |
| Spinnaker Rigging :                       | 10 (22)              | 10 (22)              | 10 (22)              | 10 (22)              |
| Microwave Oven :                          | 5 (11)               | 5 (11)               | 5 (11)               | 5 (11)               |
| Roof Sprayhood :                          | 20 (44)              | 20 (44)              | 20 (44)              | 20 (44)              |
| Bimini Top :                              | 20 (44)              | 20 (44)              | 20 (44)              | 20 (44)              |
| Davits :                                  | 40 (88)              | 40 (88)              | 40 (88)              | 40 (88)              |
| <b>SUB TOTAL<br/>(Optional Equipment)</b> | <b>445 (981)</b>     | <b>445 (981)</b>     | <b>445 (981)</b>     | <b>445 (981)</b>     |
|   |                      |                      |                      |                      |
| <b>Margin for Other Equipment</b>         | <b>450 (992)</b>     | <b>300 (662)</b>     | <b>150 (331)</b>     | <b>150 (331)</b>     |

|  |                       |                       |                       |                       |
|--|-----------------------|-----------------------|-----------------------|-----------------------|
| <b>MAXIMUM LOAD DISPLACEMENT<br/>Kg (Lbs.)</b> | <b>10157 (22,392)</b> | <b>10157 (22,392)</b> | <b>10157 (22,392)</b> | <b>10157 (22,392)</b> |
|--|-----------------------|-----------------------|-----------------------|-----------------------|

|                                   |                     |                     |                     |                     |
|-----------------------------------|---------------------|---------------------|---------------------|---------------------|
| <b>MAXIMUM LOAD<br/>Kg (Lbs.)</b> | <b>2377 (5,240)</b> | <b>2377 (5,240)</b> | <b>2377 (5,240)</b> | <b>2377 (5,240)</b> |
|-----------------------------------|---------------------|---------------------|---------------------|---------------------|


|  |
|--|
| <b>MAXIMUM LOAD = MAXIMUM LOAD DISPLACEMENT – LIGHT BOAT</b> |
|--|

|   |
|---|
| ANY OVERLOADING CARRIES A RISK OF FLOODING OR LOSS OF STABILITY |
|---|




## **XI) INTERIOR LAYOUT**

2 Cabin 2 Toilet Version

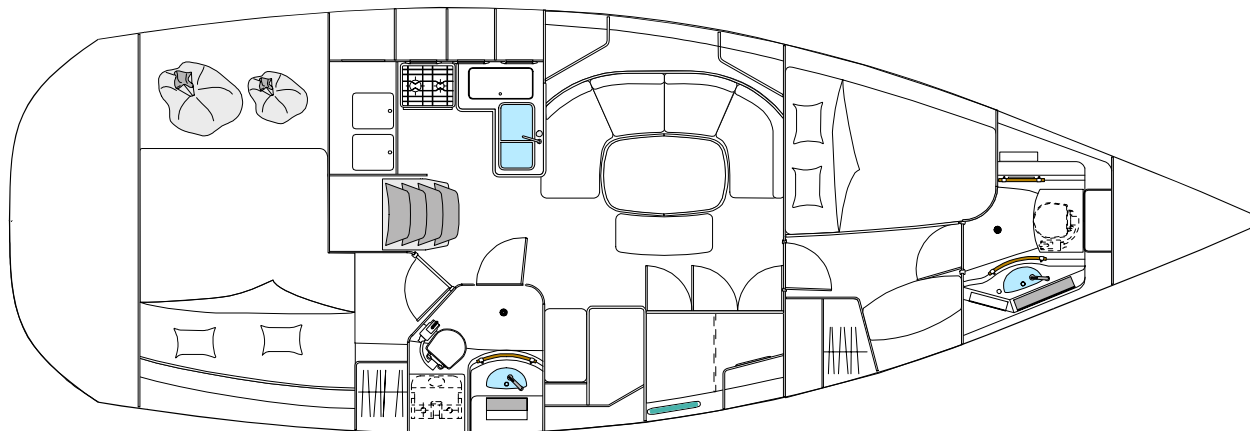

3 Cabin 2 Toilet Version

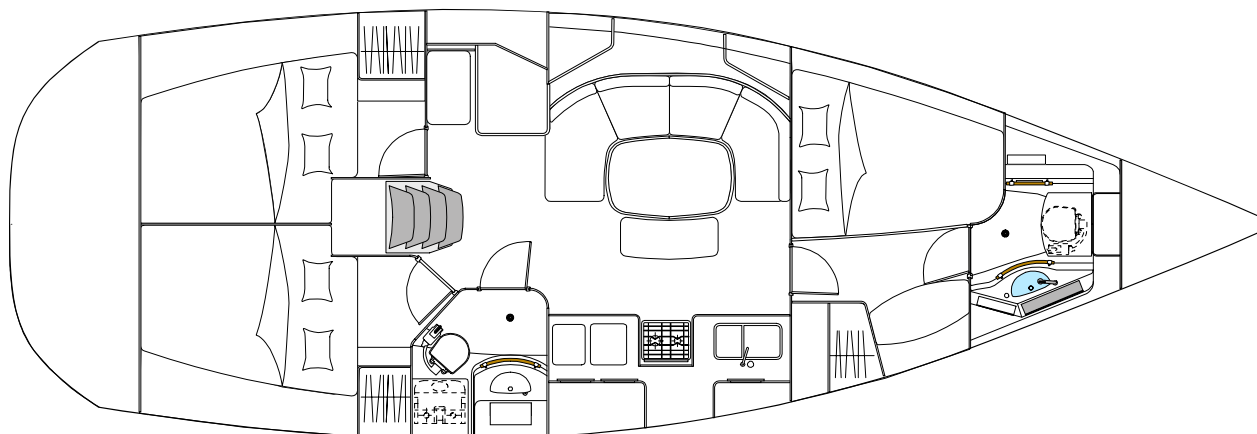



## EXIT IN CASE OF FIRE



= EMERGENCY EXIT



= RECOMMENDED FIRE EXTINGUISHER LOCATION

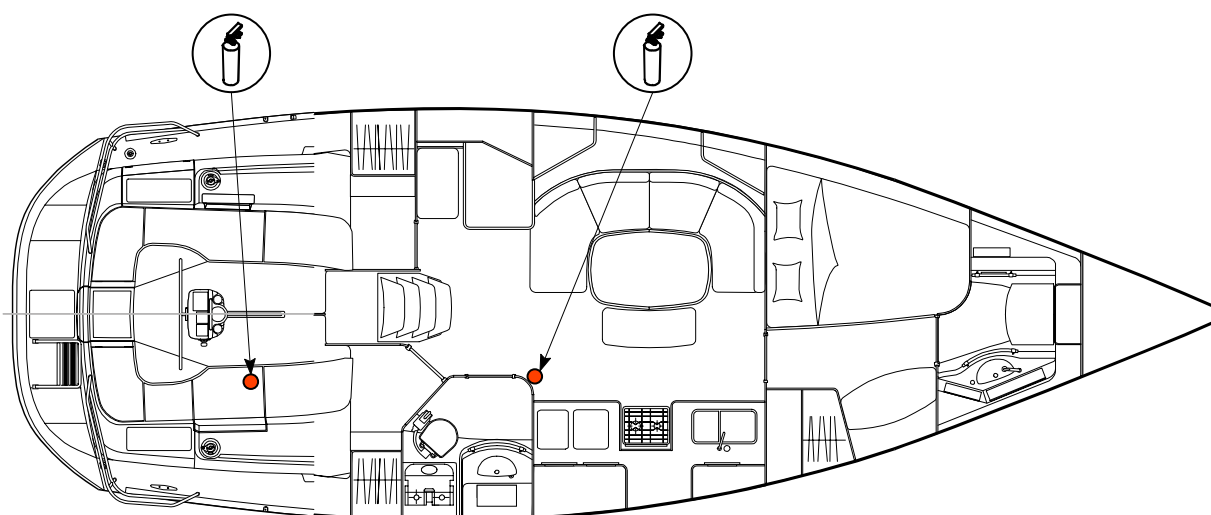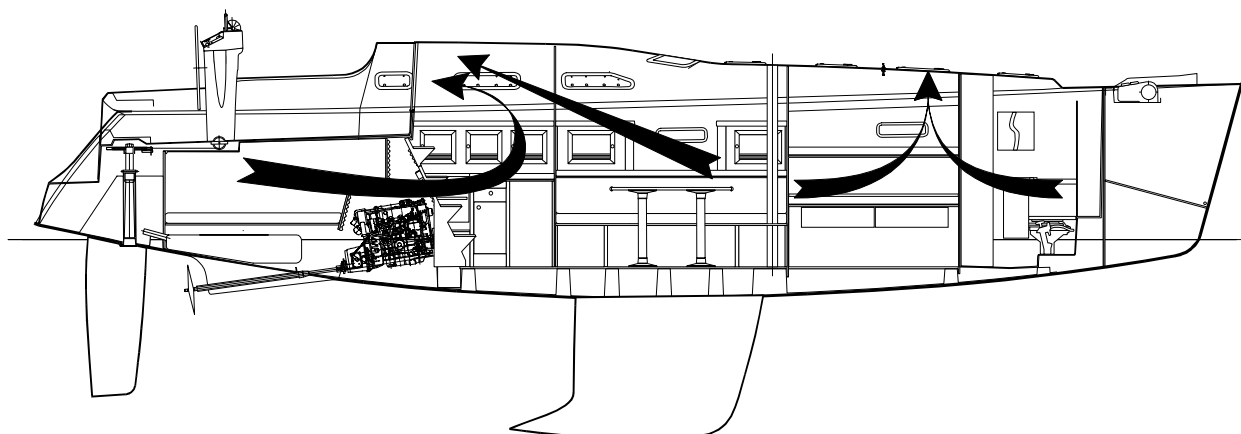

## **XII) DECK**

- Jack lines can be fastened either to the mooring cleats, or to pad eyes on deck.


**The Beneteau 393 is fitted with a foldaway swimming ladder. The swimming ladder should be in its folded/upright position as soon as you are on board.**

**Make sure that the hatches and portholes are closed before you put out to sea.**

**In case of rough sea, close the boat with the sliding hatch and weatherboards so that no water may come into the boat.**

**Check that nothing blocks up the cockpit drain holes; these holes should never be sealed.**

- 1 Recommended location of the life-raft
- 2 Fwd water tank deck fill
- 3 Fwd waste tank pump out deck plate
- 4 Aft water tank deck fill
- 5 Aft waste tank pump out deck plate
- 6 Fuel deck fill
- 7 Swim ladder

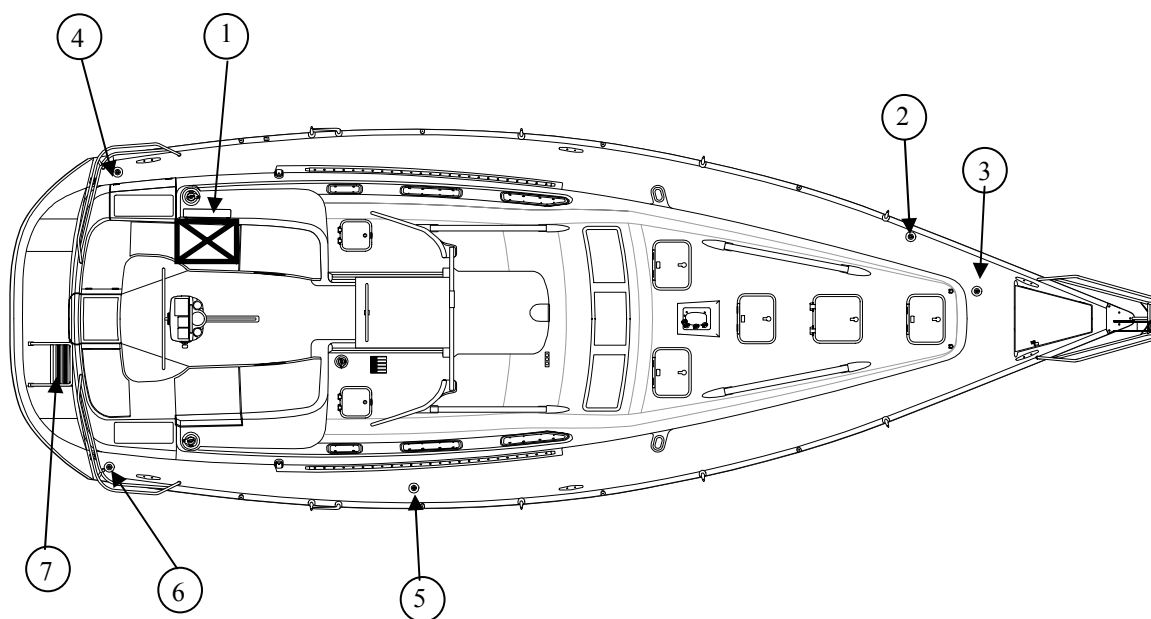

### **XIII) SAILS AND RIGGING**

#### Specifications of the Sails:


| SAIL         | AREA                 |                       |
|--------------|----------------------|-----------------------|
|              | Roller furling main  | Classic main          |
| Total        | 98.00 m <sup>2</sup> | 105.17 m <sup>2</sup> |
| Mainsail     | 35.15 m <sup>2</sup> | 42.32 m <sup>2</sup>  |
| Genoa (140%) | 62.85 m <sup>2</sup> | 62.85 m <sup>2</sup>  |


| Roller furling mast |       |   | Classic mast |       |   |
|---------------------|-------|---|--------------|-------|---|
| I                   | 14.05 | m | I            | 14.05 | m |
| J                   | 4.43  | m | J            | 4.43  | m |
| P                   | 12.20 | m | P            | 12.30 | m |
| E                   | 4.60  | m | E            | 4.60  | m |

 
#### Specifications of the Standing Rigging:


V: VERTICAL - D: DIAGONAL


| REF | CABLE                      | Dia. In. |
|-----|----------------------------|----------|
| 1   | V1 (Shroud)                | 3/8      |
| 2   | D1 AFT (Aft Lower Shroud ) | 5/16     |
| 3   | V2D3 (Upper Shroud)        | 5/16     |
| 4   | D2 (Inter)                 | 9/32     |
| 5   | Forestay                   | 5/16     |
| 6   | Baby Stay                  | 9/32     |
| 7   | Backstay                   | 9/32     |

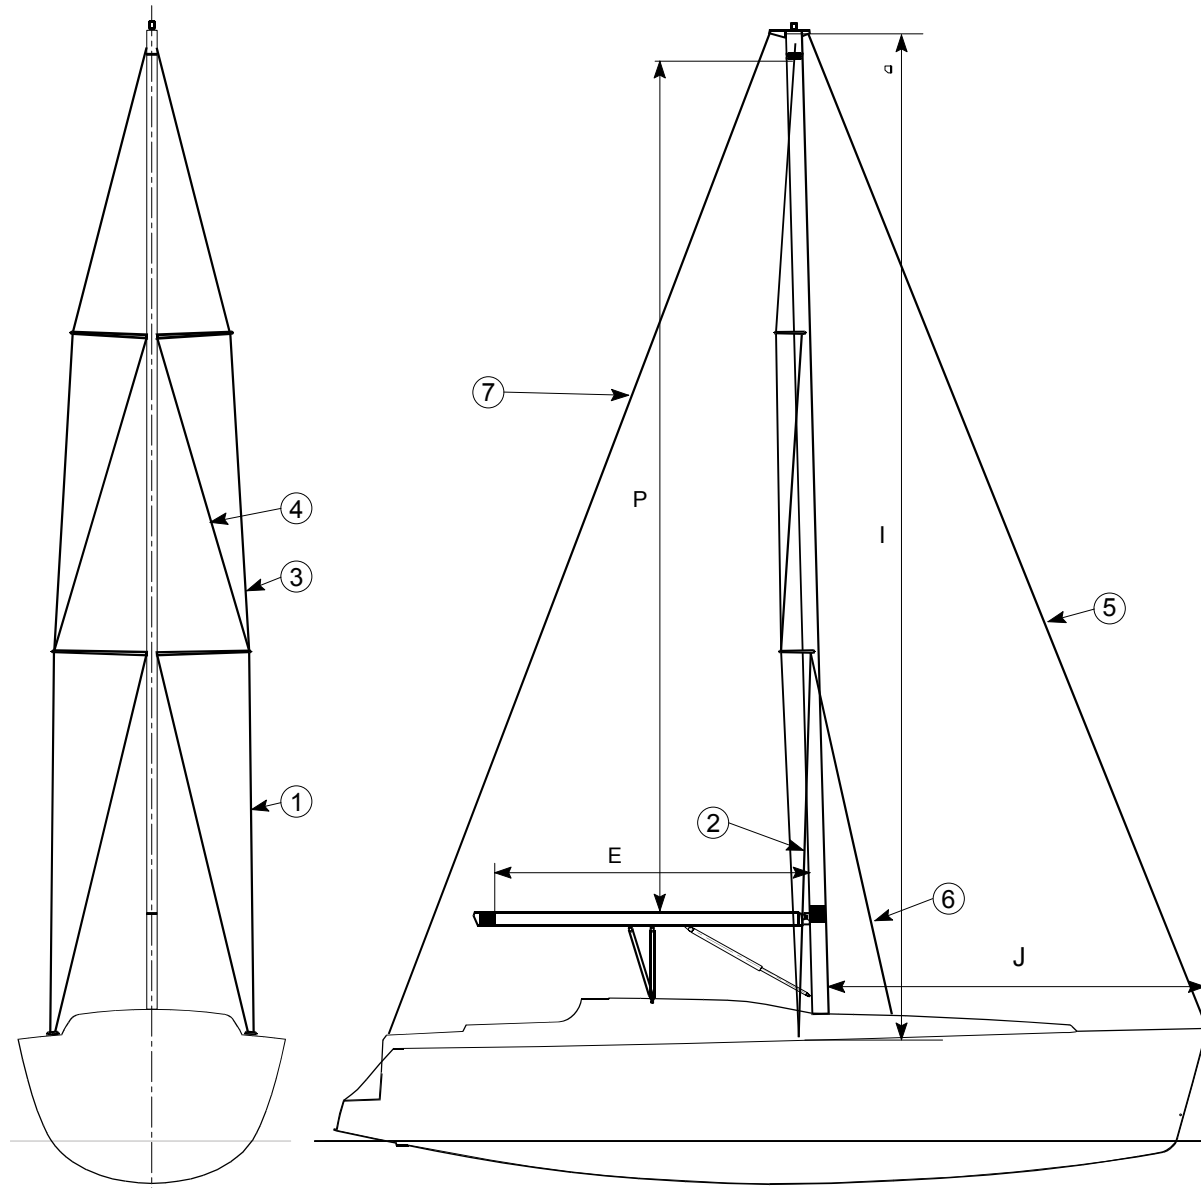

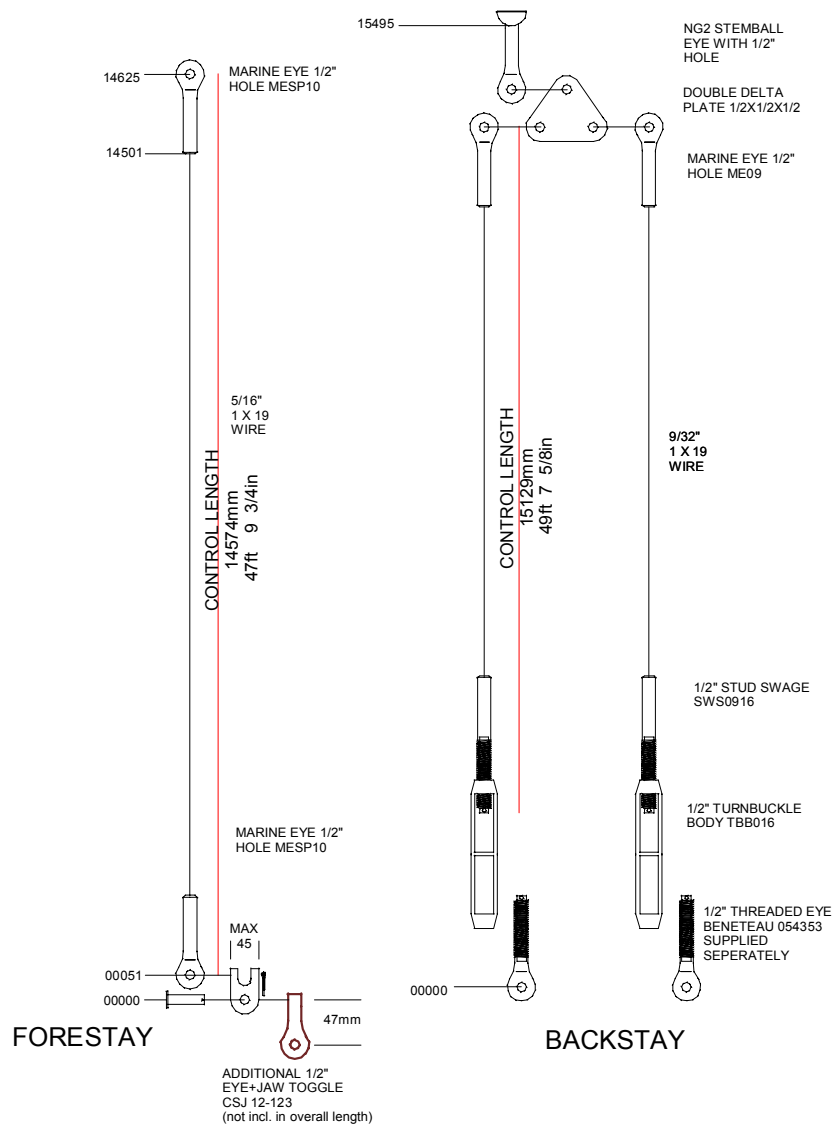

|   |                            |           |            |   |           |                    |   |
|---|----------------------------|-----------|------------|---|-----------|--------------------|---|
| Material:   |                            |           |            | Designation:                              |           | Visa:              |   |
| 1   | changed 8 digit to 6 digit | RD        | May 05, 03 | SCALE:                                    | TOL.GEN.: |                    |  |
|   |                            |           |            | STANDING RIGGING KIT O393<br>BOX1 (1 BOX) |           |                    |   |
|   |                            |           |            | Beneteau USA INC.<br>1313 HIGHWAY 76 WEST |           | Designed: 06/11/01 |   |
|   |                            |           |            | PO DRAWER 1218 MARION, SC 29571           |           | By: BADB           |   |
| Ind. Modification   |                            | Par Dates |            | Tel. (843) 423-4201 - Fax. (843) 423-4912 |           | Approved:          |   |
|   |                            |           |            |   |           | By:                |   |
|   |                            |           |            |   |           | Weight:            | Lb  |
|   |                            |           |            |   |           | N°:113123          |   |
| Ce document est notre propriété, il ne pourra être reproduit ou communiqué sans notre autorisation. |                            |           |            |   |           |                    |   |

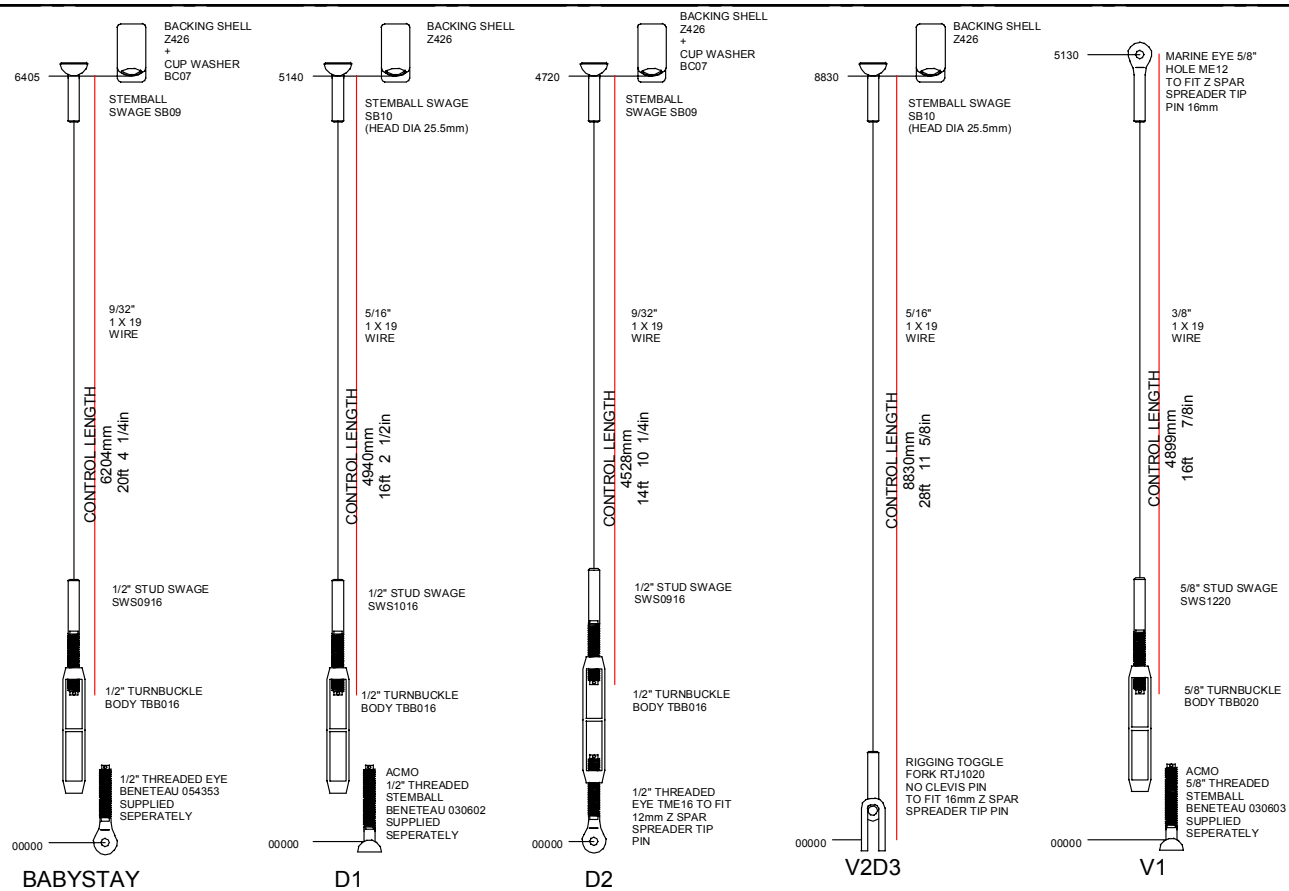
 
|   |              |     |       |   |           |  |   |
|---|--------------|-----|-------|---|-----------|--|---|
| Material:   |              |     |       | Designation:  |           | Visa:  |   |
|   |              |     |       | SCALE:  | TOL.GEN.: | Designed: 06/11/01<br>By: BADB<br>Approved:<br>By:<br>Weight: Lb |  |
|   |              |     |       | STANDING RIGGING KIT<br>O393 BOX 2 (2 BOXES)  |           |  |   |
|   |              |     |       | Beneteau USA INC.<br>1313 HIGHWAY 76 WEST<br>PO DRAWER 1218 MARION, SC 29571<br>Tel. (843) 423-4201 - Fax. (843) 423-4912 |           |  |   |
| Ind.  | Modification | Par | Dates |   |           | N°:08020179  |   |
| Ce document est notre propriete, il ne pourra etre reproduit ou communique sans notre autorisation. |              |     |       |   |           |  |   |

|                      |                     |
|----------------------|---------------------|
| MAKE                 | PROFURL             |
| MODEL                | B35S                |
| NUMBER OF EXTRUSIONS | 6 X 2M & 1 X 1814   |
| FORESTAY DIAMETER    | 5/16" 1X19 SS CABLE |

PLASTIC MULTI TOP  
HALYARD RESTAINER CAP

PLAY  
15mm

HALYARD SWIVEL WITH  
HALYARD SHACKLE  
8mm BOW

INTEGRAL FEEDER


NO PRE-FEEDER

ADJUSTABLE TACK SHACKLE  
ON TURNBUCKLE CYLINDER  
8mm BOW SHACKLE


24.38M x 8mm DACRON LINE :  
(80' x 5/16")

STAINLESS STEEL  
DRUM GUARD


PLASTIC SPLIT DRUM

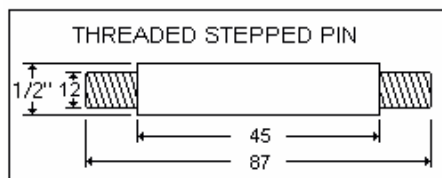

ABOVE THREADED STEPPED PIN  
ATTACHES SWAGED EYE TO THE  
DOUBLE JAW TOGGLE AND PROFURL  
LINK PLATES  
DOUBLE JAW TOGGLE SUPPLIED  
WITH FORESTAY

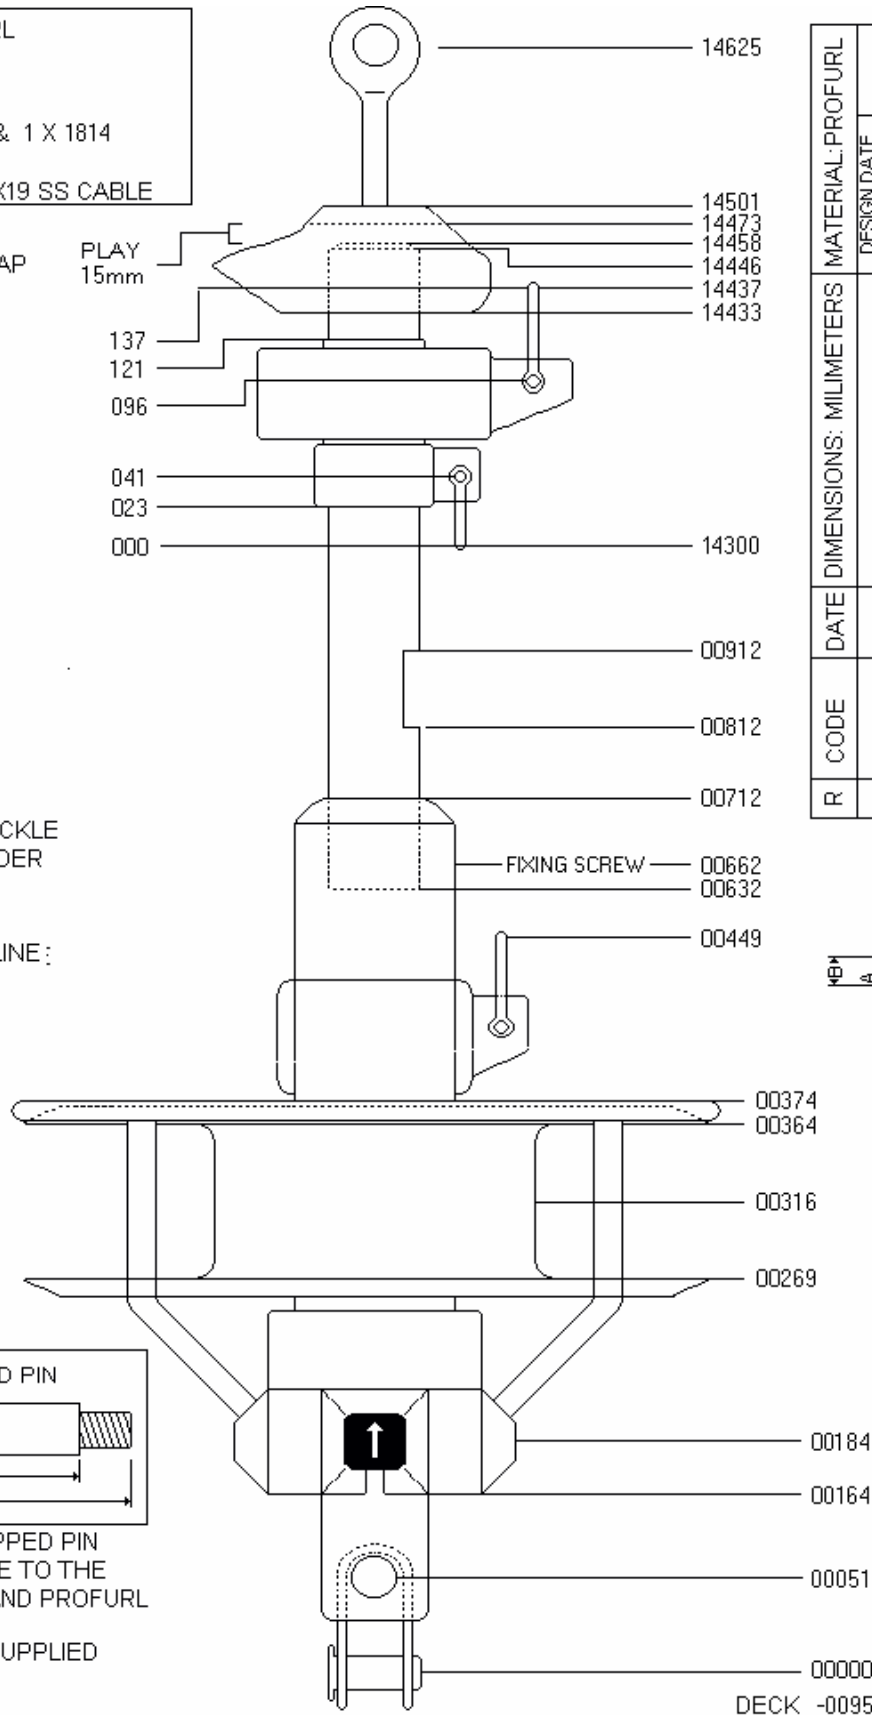

|                         |             |                |   |
|-------------------------|-------------|----------------|---|
| MATERIAL: PROFURL       | DESIGN DATE | VIEW           | ALSO SHOWN:<br>08029027 EXTRUSION KIT<br>PART NUMBER DRUM KIT<br>08029026 |
|                         | 3-8-01      | BY:MSR         |   |
| DIMENSIONS: MILLIMETERS | SCALE: NONE | GEN. TOL. NONE | PROFURL BASIC<br>GENOA RF SYSTEM<br>O393                                  |
|                         | DATE        | 3-8-01         |   |
| CODE                    | PROTOTYPE   |                |   |
| R                       | 0           |                |   |

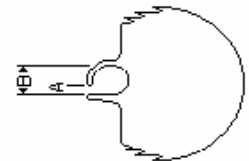

|              |            |
|--------------|------------|
| B            | 5.8        |
| A            | 2.6        |
| DIMENSION mm | LUFF GROVE |

## Headsail Specification and Technical Worksheet

|                    |                                 |                 |      |                   |       |                        |
|--------------------|---------------------------------|-----------------|------|-------------------|-------|------------------------|
| <b>Model Type:</b> | <i>Beneteau Oceanis 393 USA</i> |                 |      |                   |       |                        |
| <b>Sail Type:</b>  | <i>Roller Furling Genoa</i>     |                 |      |                   |       |                        |
| <b>"I" Dim:</b>    | 14050                           | <b>"J" Dim:</b> | 4430 | <b>Max Hoist:</b> | 13850 | <b>Area:</b> 11.25sqmt |

### Finished Dimensions

|              |       |               |       |              |      |              |             |
|--------------|-------|---------------|-------|--------------|------|--------------|-------------|
| <b>Luff:</b> | 13700 | <b>Leech:</b> | 12936 | <b>Foot:</b> | 6547 | <b>L.P.:</b> | 6202 / 140% |
|--------------|-------|---------------|-------|--------------|------|--------------|-------------|

### Finish Details

|                       |                                    |                               |                            |
|-----------------------|------------------------------------|-------------------------------|----------------------------|
| <b>Material Type:</b> | 6.9 SuperCruise                    | <b>Tack Detail:</b>           | Double webbing Loop        |
| <b>Head Detail:</b>   | Double Webbing Loop                | <b>Clew Detail:</b>           | 50mm ext ring with Leather |
| <b>Foam Luff:</b>     | Multi track foam luff system™      | <b>Trim Stripe</b>            | 2 sets, 2 x 3/8" green     |
| <b>Tell Tale:</b>     | Yes, 3 sets                        | <b>T-tale Window:</b>         | 12" round                  |
| <b>Leech/foot:</b>    | 25 mm single fold tabling          | <b>Foil Tape:</b>             | NP#5                       |
| <b>Leech Cleat:</b>   | 241 Alum. Cleat with snubbing eyes | <b>Foot Cleat:</b>            | 2 #3 eyelets at tack       |
| <b>Bag Type:</b>      | Drawstring type "C"                | <b>Seam:</b>                  | V-92 blue 2 x 3step        |
| <b>U.V. Cover:</b>    | Yes, Starboard                     | <b>Cover Material/Colour:</b> | White U.V. Mark Cloth      |



**Furling System:** Profurl B35S

### Drawing Information

|                  |     |              |           |               |                   |
|------------------|-----|--------------|-----------|---------------|-------------------|
| <b>Drawn By:</b> | Bob | <b>Date:</b> | May- 2001 | <b>Rev #:</b> | 08081393-R000.DOC |
|------------------|-----|--------------|-----------|---------------|-------------------|


**Additional Notes:** 1<sup>st</sup> PRODUCTION SAIL

### Tack/Reefing Detail:

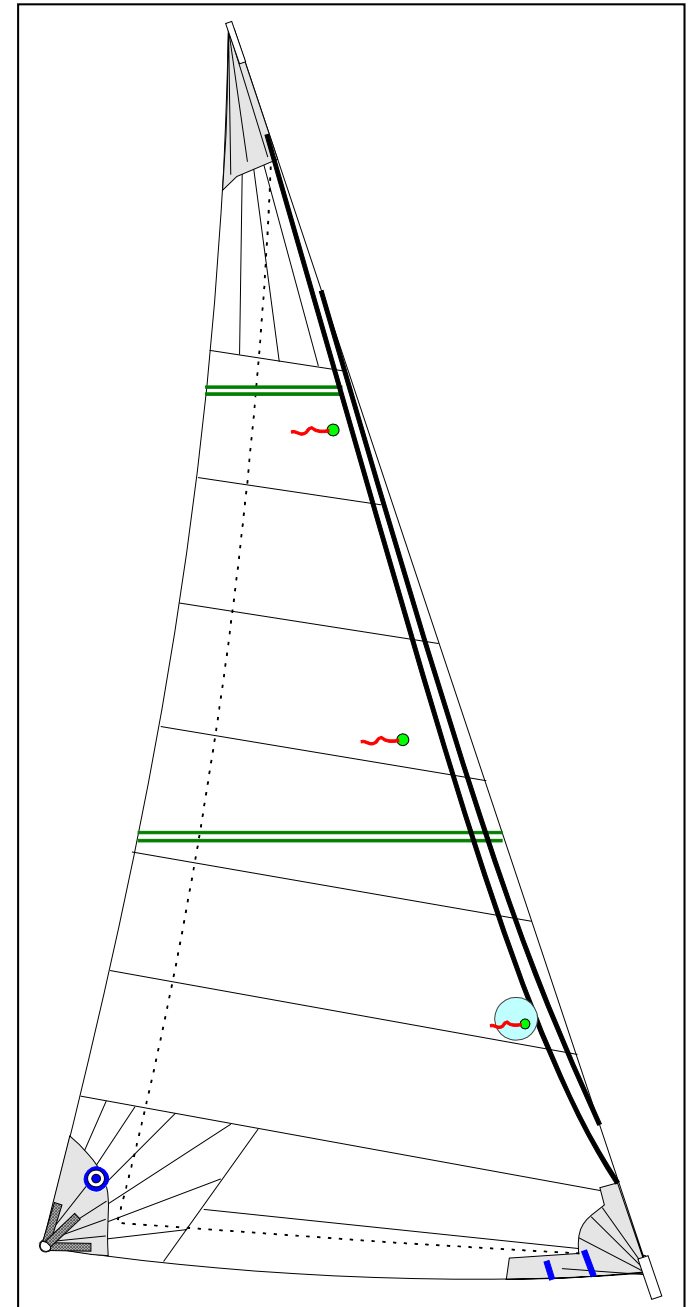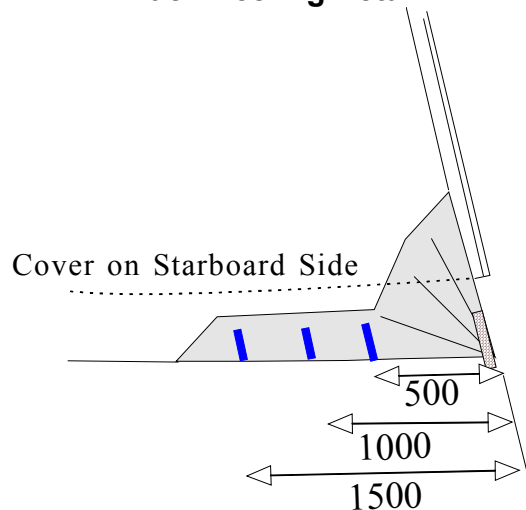





| Mainsail Specification and Technical Worksheet |   |                                 |                     |                               |  |                   |                   |
|--|---|---------------------------------|---------------------|-------------------------------|--|-------------------|-------------------|
| <b>Model Type:</b>                             |   | <b>Beneteau Oceanis 393 USA</b> |                     |                               |  |                   |                   |
| <b>Sail Type:</b>                              |   | <b>Roller Furling Mainsail</b>  |                     |                               |  |                   |                   |
| <b>"P" Dim:</b>                                | 12200   | <b>"E" Dim:</b>                 | 4600                | <b>Sailmaker "E"</b>          | 4550   | <b>Area:</b>      | 25.6sqmt          |
| Finished                                       |   |                                 |                     |                               |  |                   |                   |
| <b>Luff:</b>                                   | 12050   | <b>Leech:</b>                   | 12390               | <b>Foot:</b>                  | 4508   |                   |                   |
| Finish   |   |                                 |                     |                               |  |                   |                   |
| <b>Material Type:</b>                          | 8.03 Challenge  |                                 |                     | <b>Tack Detail:</b>           | Single ply 25mm webbing loop                 |                   |                   |
| <b>Head Detail:</b>                            | Single ply 25mm webbing loop  |                                 |                     | <b>Clew Slug/Car:</b>         | Z-spar 3259 Clew block                       |                   |                   |
| <b>Clew Detail:</b>                            | Pg 38 safety clew ring with webbing   |                                 |                     | <b>Insignia:</b>              | Yes, black                                   |                   |                   |
|  |   |                                 |                     | <b>Seams:</b>                 | 3 rows 3step, Blue V92                       |                   |                   |
| <b>Draft Stripe:</b>                           | Yes, 2x3/8" green   |                                 |                     | <b>Tell Tale:</b>             | Yes  |                   |                   |
| <b>Leech Cleat:</b>                            | 241 Alum cleat with snubbing eyes   |                                 |                     | <b>Bag Type:</b>              | Drawstring type "B"                          |                   |                   |
| <b>Luff Rope</b>                               | NPS#6 Foil Tape   |                                 |                     | <b>Cover Material/Colour:</b> | Clew only, both sides: UV mark cloth / white |                   |                   |
| <b>Mast Section:</b>                           | Z-Spar: Z600E   |                                 | <b>Boom Section</b> | Z-spar: Z360                  |  |                   |                   |
| Tack and Clew Cutback                          |   |                                 |                     |                               |  |                   |                   |
| <b>A:</b>                                      |   | <b>B:</b>                       |                     | <b>C:</b>                     |  | <b>D:</b>         |                   |
|  |   |                                 |                     | <b>E:</b>                     | 50   | <b>F:</b>         |                   |
|  |   |                                 |                     | <b>G:</b>                     |  |                   |                   |
| Drawing  |   |                                 |                     |                               |  |                   |                   |
| <b>Drawn By:</b>                               | Bob   |                                 | <b>Date:</b>        | May-01                        |  | <b>Revision #</b> | 08071393-R001.doc |
| <b>Additional Notes:</b>                       | Finished Dimensions include head and tack webs.<br>Rev 1: adjusts foot length |                                 |                     |                               |  |                   |                   |

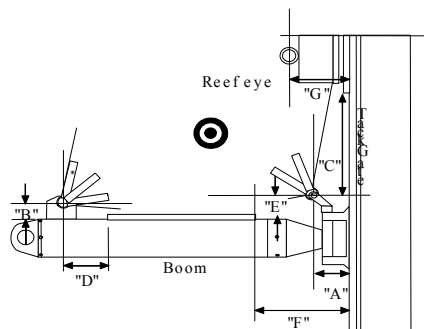

Tack/Clew Detail

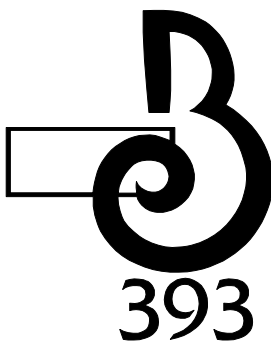


Black

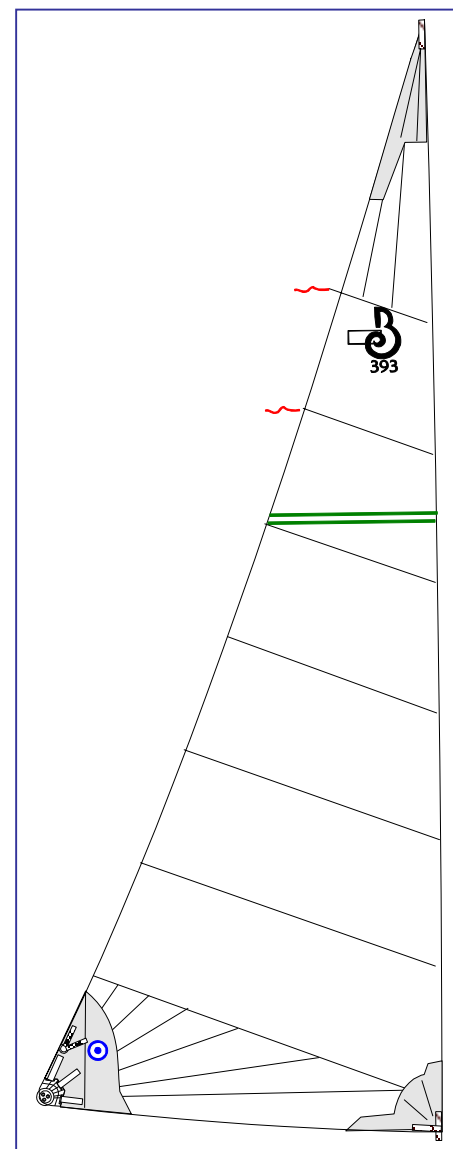

## Mainsail Specification and Technical Worksheet


|                                       |  |   |  |  |  |                       |  |   |  |                               |  |
|---------------------------------------|--|---|--|--|--|-----------------------|--|---|--|-------------------------------|--|
| <b>Model Type:</b>                    |  | <b>Oceanis 393 U.S.A.</b>                                       |  |  |  |                       |  |   |  |                               |  |
| <b>Sail Type:</b>                     |  | <b>Classic Mainsail Series 2002</b>                             |  |  |  |                       |  |   |  |                               |  |
| <b>"P" Dim:</b>                       |  | 12300   |  | <b>"E" Dim:</b>  |  | 4600                  |  | <b>Area:</b>  |  | 31.5sqmt                      |  |
| <b>Finished Dimensions</b>            |  |   |  |  |  |                       |  |   |  |                               |  |
| <b>Luff:</b>                          |  | 12200   |  | <b>Leech:</b>  |  | 12840                 |  | <b>Foot:</b>  |  | 4572                          |  |
| <b>Finish Details</b>                 |  |   |  |  |  |                       |  |   |  |                               |  |
| <b>Material Type:</b>                 |  | 8.9 SuperCruise   |  |  |  | <b>Tack Detail:</b>   |  | 40mm SS Ring with leather                                       |  |                               |  |
| <b>Head Detail:</b>                   |  | 50mm s.s. Ring with leather                                     |  |  |  | <b>Clew Slug/Car:</b> |  | SLD151 (B102) Cast Slug   |  |                               |  |
| <b>Head Slide:</b>                    |  | SLD151 (B102) Cast Slug   |  |  |  | <b>Clew:</b>          |  | 50mm s.s. Ring with leather                                     |  |                               |  |
| <b>Clew Reef 1:</b>                   |  | 34118 Wichard block on starboard<br>Side led through PG 23 ring |  |  |  | <b>Tack Reef 1:</b>   |  | 33118 Wichard block on starboard<br>Side led through PG 20 ring |  |                               |  |
| <b>Clew Reef 2:</b>                   |  | 34118 Wichard block on starboard<br>Side led through PG 23 ring |  |  |  | <b>Tack Reef 2:</b>   |  | 33118 Wichard blocs on starboard<br>Side led through PG 20 ring |  |                               |  |
| <b>Sail Ties:</b>                     |  | Yes, 3 x 2.4 mt ties  |  |  |  | <b>Logos</b>          |  | 2 bullseyes   |  |                               |  |
| <b>Battens:</b>                       |  | 4 x 40mm flat   |  |  |  | <b>Ben. Part#:</b>    |  | 08070028  |  |                               |  |
| <b>Bat. Lengths:</b>                  |  | #1 1180   |  | #2 2180  |  | #3 3134               |  | #4 3880   |  | #5 n.a.                       |  |
| <b>Batten Slides:</b>                 |  | A014 Seldon Allslip   |  |  |  | <b>Battens stops</b>  |  | 4- A303   |  |                               |  |
| <b>Leech Cleat:</b>                   |  | 241 Alum. With snubbing eyes                                    |  |  |  | <b>Luff eyes:</b>     |  | 5-#3 eyelets  |  |                               |  |
| <b>Luff Tape:</b>                     |  | 5" with 10mm rope   |  |  |  | <b>Insignia:</b>      |  | Yes   |  |                               |  |
| <b>Leech Line:</b>                    |  | 4mm Dacron line   |  |  |  | <b>Bag Type:</b>      |  | Drawstring type "C"   |  |                               |  |
| <b>Reef Cleat:</b>                    |  | 2 x 241 Aluminum  |  |  |  | <b>Tell Tale:</b>     |  | 4 - 1 at each batten  |  |                               |  |
| <b>Reef heights in % of "P"</b>       |  | <b>Reef 1</b> 15%   |  | <b>Reef 2</b>  |  | 34%                   |  | <b>Reef 3</b>   |  | na                            |  |
| <b>Luff Slides:</b>                   |  | 5- 662A LG Seldon slides  |  |  |  | <b>Foot Tape:</b>     |  | Double Tabling  |  |                               |  |
| <b>Seams:</b>                         |  | 3 rows V-92 blue 3-step   |  |  |  | <b>Trim stripes:</b>  |  | 2 x 3/8" green  |  |                               |  |
| <b>Reefing slots:</b>                 |  | n.a. loose foot   |  |  |  | <b>Reef eyes:</b>     |  | 7 # 3 eyelets   |  |                               |  |
| <b>Mast Section:</b>                  |  | Z-Spar: 601   |  |  |  | <b>Boom Section:</b>  |  | Z-Spar Z360   |  |                               |  |
| <b>Tack and Clew Cutback Details:</b> |  |   |  |  |  |                       |  |   |  |                               |  |
| <b>A:</b>                             |  | 50  |  | <b>B:</b>  |  | 000                   |  | <b>C:</b>   |  | 350                           |  |
| <b>D:</b>                             |  | 000   |  | <b>E:</b>  |  | 20                    |  | <b>F:</b>   |  | 280                           |  |
| <b>G:</b>                             |  | 65  |  |  |  |                       |  |   |  |                               |  |
| <b>Drawing Information</b>            |  |   |  |  |  |                       |  |   |  |                               |  |
| <b>Drawn By:</b>                      |  | Bob   |  | <b>Date:</b>   |  | Aug 2001              |  | <b>Rev#</b>   |  | 0807-1394-rev001 mainsail.doc |  |
| <b>Additional Notes:</b>              |  |   |  | Production Model 1-A Classic Main<br>Rev 1: Changes to full battens. |  |                       |  |   |  |                               |  |

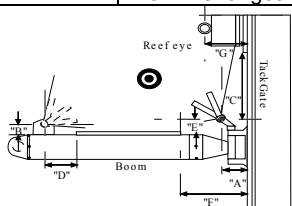

Tack/Clew Detail



Insignia Detail in Black

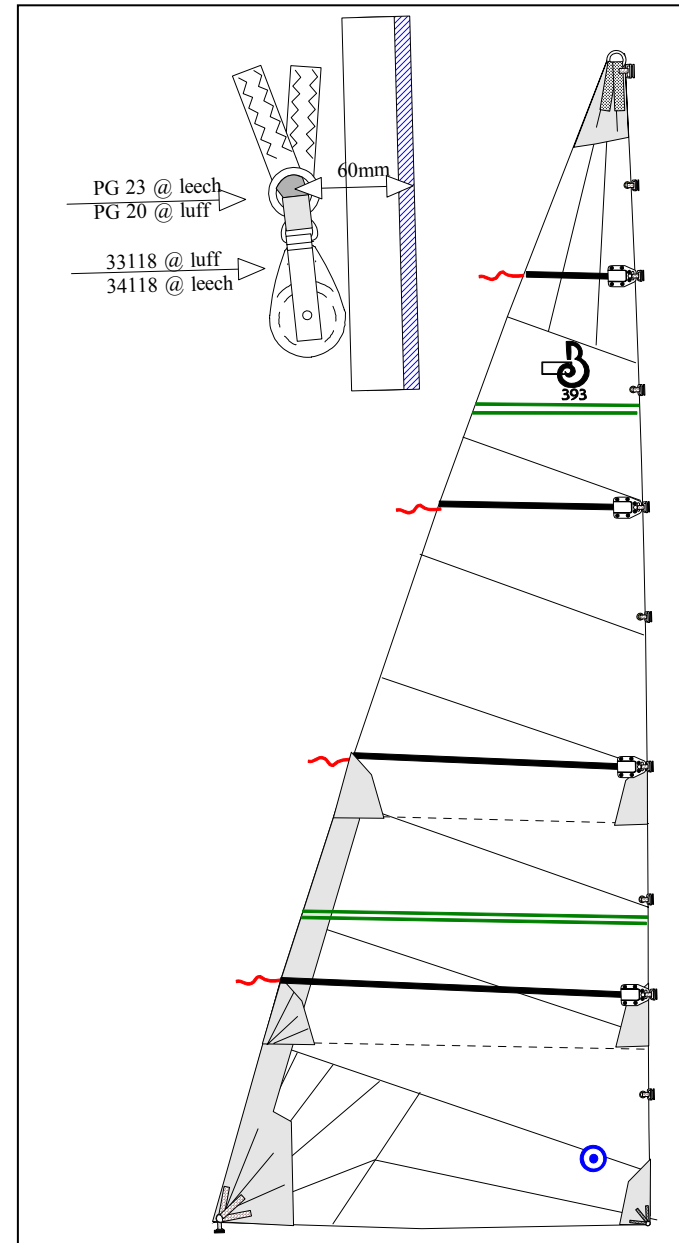


## DECK LAYOUT FOR ROLLER FURLING MAST (STANDARD)

| REF | STANDARD MAST   | OPTIONAL                    |
|-----|-----------------|-----------------------------|
| 1   | Main Halyard    |                             |
| 2   | RF Main Outhaul |                             |
| 3   | RF Main Inhaul  |                             |
| 4   | Mainsheet       |                             |
| 5   | Vang            |                             |
| 6   |                 | Foreguy                     |
| 7   |                 | Spinnaker/Genneker Halyard  |
| 8   |                 | Spinnaker pole topping lift |

### LINES THROUGH DECK ORGANIZER

..... Upper Sheave

———— Lower Sheave

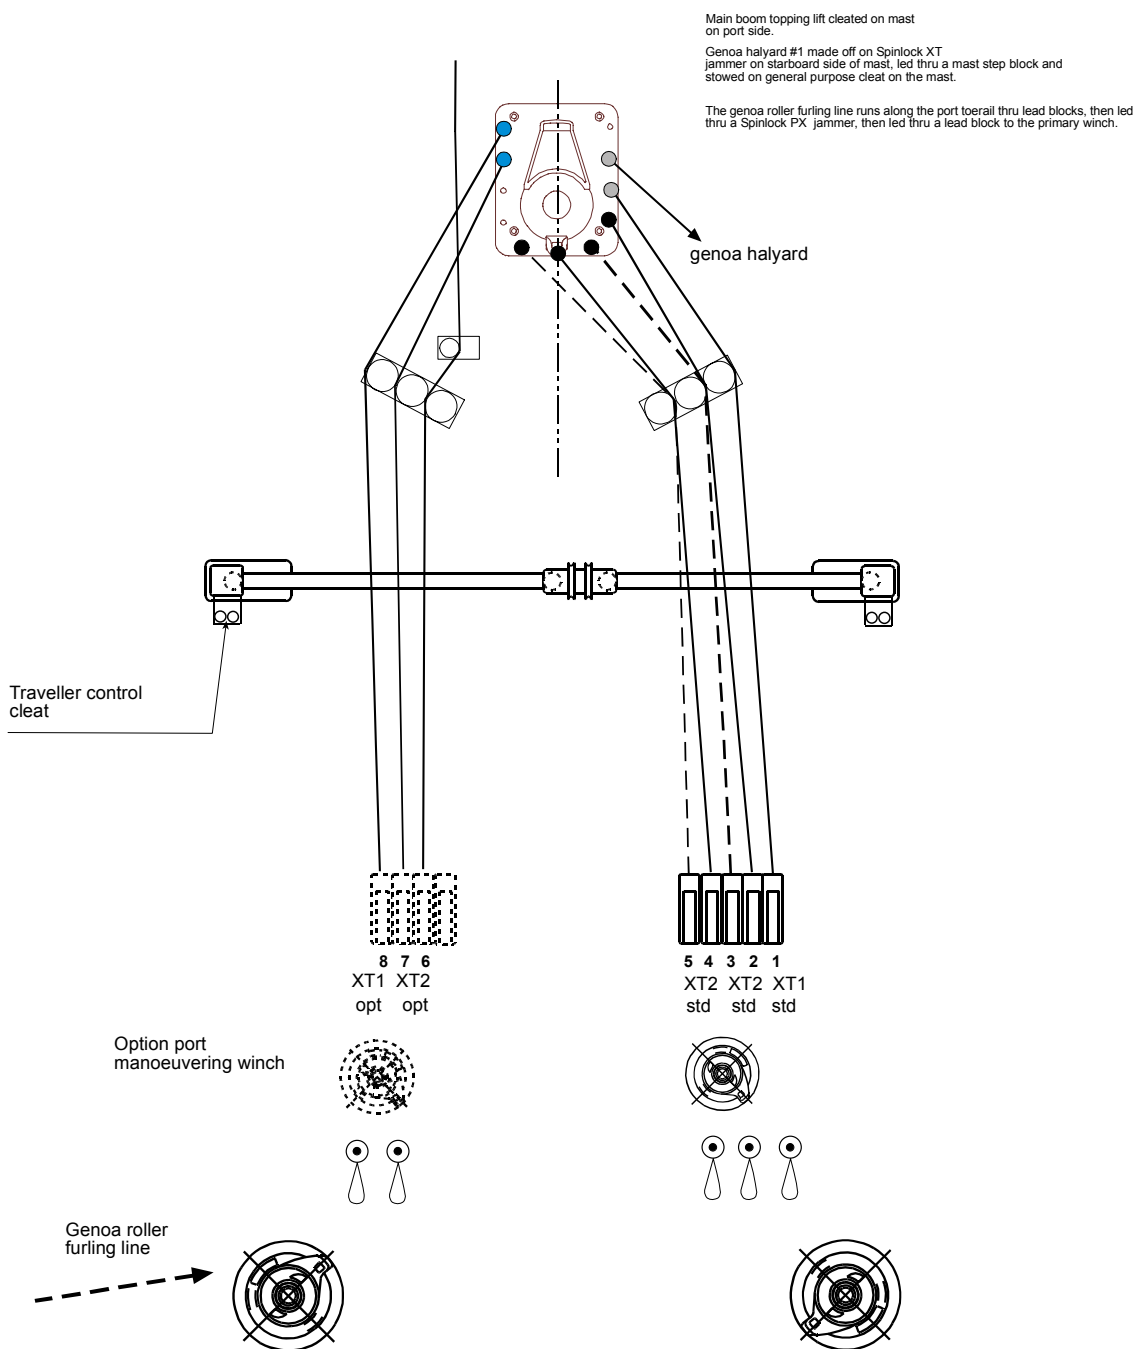

## DECK LAYOUT FOR CLASSIC MAST (OPTION)

| REF | STANDARD MAST | OPTIONAL                    |
|-----|---------------|-----------------------------|
| 1   | Main Halyard  |                             |
| 2   | Reef 2        |                             |
| 3   | Reef 1        |                             |
| 4   | Mainsheet     |                             |
| 5   | Vang          |                             |
| 6   |               | Foreguy                     |
| 7   |               | Spinnaker/Genneker Halyard  |
| 8   |               | Spinnaker pole topping lift |


### LINES THROUGH DECK ORGANIZER





Upper Sheave



Lower Sheave

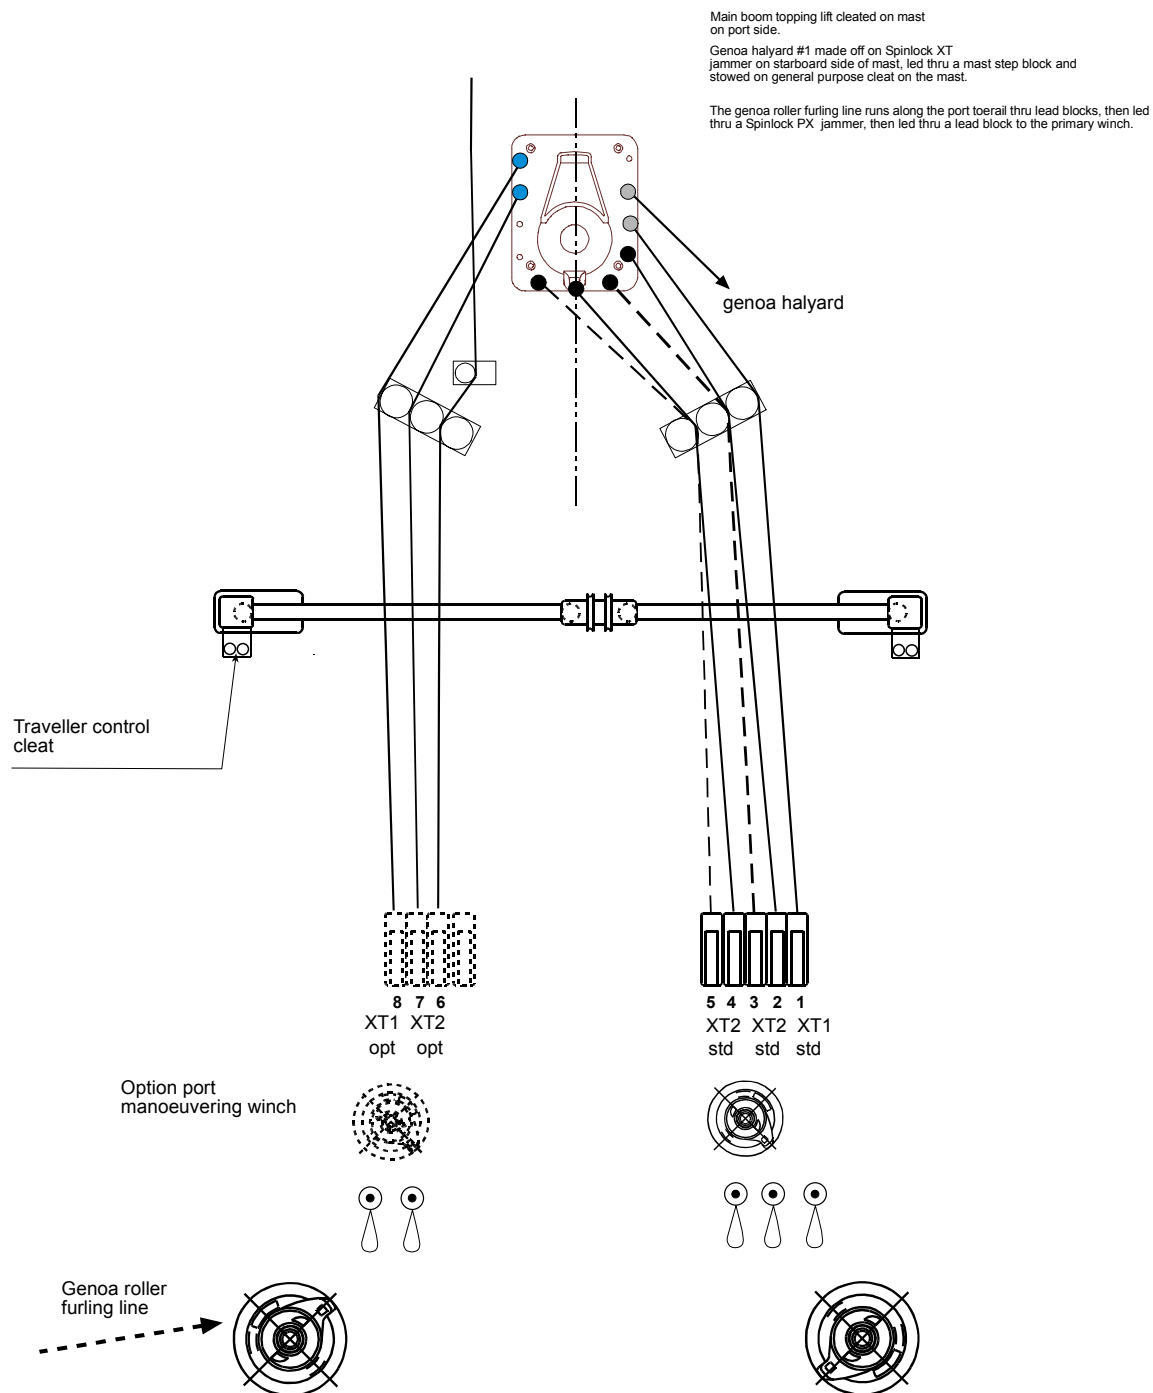

## MAINSAIL TACKLE AND REEFING SYSTEM

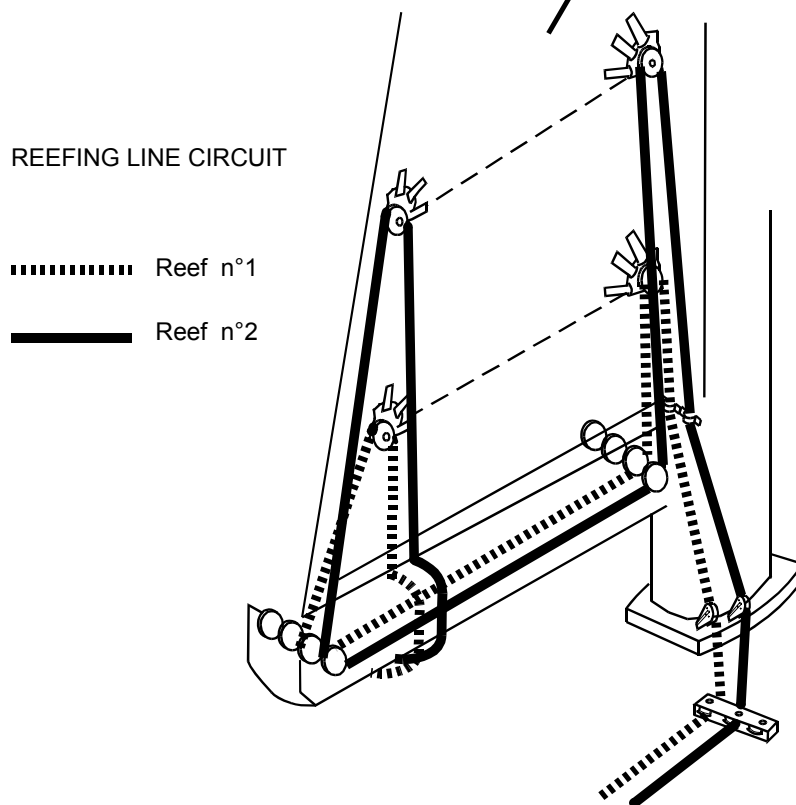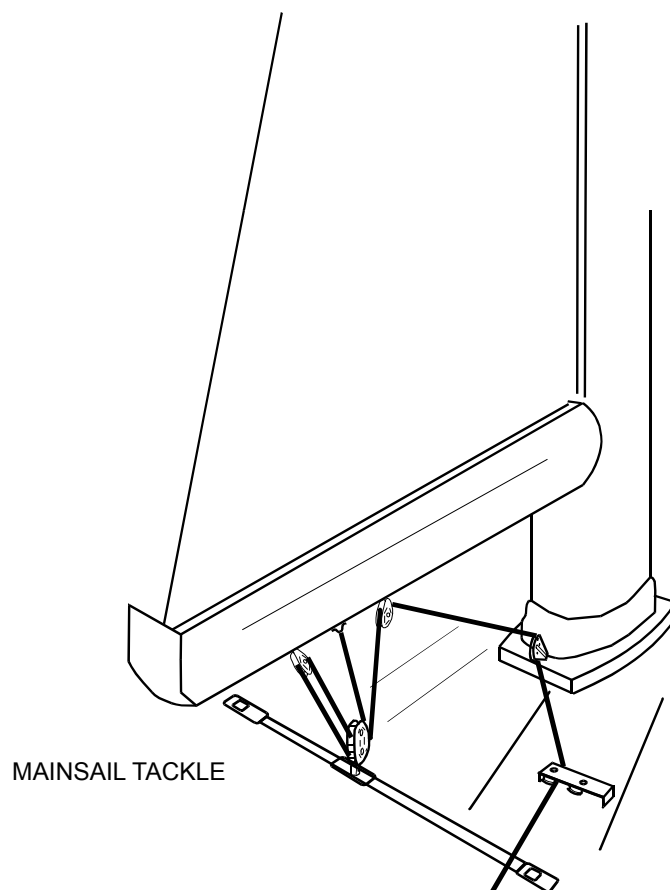

#### **XIV) FRESH WATER SYSTEM**

| REF | DESCRIPTION                                 |
|-----|---|
| 1   | Bow Water Tank 250 L (66 US gal)            |
| 2   | Aft Stbd Water Tank 250 L (66 US gal)       |
| 3   | Deck Fill – Fresh Water Tank                |
| 4   | Vent – Fresh Water Tank                     |
| 5   | Water Tank Manifold                         |
| 6   | Filter                                      |
| 7   | Fresh Water Pump                            |
| 8   | Water Heater [capacity : 22.7 L (6 US gal)] |
| 9   | Shower Discharge Pump                       |
| 10  | Filter for Shower Discharge                 |
| 11  | Galley Sink                                 |
| 12  | Washbasin/Shower                            |
| 13  | Transom Shower                              |
| 14  | Icebox                                      |


The fresh water system supplies the sink in the galley, the wash basin and shower in all of the heads, and the transom shower. This system is pressurized by an electric pump. There is a filter between the water tank manifold and the pump. It is necessary to check and clean this filter regularly.

**Never run an electric pump when the tank is empty. It may burn out the pump.**

To prevent any over pressure in the system during filling, never force the filling nozzle deep down the filler pipe and keep an eye on the vent hole(s) through which the excess water will be discharged.


When the system has not been used for a long period of time, the tanks and pipes should be cleansed with an acetic acid solution (white vinegar).

The water drains out from the sink and wash basins through their own thru-hulls. Close them when the water system is not used.

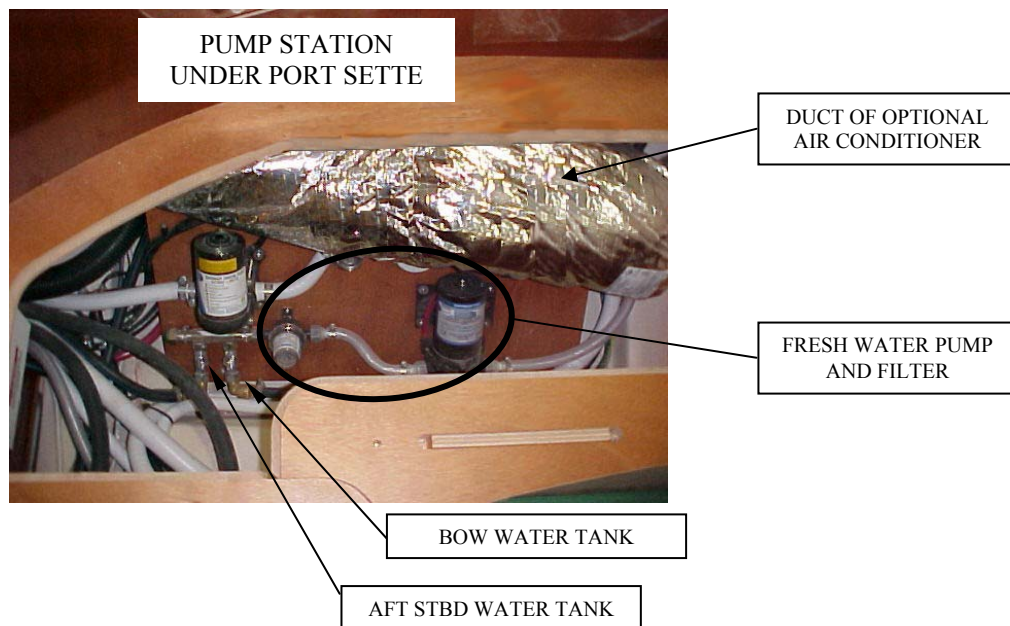


# LAY OUT OF THE FRESH WATER SYSTEM

2 cabin / 2 toilet

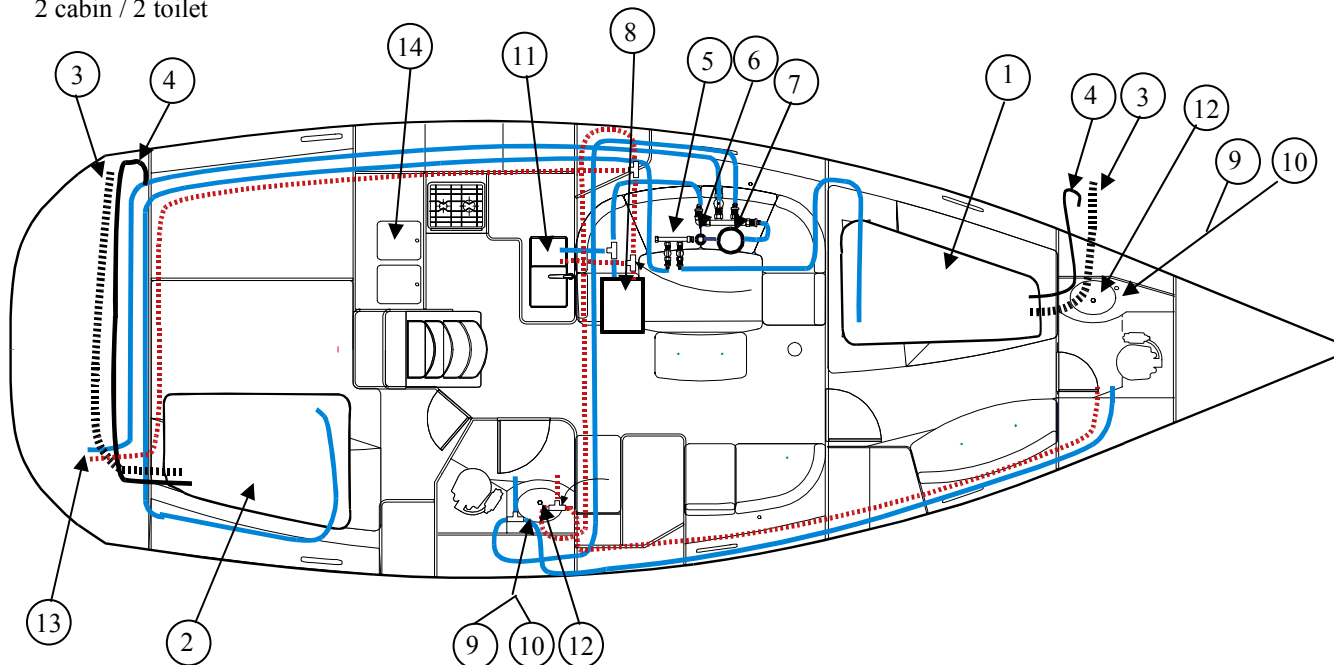

3 cabin / 2 toilet

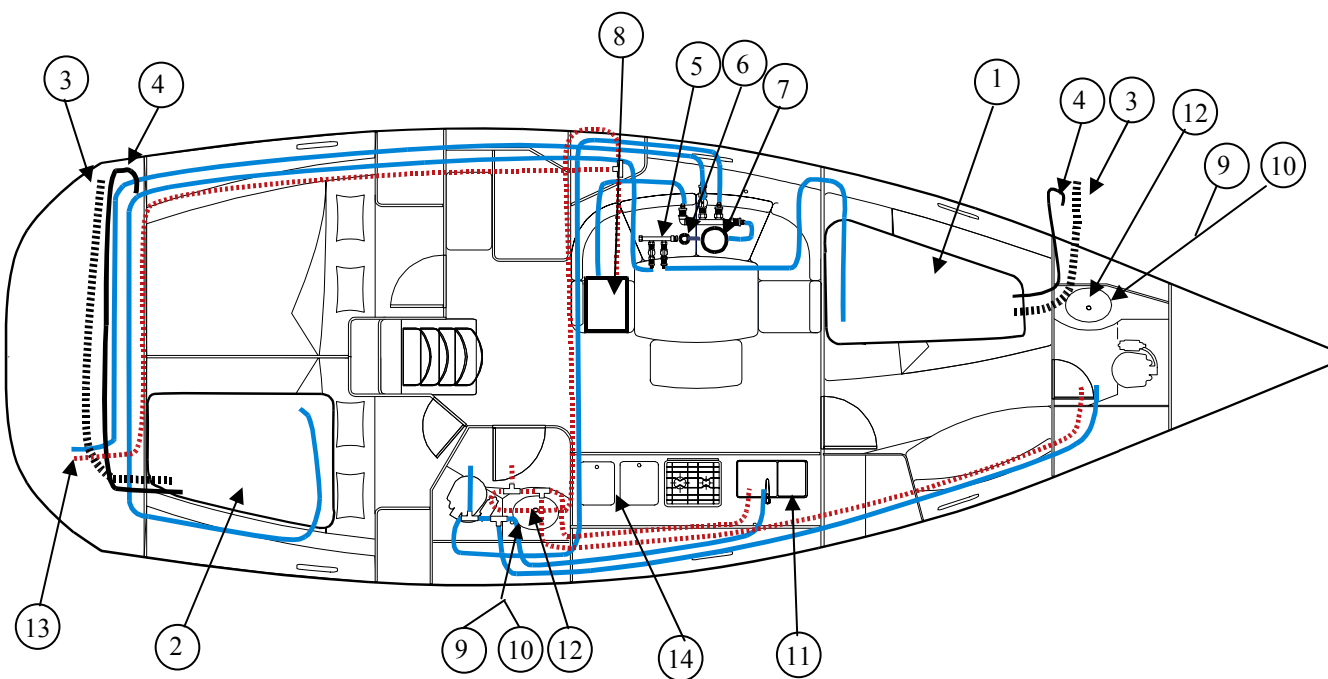

## **XV) BILGE PUMP SYSTEM**

| REF | DESCRIPTION                                       |
|-----|---|
| 1   | Electric Bilge Pump 720 lph (168 gph)             |
| 2   | Filter of the Electric Bilge Pump                 |
| 3   | Sump  |
| 4   | Manual Bilge Pump 0.7 l. (.18 US gal.) per stroke |
| 5   | Electric Bilge Pump Intake Hose                   |
| 6   | Manual Bilge Pump Intake Hose                     |
| 7   | Electric Bilge Pump Discharge Hose                |
| 8   | Manual Bilge Pump Discharge Hose                  |

**Make sure the bilge pump system is in good working order before you put out to sea.**


**Acquaint yourself with the way the bilge pump system of your boat works:**

- **Locate the manual bilge pump and the handle.**
- 
- **Locate the on switch of the electric bilge pump and get to know how the seacocks work (for the boats fitted with an electric bilge pump).**
- 

**(See the lay out drawing of the system - next page)**



**Make sure that the bilge pump intake strainer is not blocked with dirt.**

Regularly clean the intake strainer on the sump and the filter of the system.

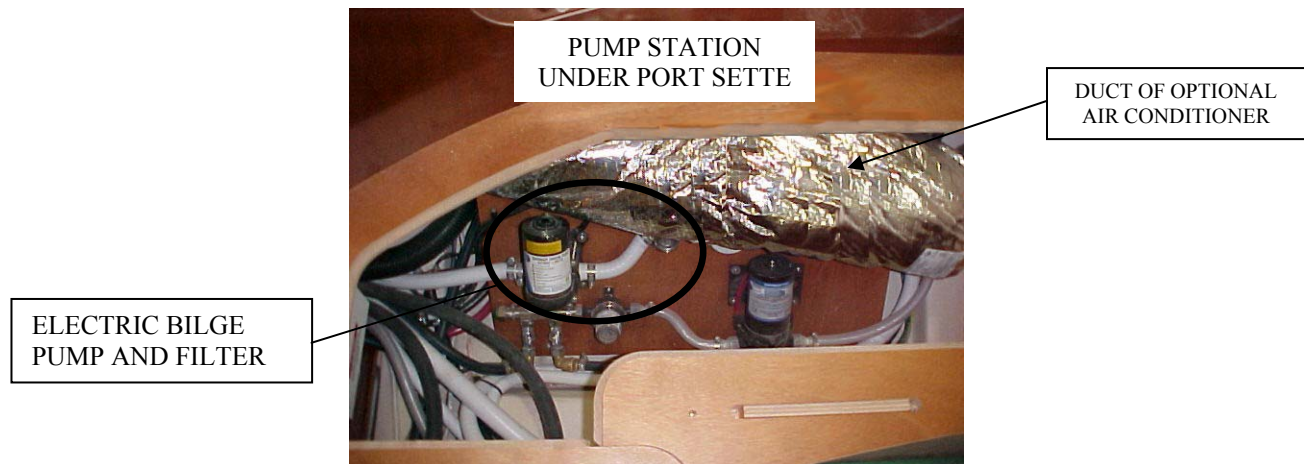



## LAY OUT OF THE BILGE PUMP SYSTEM

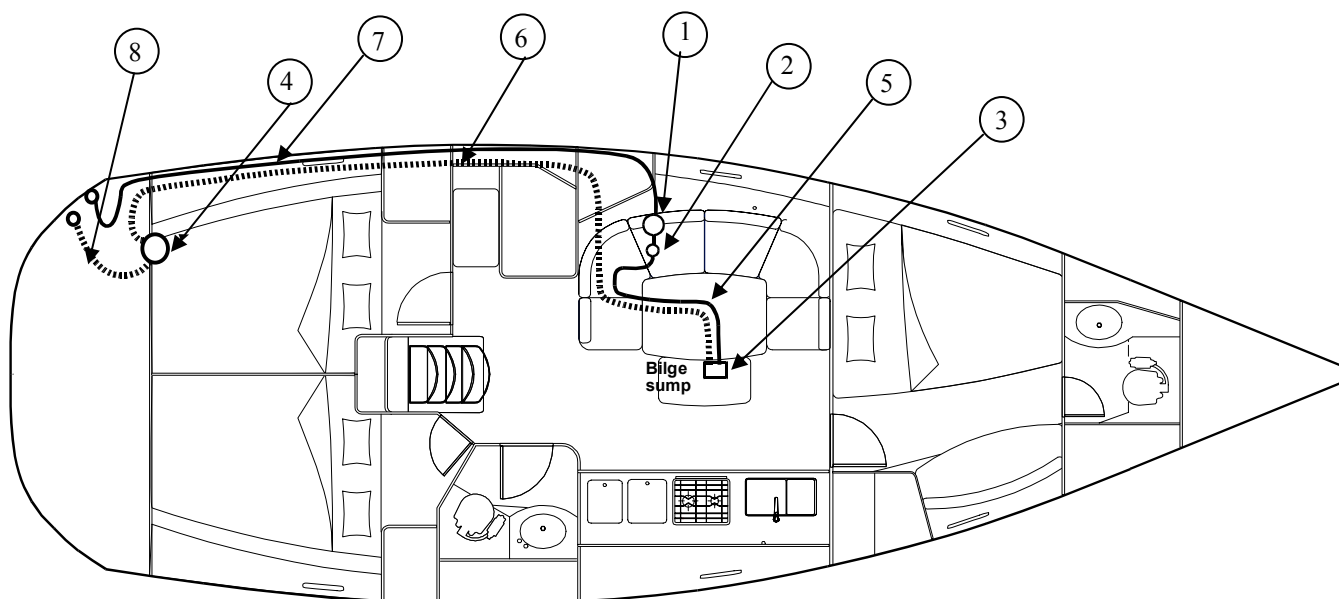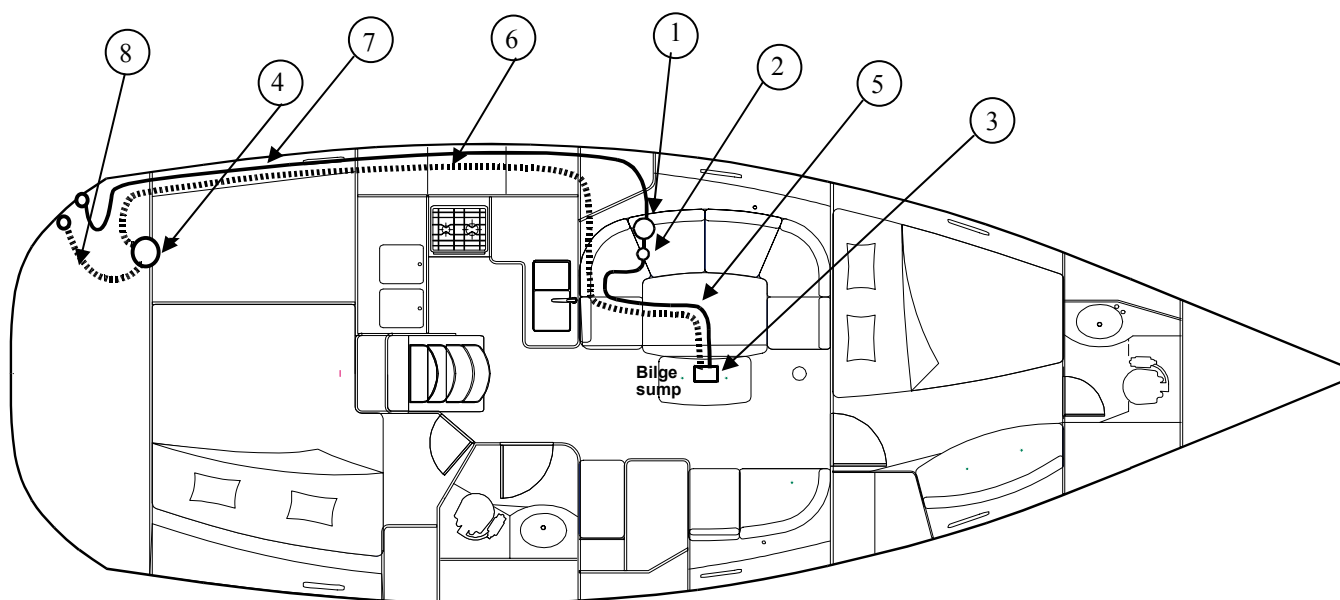


## XVI) SEACOCKS AND THRU-HULLS

Close all the seacocks when you leave the boat.

The toilet is situated below the waterline; get into the habit of systematically closing the seacocks after each use.

Make sure that all seacocks, which are not used, are closed before you put out to sea.

Opening and closing of the seacocks

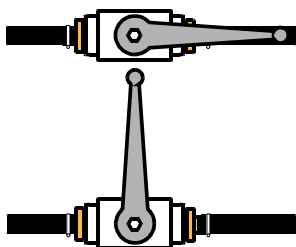


Open

Closed

| REF | DESCRIPTION                        |
|-----|------------------------------------|
| 1   | Head Discharge                     |
| 2   | Head Intake                        |
| 3*  | Washbasin Discharge                |
| 4   | Shower Discharge                   |
| 5   | Ice Box Draining                   |
| 6   | Engine Cooling Water Intake        |
| 7   | Galley Sink Discharge              |
| 8   | Stern Tube Cooling Intake Valve    |
| 9   | Speed/Log, Depth Sounder Thruhulls |
| 10  | Waste Tank Drain (optional)        |


\* The washbasin and shower discharge, connect to the same thru hull through a set of 1/4 turn valves and a tee. The washbasin discharge will be the one with a slightly larger diameter hose.

Operation of three-way valve for toilets

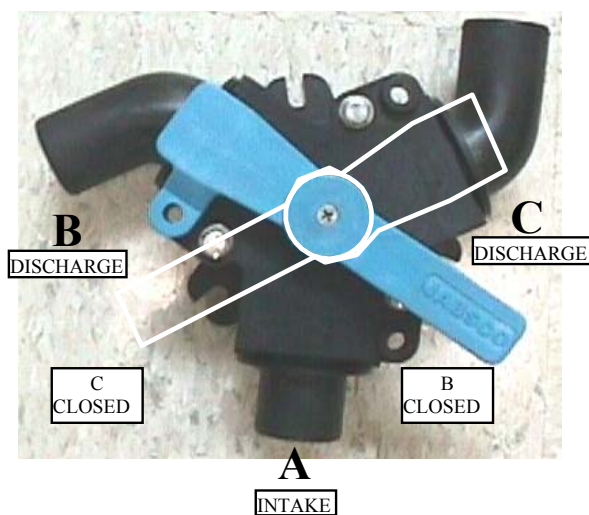


## SEACOCK AND THRU-HULL LAY OUT

2 cabin / 2 toilet

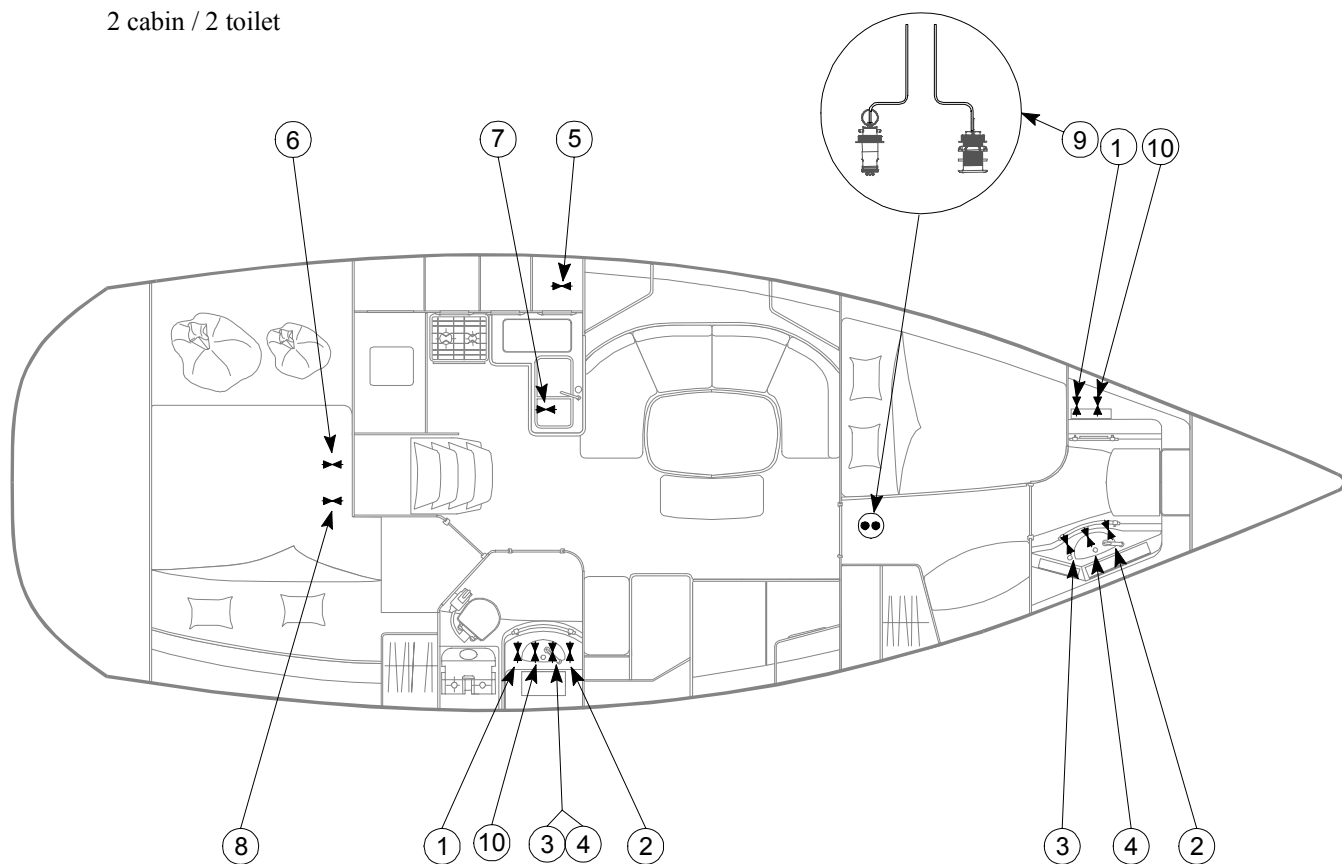

3 cabin / 2 toilet

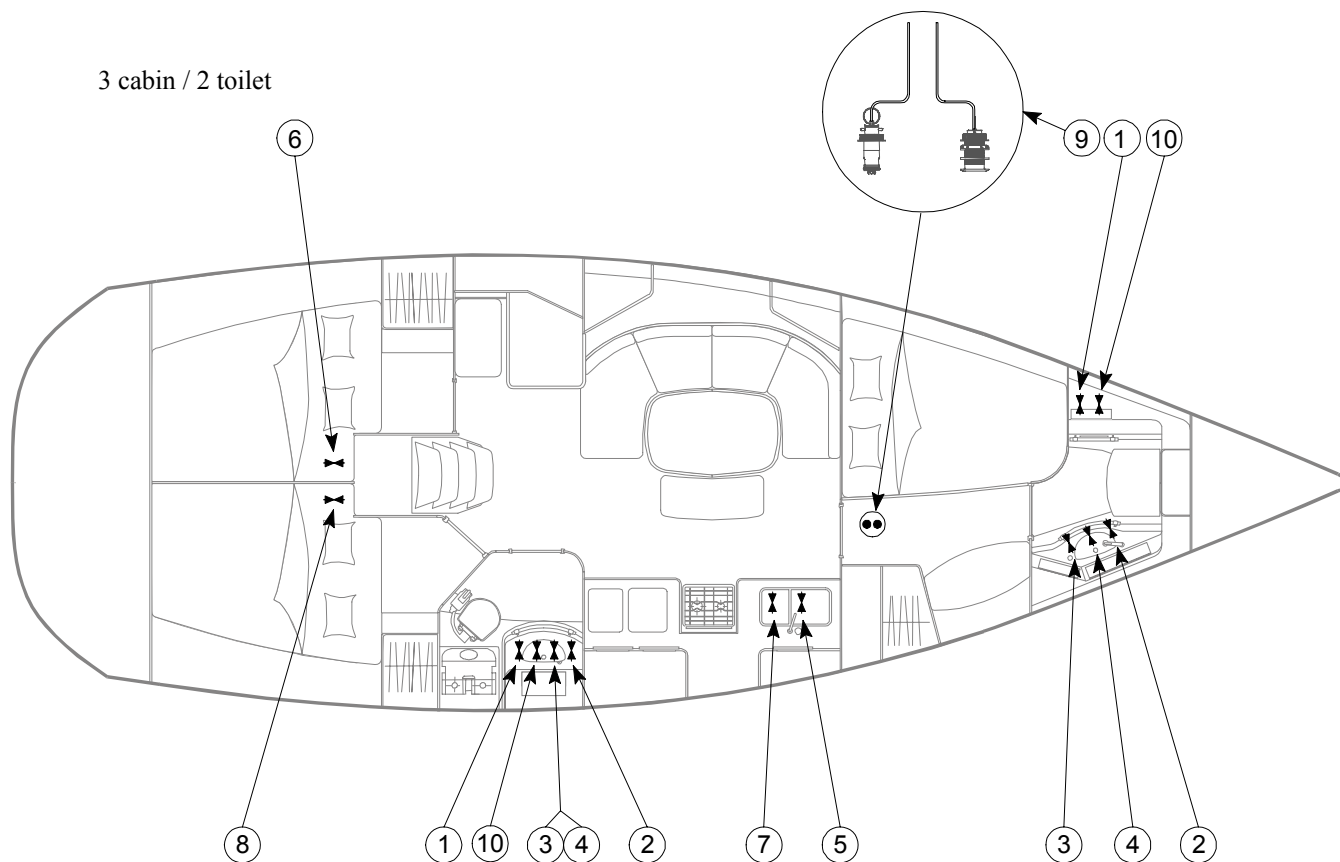

## **XVII) ELECTRIC SYSTEMS**

When the voltage is not specified, all the functions or panels are in 12 Volts.

### **12V Electric System**

**Never work on a live electric fitting.**

Never tamper with an electric fitting. Call in a technician qualified in marine electricity.

The batteries must be carefully and safely stowed.

In order to prevent a short circuit between the battery terminals, do not store conductive objects near the batteries (e.g. metal tools, ...)

Never alter the specifications of the breakers, which protect against overload.

Never fit or replace the electric materials or appliances with components, which exceed the system amperage.

### **110V-220V Electric System**

Boats are fitted with a 110V/60Hz or a 220V/50Hz system (some as standard, others as an option, depending on the models). We advise you to follow these steps in order to avoid the risk of electric shock and fire.

|                                       |
|---------------------------------------|
| <b>Do not work on a live fitting.</b> |
|---------------------------------------|

|  |
|--|
| <b>Connect the boat / shore supply cable to the boat before you plug it into the shore supply socket with the breaker off. Turn the breaker on last.</b> |
|--|

|  |
|--|
| <b>Do not immerse the boat / shore cable socket.</b> |
|--|

Turn off the shore supply switch on board before you plug in or unplug the boat / shore supply cable.

Do not tamper with the connections of the Boat / shore supply cable. Use only compatible connections.

|  |
|--|
| <b>Never swim in a marina around boats connected to shore power. If necessary for maintenance unplug the boat being worked on and surrounding boats.</b> |
|--|

## BATTERY SWITCH OPERATION

Never turn the negative battery switch off while engine is running.

Never turn all positive switches off while engine is running.


Battery 1 is the engine / start battery

Battery 2 is the service / house battery


Negative battery switch controls ground {DC12V negative} for all batteries.

To charge a battery with the engine the positive switch must be in the on position.

**WARNING: Do not turn both positive battery switches off while engine is running**

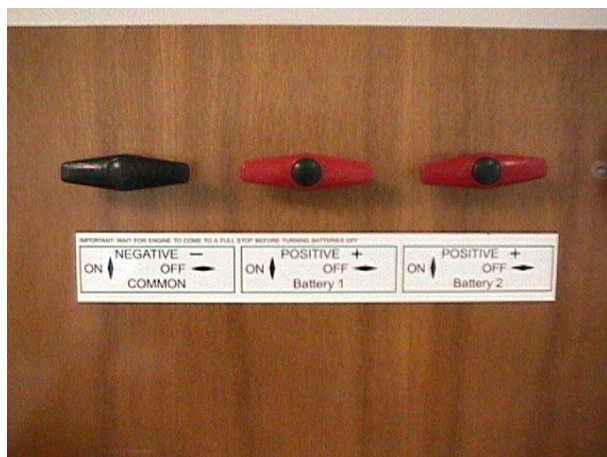

Everything is OFF, no 12V DC power  
( when leaving the boat unattended)

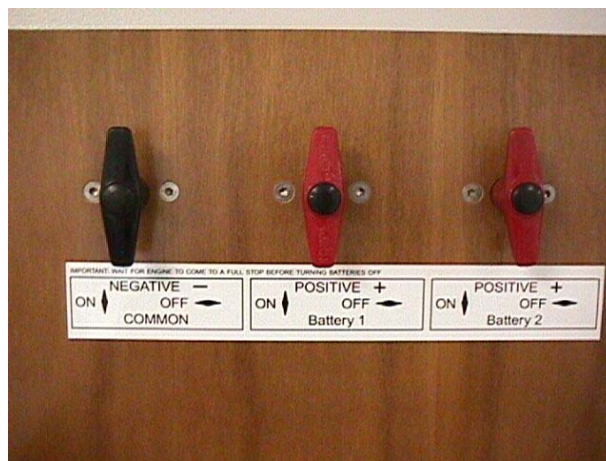


Everything is ON, 12VDC power available  
to start engine and/or run equipment




Configuration to start engine ,while  
house/service is off or down

You can turn house switch ON, while  
engine is running to charge house.

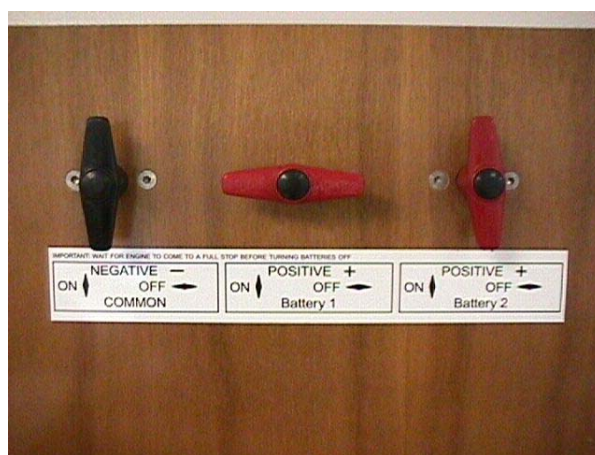

Engine is off , Run equipment from house only  
( like at anchorage)

ELECTRICITY LAY OUT

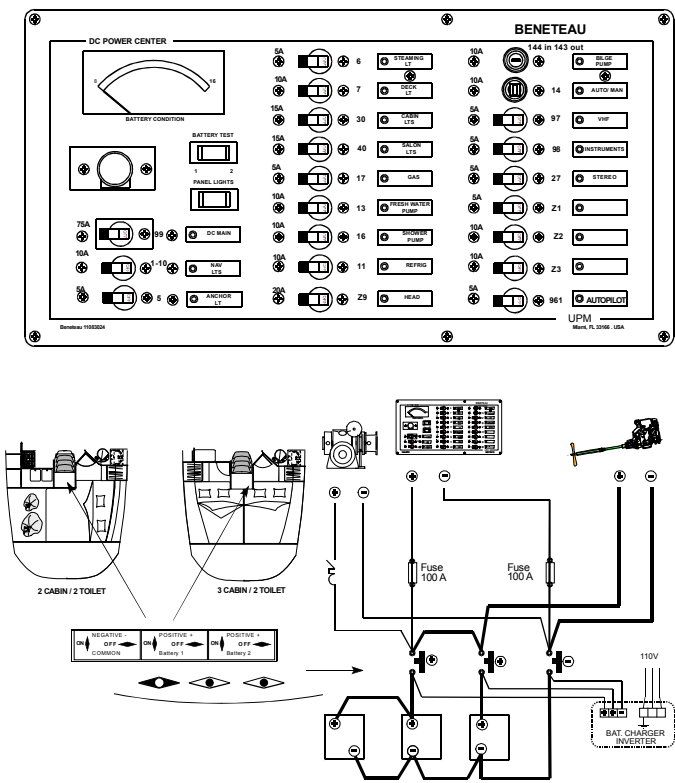

12V PANEL

| FUNCTION         | BREAKER<br>AMPERAGE<br>(Amp) |
|------------------|------------------------------|
| Main             | 75                           |
| Navigation Light | 10                           |
| Anchor Light     | 5                            |
| Steaming Light   | 5                            |
| Deck Light       | 10                           |
| Cabin Lights     | 15                           |
| Salon Lights     | 15                           |
| Gas Valve        | 5                            |
| Water Pump       | 10                           |
| Shower Pump      | 10                           |
| Refrigeration    | 10                           |
| Head             | 20                           |
| Bilge Pump       | 10                           |
| VHF              | 5                            |
| Instruments      | 5                            |
| Stereo           | 5                            |
| Spare qty 1      | 5                            |
| Spare qty 2      | 10                           |
| Autopilot        | 5 *                          |

110/220V PANEL

| FUNCTION        | BREAKER<br>AMPERAGE<br>(Amp) |
|-----------------|------------------------------|
|                 |                              |
|                 |                              |
| Water Heater    | 15                           |
| Battery Charger | 10                           |
| Outlets         | 15                           |

\* Note: Autopilot 5A breaker feeds a relay


## LAY OUT OF THE 12V LIGHTS AND APPLIANCES

| REF | DESCRIPTION  | FUNCTION ON PANEL |
|-----|--|-------------------|
| 1   | Bicolor Bow Navigation Light                       | Navigation Lights |
| 10  | White Stern Navigation Light                       | Navigation Lights |
| 4   | Tri-color mast head light (on mast)                | Navigation Lights |
| 5   | Anchor Light (on mast)                             | Anchor Light      |
| 6   | Steaming Light (on mast)                           | Steaming Light    |
| 7   | Deck Light   | Deck Light        |
| 30  | Ceiling Light                                      | Cabin Lights      |
| 32  | Ceiling Light                                      | Cabin Lights      |
| 34  | Ceiling Light                                      | Cabin Lights      |
| 35  | Ceiling Light                                      | Cabin Lights      |
| 40  | Ceiling Light                                      | Salon Lights      |
| 41  | Ceiling Light                                      | Salon Lights      |
| 42  | Ceiling Light                                      | Salon Lights      |
| 43  | Red Nav Light-2 cabin    Ceiling Light-3 cabin     | Salon Lights      |
| 44  | Fluorescent Light-2 cabin    Red Nav Light-3 cabin | Salon Lights      |
| 45  | Ceiling Light                                      | Salon Lights      |
| 48  | Ceiling Light-2 cabin    Red Nav Light-3 cabin     | Cabin Lights      |
| 49  | Ceiling Light                                      | Salon Lights      |
| 50  | Ceiling Light                                      | Salon Lights      |
| 52  | Ceiling Light                                      | Salon Lights      |
| 53  | Reading Light                                      | Cabin Lights      |
| 54  | Reading Light                                      | Cabin Lights      |
| 55  | Ceiling Light                                      | Cabin Lights      |
| 56  | Reading Light                                      | Cabin Lights      |
| 57  | Reading Light                                      | Cabin Lights      |
| 59  | Reading Light                                      | Cabin Lights      |
| 61  | Reading Light                                      | Salon Lights      |
| 62  | Reading Light                                      | Cabin Lights      |
| 63  | Reading Light                                      | Cabin Lights      |
| 9   | Compass Lights                                     | Instrument Lights |
| 13  | Fresh Water Pump                                   | Fresh Water Pump  |
| 14  | Bilge Pump   | Bilge Pump        |
| 11  | Refrigeration                                      | Refrigeration     |
| 161 | Shower Pump – Fwd Toilet                           | Shower Pump       |
| 162 | Shower Pump – Port Aft Toilet                      | Shower Pump       |


① = Light Switch

## 12V LIGHT AND APPLIANCE LAY OUT

2 cabin / 2 toilet

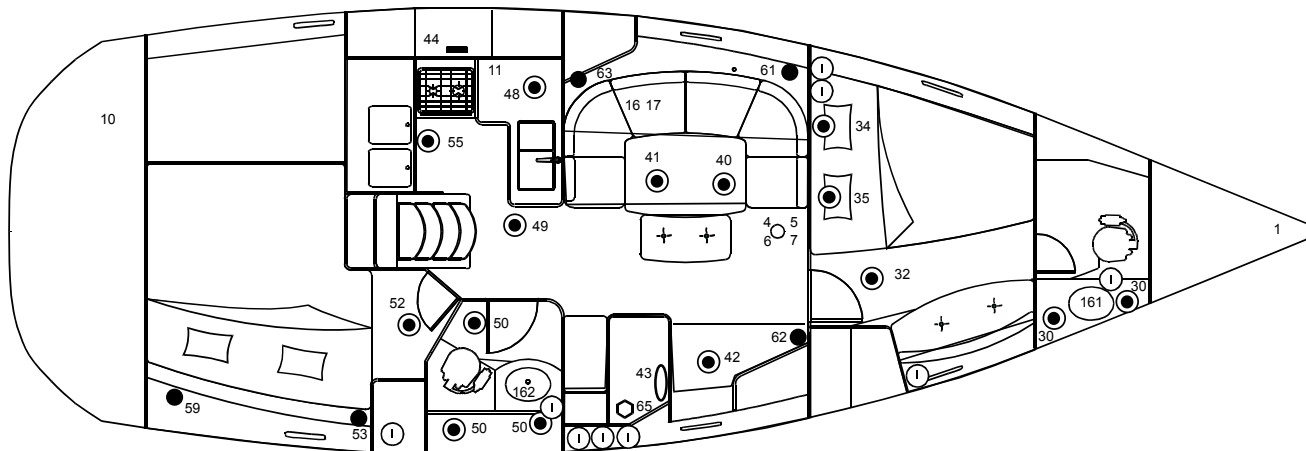

3 cabin / 2 toilet

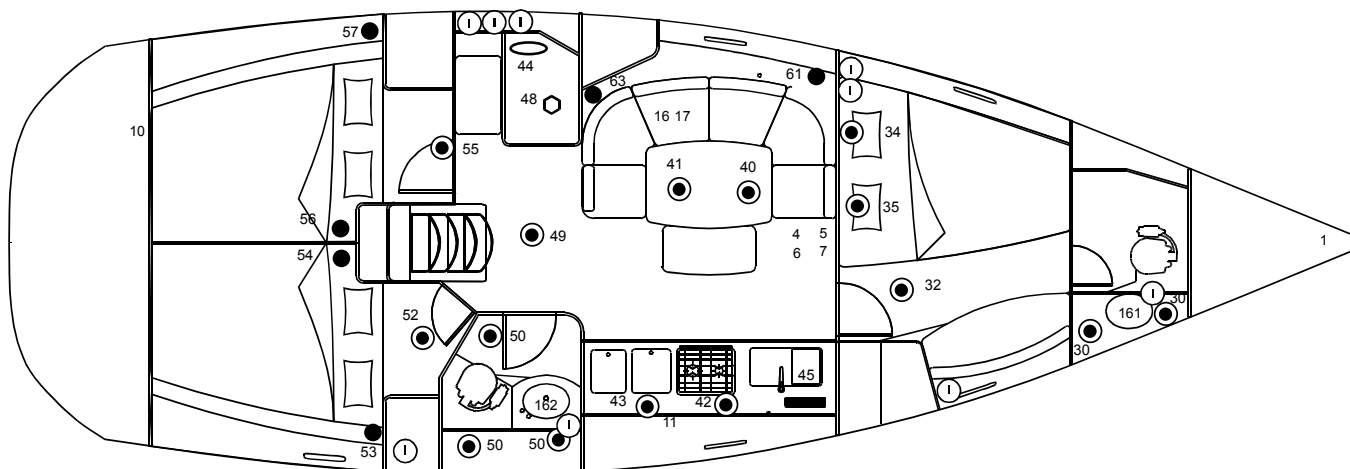





## LOCATION OF 110 / 220V SOCKETS AND APPLIANCES

| REF | DESCRIPTION       |
|-----|-------------------|
| 1   | Shore Power Inlet |
| 2   | Battery Charger   |
| 3   | 110/220V Outlet   |
| 4   | Water Heater      |


2 cabin / 2 toilet

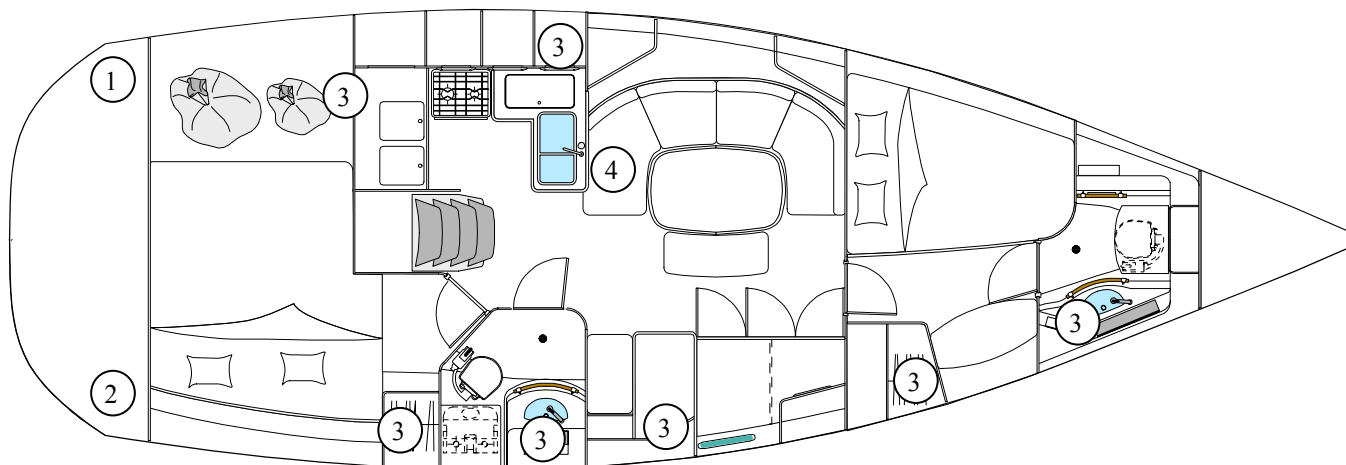


 

3 cabin / 2 toilet

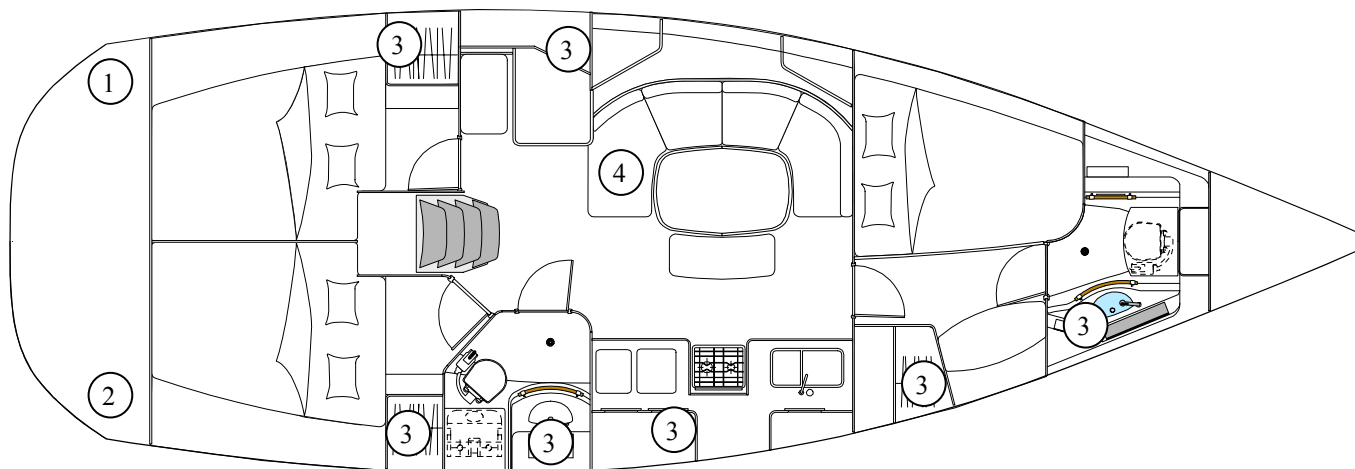

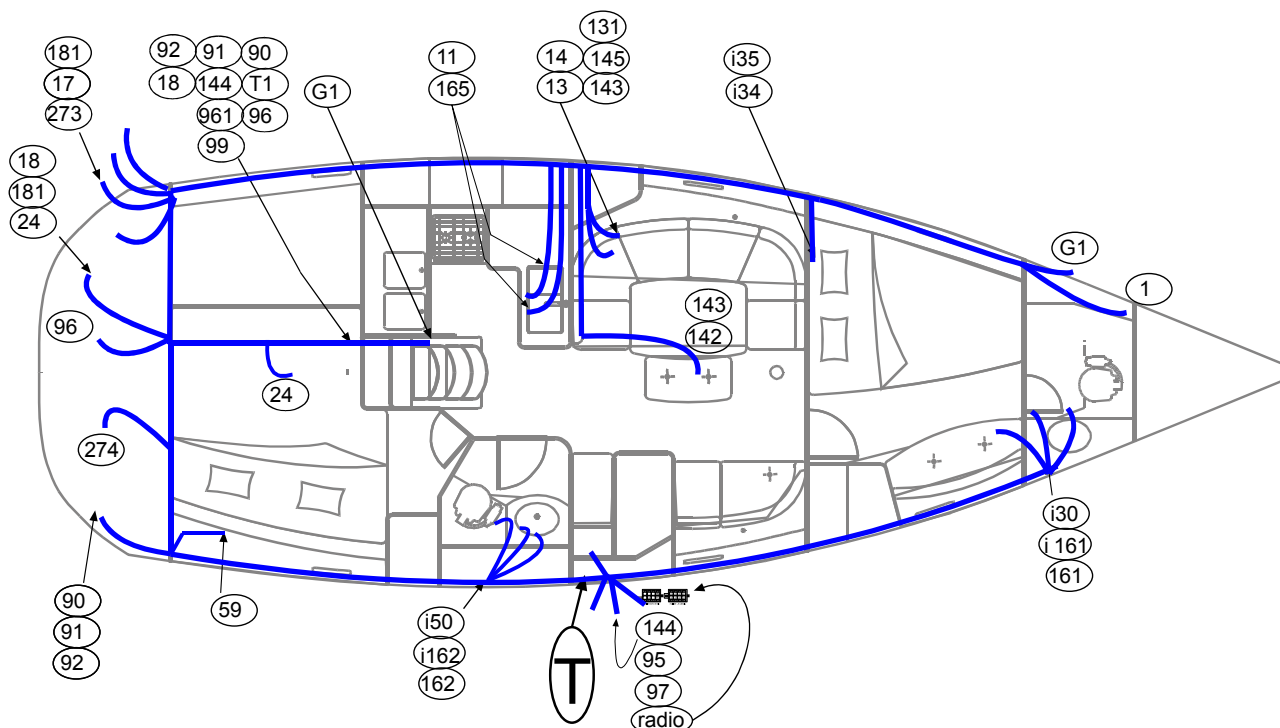

### 2 Cabin / 2 Toilet Version






|            |          |       |        |      |                  |                                      |
|------------|----------|-------|--------|------|------------------|--------------------------------------|
| 59         | 2x1.5    | R/B   | 6.600  |      | Not by the panel | Aft reading light STBD aft cabin     |
| 96         | 8x2      | R/B   | 6.000  |      |                  | 12V autopilot                        |
| 961        | 14x2     | R/B   | 10.700 |      |                  | Autopilot relay                      |
| 144        | 14x2     | R/B   | 10.500 |      | Not by the panel | Constant power bilge pump            |
| 99         | 4x2      | R/B   | 10.700 |      |                  | 12V Main feed                        |
| T1         | 16x1     | R/B   | 10.700 |      |                  | Battery test                         |
|            |          |       |        |      |                  |                                      |
| 181        | 14x2     | R/B   | 6.300  |      | Not by the panel | Exhaust fan panel to fan             |
| 18         | 14x2     | R/B   | 7.300  |      | Not by the panel | Exhaust fan BSW to panel             |
| 24         | 16x2     | R/B   | 5.000  |      | Not by the panel | Fuel gauge                           |
| 274        | 16x2     | R/B   | 9.500  |      | Not by the panel | STBD outsize speaker                 |
| 162        | 14x2     | R     | 5.200  |      |                  | Aft shower drain pump                |
|            |          | B     | 2.800  |      |                  |                                      |
| 1          | 16x2     | R/B   | 16.800 |      | on connector     | Bow light                            |
| G1         | 16x2     | R/B   | 13.900 |      | Not by the panel | Elec windlass relay feed             |
| 161        | 14x2     | R     | 9.400  |      |                  | FWD shower drain pump                |
|            |          | B     | 6.800  |      |                  |                                      |
| 95         | 16x2     | R/B   | 1.600  |      |                  | Nav instruments                      |
| 97         | 16x2     | R/B   | 1.600  |      |                  | 12V V H F                            |
| 270        | 16x2     | R/B   | 0.200  |      | Not by the panel | Memory stereo                        |
| 27         | 16x2     | R/B   | 2.100  |      |                  | 12V stereo                           |
|            |          |       |        |      |                  |                                      |
| 272        | 16x2     | R/B   | 1.700  |      | Not by the panel | STBD salon speaker                   |
| 271        | 16x2     | R/B   | 1.700  |      | Not by the panel | Port salon speaker                   |
| 50         | 16x2     | R/R   | 3.000  |      |                  | STBD aft toilet ceiling light switch |
| 30         | 16x2     | R/R   | 6.900  |      |                  | FWD toilet ceiling light switch      |
| 5,6,7      | 16x3     | R     | 0,80   |      | on connector     | Main lights                          |
|            |          |       |        |      |                  |                                      |
| WIRE.<br># | SIZE AWG | COLOR | L. (m) | Code | NOTE             | DESIGNATION                          |



|   |   |             |                                     |  |   |
|---|---|-------------|-------------------------------------|--|---|
| R   | DESCRIPTION   | DATE        | DIMENSION:                          | Material:  | VISA  |
|   | <br>F48<br>DRAWING |             | TOL GEN :                           | DATE : 04/16/01  |  |
|   |   |             | Beneteau 393<br>Hull Harness - 2C2T | C6   |   |
| E   |   | wire Length | 03/01                               |  BENETEAU USA<br>P.O. Drawer 1218<br>Marion, SC 29571<br>(803) 423-4201 |   |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU |   |             |                                     |  |   |
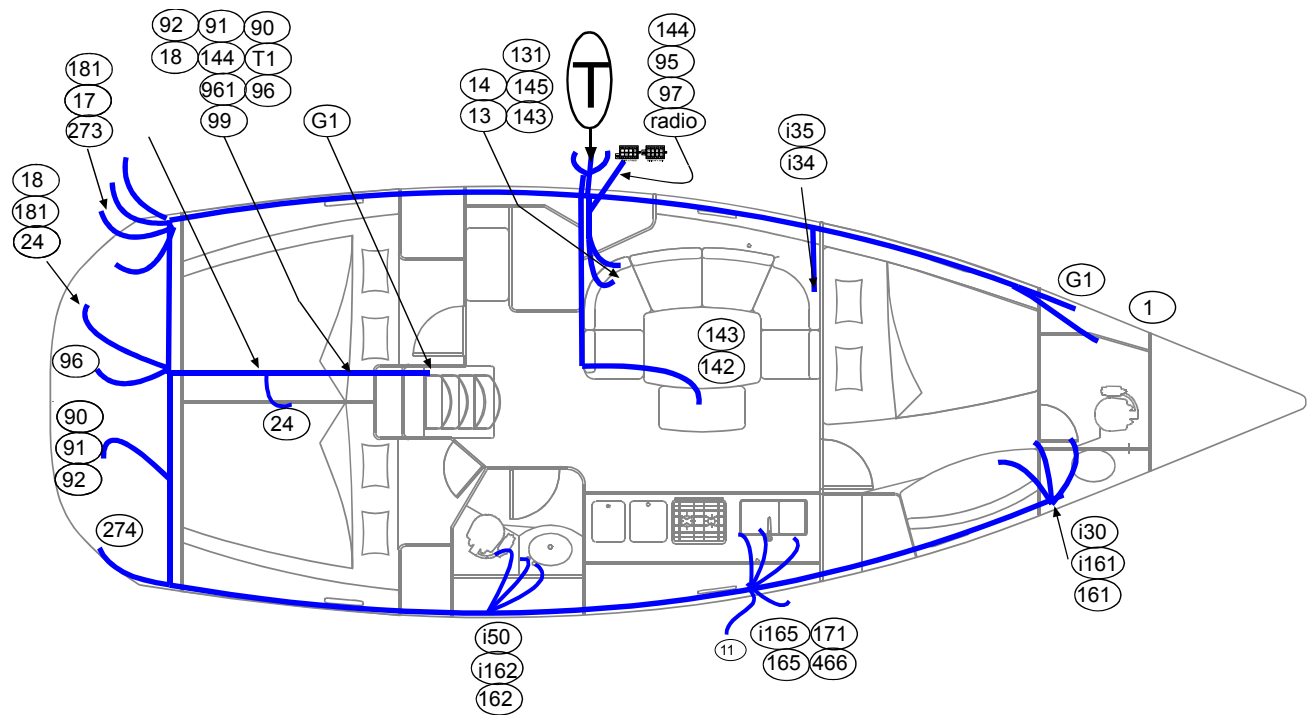
|   |   |       |        |   |                  |                                |
|---|---|-------|--------|---|------------------|--------------------------------|
| 279   | 18x1  | R     | 0.100  |   | Not by the panel | 12V for stereo antenna         |
| i35   | 18x2  | R     | 14.600 |   |                  | FWD cab reading light switch   |
| i34   | 18x2  | R     | 14.600 |   | Not by the panel | FWD cab reading light switch   |
| 131   | 14x1  | R     | 12.400 |   |                  | Fresh water pump light (mrg's) |
| 145   | 14x2  | R/B   | 12.400 |   |                  | Blige pump alarm(mrg's)        |
| 143   | 14x1  | R     | 18.400 |   |                  | Blige pump floatswitch(marion) |
| 142   | 14x2  | R/B   | 14.400 |   |                  | 2d Blige pump (mrg's)          |
|   |   |       |        |   |                  |                                |
| 165   | 14x2  | R     | 17.400 |   |                  | Ice box drain pump             |
|   |   | B     | 13.400 |   |                  |                                |
| 11  | 8x2   | R/B   | 13.900 |   |                  | Fridge                         |
| 14  | 14x2  | R/B   | 12.600 |   |                  | Blige pump                     |
| 13  | 14x2  | R/B   | 11.800 |   |                  | Fresh water pump               |
| 171   | 16x2  | R/B   | 14.400 |   |                  | LPG solenoid light (moorings)  |
| 273   | 16x2  | R/B   | 9.500  |   | Not by the panel | Port outside speaker           |
| 17  | 16x2  | R/B   | 9.300  |   |                  | Propane solenoid               |
|   |   |       |        |   |                  |                                |
| 92  | 8x1   | R     | 6.900  |   | Not by the panel | Batt charger to engine battery |
| 91  | 8x1   | R     | 6.900  |   | Not by the panel | Bat charger to house batteries |
| 90  | 8x1   | B     | 6.900  |   | Not by the panel | Negative Bat charger           |
|   |   |       |        |   |                  |                                |
|   |   |       |        |   |                  |                                |
| WIRE #  | SIZE AWG  | COLOR | L. (m) | Code  | NOTE             | DESIGNATION                    |
| R   | DESCRIPTION   |       | DATE   | DIMENSION:  |                  | Material:                      |
|   |  |       |        |   | TOL GEN :        | DATE : 04/16/01                |
|   |   |       |        | Beneteau 393<br>Hull Harness - 2C2T   |                  | C6                             |
|   |   |       |        | BENETEAU USA<br>P.O. Drawer 1218<br>Marion, SC 29571<br>(803) 423-4201                |                  | Part No: 051938-E              |
| E   | wire Length   |       | 03/01  |  |                  |                                |
|   |   |       |        |   |                  |                                |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU |   |       |        |   |                  |                                |


3 Cabin / 2 Toilet Version



| WIRE #   | SIZE AWG  | COLOR | L. (m)  | Code                      | NOTE             | DESIGNATION                        |
|--|---|-------|---|---------------------------|------------------|------------------------------------|
| T1   | 16x1  | R/B   | 10.900  |                           |                  | Battery test                       |
| 1  | 16x2  | R/B   | 8.400   |                           | Not by the panel | Bow light                          |
| 181  | 14x2  | R/B   | 6.000   |                           | Not by the panel | Exhaust fan panel to fan           |
| 18   | 14x2  | R/B   | 7.000   |                           | Not by the panel | Exhaust fan BSW to panel           |
| 24   | 16x2  | R/B   | 4.700   |                           | Not by the panel | Fuel gauge                         |
| 17   | 16x2  | R/B   | 8.200   |                           |                  | LPG solenoid                       |
| 273  | 16x2  | R/B   | 9.500   |                           | Not by the panel | Port outside speaker               |
| G1   | 16x2  | R/B   | 13.700  |                           |                  | Elec.windlass relay feed           |
| i35  | 16x2  | R     | 6.100   |                           | Not by the panel | FWD cabin reading light switch     |
| i34  | 16x2  | R     | 6.100   |                           | Not by the panel | FWD cabin reading light switch     |
| 131  | 14x1  | R     | 3.500   |                           |                  | Fresh water pump light (mrg's)     |
| 145  | 14x2  | R/B   | 3.500   |                           |                  | Bilge pump alarm (mrg's)           |
| 143  | 14x1  | R     | 8.500   |                           |                  | Bilge pump float switch (marion)   |
| 142  | 14x2  | R/B   | 4.900   |                           |                  | 2d bilge pump (mrg's)              |
| 14   | 14x2  | R/B   | 4.100   |                           |                  | Bilge pump                         |
| 13   | 14x2  | R/B   | 3.900   |                           |                  | Fresh water pump                   |
| 95   | 16x2  | R/B   | 1.600   |                           |                  | Nav. Instruments                   |
| 97   | 16x2  | R/B   | 1.600   |                           |                  | 12V.VHF                            |
| 270  | 16x2  | R/B   | 0.200   |                           | Not by the panel | Memory stereo                      |
| 27   | 16x2  | R/B   | 1.300   |                           |                  | 12V stereo                         |
| 272  | 16x2  | R/B   | 0.900   |                           | Not by the panel | STBD Salon speaker                 |
| 271  | 16x2  | R/B   | 0.900   |                           | Not by the panel | Port salon speaker                 |
| 50   | 16x2  | R/R   | 13.000  |                           | On connector     | STBDaft toiletceiling light switch |
| 30   | 16x2  | R/R   | 17.200  |                           |                  | FWD toilet ceiling light switch    |
| WIRE #   | SIZE AWG  | COLOR | L. (m)  | Code                      | NOTE             | DESIGNATION                        |
| R  | DESCRIPTION   | DATE  | DIMENSION:  | MATERIAL:                 | VISA             |                                    |
|  |   |       | TOL GEN :   | DATE : 04/16/01           |                  |                                    |
|  |  |       | <b>Beneteau 393</b><br>Hull harness 3c2t                                      | <b>F6</b>                 |                  |                                    |
|  |  |       | <b>BENETEAU USA</b><br>P.O. Drawer 1218<br>Marion, SC 29571<br>(803) 423-4201 | Part No:<br><b>051941</b> | <b>E</b>         |                                    |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU<br>DRAWN BY BENETEAU - SPECIFIED AND DESIGNED BY PRODUCT MANUFACTURER. |   |       |   |                           |                  |                                    |


| WIRE #   | SIZE AWG  | COLOR | L. (m)  | Code                      | NOTE             | DESIGNATION                    |
|--|---|-------|---|---------------------------|------------------|--------------------------------|
| 16x2   |   |       |   |                           |                  |                                |
| 279  | 16x1  | R     | 0.100   |                           | Not by the panel | 12V for styereo antenna        |
| 5,6,7  | 16x3  | R     | 0.800   |                           |                  | Mast lights                    |
| 161  | 14x2  | R     | 18.800  |                           |                  | Fwd shower drain pump          |
| 165  | 14x2  | R     | 18.000  |                           |                  | Ice-box frairn pump            |
| 171  | 14x2  | R     | 17.100  |                           |                  | LPG solenoid (moorings)        |
| 11   | 8x2   | R/B   | 15.100  |                           |                  | Fridge                         |
| 162  | 14x2  | R     | 15.200  |                           |                  | Alt shower drain pump          |
| 274  | 16x2  | R/B   | 8.900   |                           | Not by the panel | STBD outside speaker           |
| 92   | 8x1   | R     | 7.200   |                           | Not by the panel | Bat.charger to engine battery. |
| 91   | 8x1   | R     | 7.200   |                           | Not by the panel | Bat.charger to house battery   |
| 90   | 8x1   | B     | 7.200   |                           | Not by the panel | Negative battery charger       |
| 96   | 8x2   | R/B   | 6.000   |                           | Not by the panel | 12V Autopilot                  |
| 961  | 14x2  | R/B   | 10.900  |                           |                  | Autopilot realy                |
| 144  | 14x2  | R/B   | 10.700  |                           | Not by the panel | Constant power bilge pump      |
| 99   | 4x2   | R/B   | 10.900  |                           |                  | 12V Main feed                  |
| WIRE #   | SIZE AWG  | COLOR | L. (m)  | Code                      | NOTE             | DESIGNATION                    |
| R  | DESCRIPTION   | DATE  | DIMENSION:  | MATERIAL:                 | VISA             |                                |
|  |   |       | TOL GEN :   | DATE : 04/16/01           |                  |                                |
|  |    |       | <b>Beneteau 393</b><br>Hull Harness - 3C2T                                    | <b>F6</b>                 |                  |                                |
|  |  |       | <b>BENETEAU USA</b><br>P.O. Drawer 1218<br>Marion, SC 29571<br>(803) 423-4201 | Part No:<br><b>051941</b> | <b>E</b>         |                                |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU<br>DRAWN BY BENETEAU - SPECIFIED AND DESIGNED BY PRODUCT MANUFACTURER. |   |       |   |                           |                  |                                |

### 2 Cabin / 2 Toilet Version

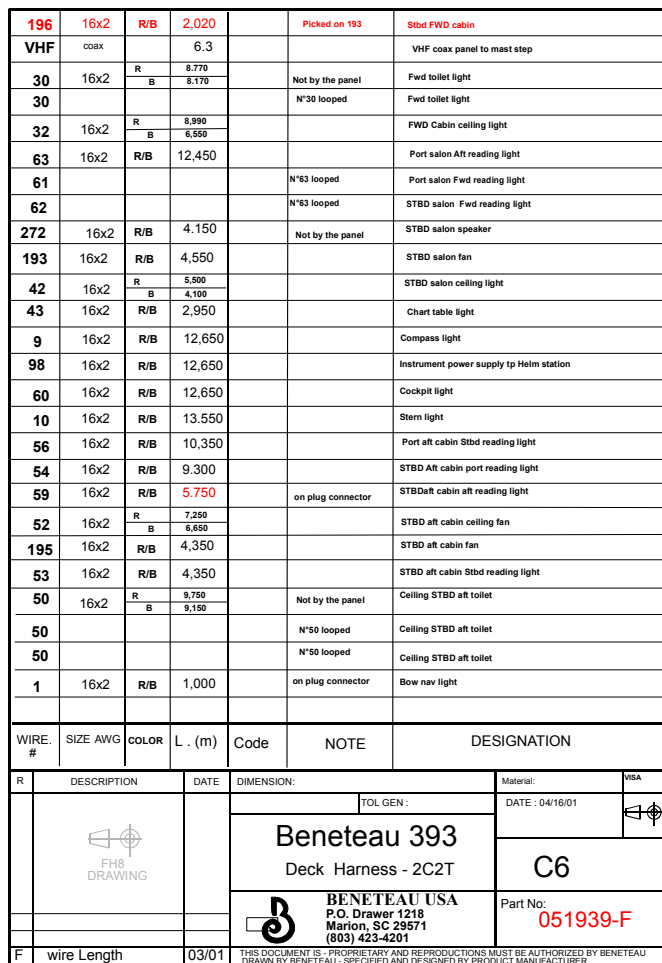

BENETEAU 393  
Dec. 4, 2002  
rev 01

### 3 Cabin / 2 Toilet Version

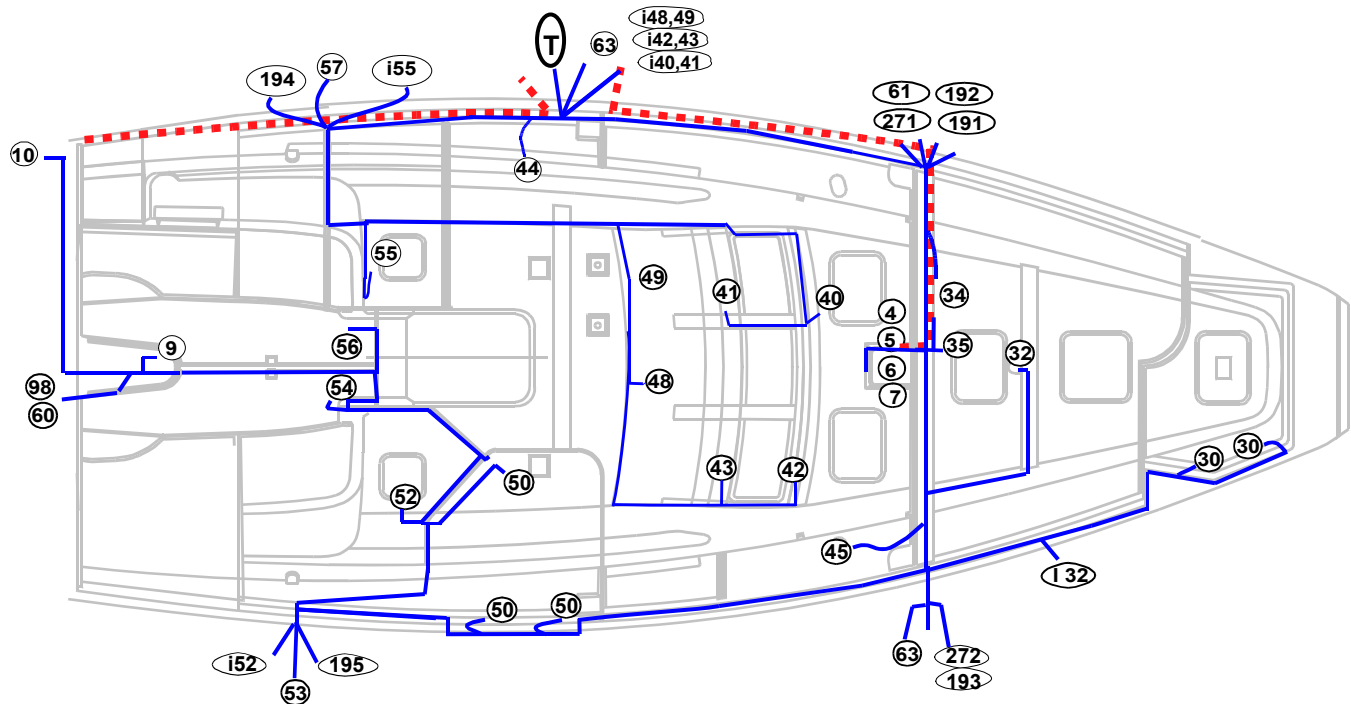

| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
|--|---------------------|-------|-----------|-----------------|------------------|---|
| VHF  | coax                |       | 6,500     |                 |                  | VHF coax                                |
| 272  | 16X2                | R/B   | 7,800     |                 | Not by the panel | STBD salon speaker                      |
| 193  | 16X2                | R/B   | 7,800     |                 |                  | STBD salon fan                          |
| 45   | 16X2                | R/B   | 8,000     |                 |                  | Galley ceiling                          |
| 32   | 16X2                | R     | 12,240    |                 | Caution switch   | FWD cabin ceiling                       |
| 8  | 14X1                | B     | 6,200     |                 |                  | Negative mast                           |
| 5,6,7  | 16X3                | R     | 5,800     |                 |                  | Mast lights                             |
| 4  | 16X1                | R     | 6,200     |                 |                  | Tricolor mast light                     |
| 35   | 16X2                | R     | 6,800     |                 |                  | STBD reading light FWD cabin            |
| 34   | 16X2                | R     | 6,150     |                 |                  | Port reading light Fwd cabin            |
| 192  | 16X2                | R/B   | 4,650     |                 |                  | Port salon fan                          |
| 191  | 16X2                | R/B   | 4,650     |                 |                  | FWD cabin fan                           |
| 271  | 16X2                | R/B   | 4,650     |                 | Not by the panel | Port salon speaker                      |
| 41   | 16X2                | R     | 12,150    |                 | Not by the panel | Port salon ceiling light                |
| 40   |                     |       | 10,150    |                 | N°41 looped      | Port salon ceiling light                |
| 48   | 16X2                | R     | 12,850    |                 |                  | Aft salon ceiling light                 |
| 49   |                     |       | 10,850    |                 | N°48 looped      | Chart table ceiling light               |
| 55   | 16X2                | R     | 8,150     |                 |                  | Port aft cabin ceiling light            |
| 57   | 16X2                | R/B   | 4,250     |                 |                  | Fwd reading light port aft cabin        |
| 194  | 16X2                | R/B   | 4,150     |                 |                  | Port aft cabin fan                      |
| 63   | 16X2                | R/B   | 10,400    |                 | N°63 looped      | Aft reading light port salon            |
| 61   |                     |       |           |                 | N°63 looped      | Fwd reading light port salon            |
| 62   |                     |       |           |                 | N°63 looped      | Fwd reading light STBD salon            |
| 44   | 16X2                | R/B   | 2,850     |                 |                  | Red nav light chart table               |
| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
| 9  | 16x2                | R/B   | 20,200    |                 |                  | Compass light                           |
| 60   | 16x2                | R/B   | 20,200    |                 |                  | Cockpit light                           |
| 98   | 16x2                | R/B   | 20,200    |                 |                  | Instrument power supply to helm station |
| 10   | 16x2                | R/B   | 21,300    |                 |                  | Stern light                             |
| 56   | 16x2                | R/B   | 18,100    |                 |                  | Stbd reading light port aft cabin       |
| 54   | 16x2                | R/B   | 17,050    |                 |                  | Port reading light aft STB d cabin      |
| 53   | 16x2                | R/B   | 12,100    |                 |                  | Stbd reading light aft STBD             |
| 195  | 16x2                | R/B   | 12,100    |                 |                  | Fan aft STBD cabin                      |
| 52   | 16x2                | R     | 15,000    |                 |                  | Ceiling light Aft STBD cabin            |
| 50   | 16x2                | R     | 14,400    |                 |                  |   |
| 50   |                     |       | 17,300    |                 | Not by the panel | STBD aft toilet lights                  |
| 50   |                     |       | 16,700    |                 | N°50 looped      | STBD aft toilet lights                  |
| 50   |                     |       |           |                 | N°50 looped      | STBD aft toilet lights                  |
| 43   | 16x2                | R     | 14,95     |                 |                  | Aft ceiling STBD salon                  |
| 42   |                     |       | 12,950    |                 | N°43 looped      | Fwd ceiling STBD salon                  |
| 30   | 16x2                | R     | 12,020    |                 |                  | Fwd toilet lights                       |
|  |                     | B     | 11,420    |                 | Not by the panel |   |
| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
| R  | DESCRIPTION         | DATE  | DIMENSION | MATERIAL        | VISA             |   |
|  | FH8 DRAWING         |       | TOL GEN : | DATE : 04/16/01 |                  |   |
|  | Beneteau 393        |       |           | F6              |                  |   |
|  | Deck Harness - 3C2T |       |           |                 |                  |   |
|  | BENETEAU USA        |       |           | Part No:        |                  |   |
|  | P.O. Drawer 1218    |       |           | 051942 C        |                  |   |
|  | Marion, SC 29571    |       |           |                 |                  |   |
|  | (803) 423-4201      |       |           |                 |                  |   |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU<br>DRAWN BY BENETEAU - SPECIFIED AND DESIGNED BY PRODUCT MANUFACTURER. |                     |       |           |                 |                  |   |

| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
|--|---------------------|-------|-----------|-----------------|------------------|---|
| VHF  | coax                |       | 6,500     |                 |                  | VHF coax                                |
| 272  | 16X2                | R/B   | 7,800     |                 | Not by the panel | STBD salon speaker                      |
| 193  | 16X2                | R/B   | 7,800     |                 |                  | STBD salon fan                          |
| 45   | 16X2                | R/B   | 8,000     |                 |                  | Galley ceiling                          |
| 32   | 16X2                | R     | 12,240    |                 | Caution switch   | FWD cabin ceiling                       |
| 8  | 14X1                | B     | 6,200     |                 |                  | Negative mast                           |
| 5,6,7  | 16X3                | R     | 5,800     |                 |                  | Mast lights                             |
| 4  | 16X1                | R     | 6,200     |                 |                  | Tricolor mast light                     |
| 35   | 16X2                | R     | 6,800     |                 |                  | STBD reading light FWD cabin            |
| 34   | 16X2                | R     | 6,150     |                 |                  | Port reading light Fwd cabin            |
| 192  | 16X2                | R/B   | 4,650     |                 |                  | Port salon fan                          |
| 191  | 16X2                | R/B   | 4,650     |                 |                  | FWD cabin fan                           |
| 271  | 16X2                | R/B   | 4,650     |                 | Not by the panel | Port salon speaker                      |
| 41   | 16X2                | R     | 12,150    |                 | Not by the panel | Port salon ceiling light                |
| 40   |                     |       | 10,150    |                 | N°41 looped      | Port salon ceiling light                |
| 48   | 16X2                | R     | 12,850    |                 |                  | Aft salon ceiling light                 |
| 49   |                     |       | 10,850    |                 | N°48 looped      | Chart table ceiling light               |
| 55   | 16X2                | R     | 8,150     |                 |                  | Port aft cabin ceiling light            |
| 57   | 16X2                | R/B   | 4,250     |                 |                  | Fwd reading light port aft cabin        |
| 194  | 16X2                | R/B   | 4,150     |                 |                  | Port aft cabin fan                      |
| 63   | 16X2                | R/B   | 10,400    |                 | N°63 looped      | Aft reading light port salon            |
| 61   |                     |       |           |                 | N°63 looped      | Fwd reading light port salon            |
| 62   |                     |       |           |                 | N°63 looped      | Fwd reading light STBD salon            |
| 44   | 16X2                | R/B   | 2,850     |                 |                  | Red nav light chart table               |
| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
| 9  | 16x2                | R/B   | 20,200    |                 |                  | Compass light                           |
| 60   | 16x2                | R/B   | 20,200    |                 |                  | Cockpit light                           |
| 98   | 16x2                | R/B   | 20,200    |                 |                  | Instrument power supply to helm station |
| 10   | 16x2                | R/B   | 21,300    |                 |                  | Stern light                             |
| 56   | 16x2                | R/B   | 18,100    |                 |                  | Stbd reading light port aft cabin       |
| 54   | 16x2                | R/B   | 17,050    |                 |                  | Port reading light aft STB d cabin      |
| 53   | 16x2                | R/B   | 12,100    |                 |                  | Stbd reading light aft STBD             |
| 195  | 16x2                | R/B   | 12,100    |                 |                  | Fan aft STBD cabin                      |
| 52   | 16x2                | R     | 15,000    |                 |                  | Ceiling light Aft STBD cabin            |
| 50   | 16x2                | R     | 14,400    |                 |                  |   |
| 50   |                     |       | 17,300    |                 | Not by the panel | STBD aft toilet lights                  |
| 50   |                     |       | 16,700    |                 | N°50 looped      | STBD aft toilet lights                  |
| 50   |                     |       |           |                 | N°50 looped      | STBD aft toilet lights                  |
| 43   | 16x2                | R     | 14,95     |                 |                  | Aft ceiling STBD salon                  |
| 42   |                     |       | 12,950    |                 | N°43 looped      | Fwd ceiling STBD salon                  |
| 30   | 16x2                | R     | 12,020    |                 |                  | Fwd toilet lights                       |
|  |                     | B     | 11,420    |                 | Not by the panel |   |
| WIRE #   | SIZE AWG            | COLOR | L. (m)    | Code            | NOTE             | DESIGNATION                             |
| R  | DESCRIPTION         | DATE  | DIMENSION | MATERIAL        | VISA             |   |
|  | FH8 DRAWING         |       | TOL GEN : | DATE : 04/16/01 |                  |   |
|  | Beneteau 393        |       |           | F6              |                  |   |
|  | Deck Harness - 3C2T |       |           |                 |                  |   |
|  | BENETEAU USA        |       |           | Part No:        |                  |   |
|  | P.O. Drawer 1218    |       |           | 051942 C        |                  |   |
|  | Marion, SC 29571    |       |           |                 |                  |   |
|  | (803) 423-4201      |       |           |                 |                  |   |
| THIS DOCUMENT IS - PROPRIETARY AND REPRODUCTIONS MUST BE AUTHORIZED BY BENETEAU<br>DRAWN BY BENETEAU - SPECIFIED AND DESIGNED BY PRODUCT MANUFACTURER. |                     |       |           |                 |                  |   |

## LAY OUT OF THE CONDUITS


Conduits in deck




Conduits in hull



2 Cabin / 2 Toilet

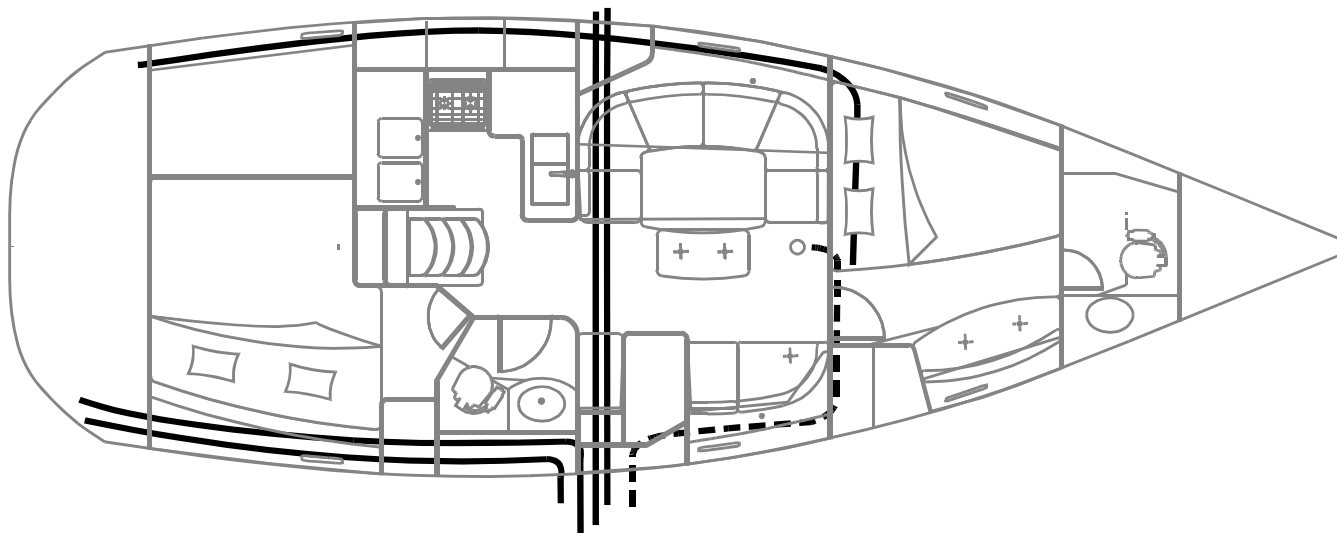

3 Cabin / 2 Toilet

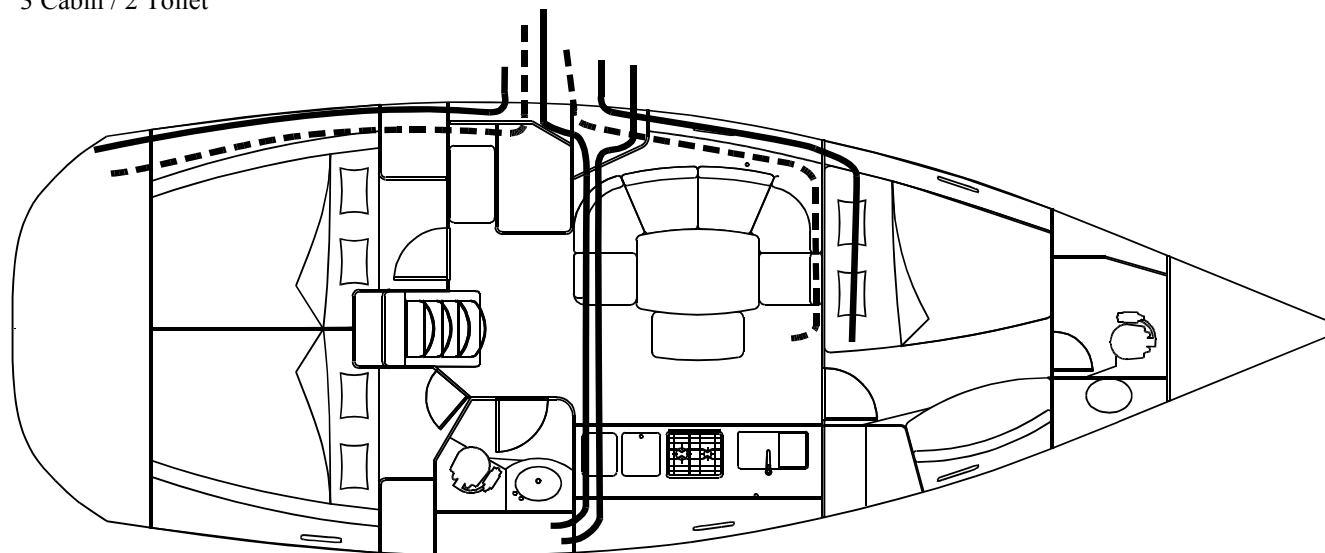

## **XVIII) LP GAS SYSTEM**

### Gas Stove

The boat is delivered without a fire extinguisher. It is your responsibility to comply with the laws and regulations of your country (Number, capacity, type and place of fire extinguishers). We advise you to install an extinguisher less than 5 meters away from the center of each berth, less than 2 meters away from the extinguisher aperture in the engine compartment, less than 2 meters away from any open flame device and less than 1 meter away from the helm pedestal or cockpit. We advise a total capacity of the portable extinguishers reaching 8A/64B, each extinguisher having at least a 5A/34B capacity. The CO2 extinguishers shall be used to fight fires in the galley and electric fires.

**Do not install or store flammable materials above the stove (Curtains, papers, napkins, etc...)**

**Never leave the boat unattended when the LP gas appliances are in use.**

The appliances, which use fuel, consume the oxygen within the cabin and release combustion products into the boat. It is necessary to ventilate the boat when using the gas cooking appliances. Do not obstruct the air vents of the boat.

**Do not smoke or use an open flame when you are trying to locate a gas leak, change the gas bottle or work on the gas system.**

**If you smell gas or find that the burners have gone out by accident, (although appliance models cut off the gas automatically if the flames go out) turn off the gas valves and ventilate the boat in order to get rid of any residual gas. Find the cause of the problem before re-lighting the appliance.**

**Do not use cooking appliances to heat the inside of the boat.**

**Make sure that the burner valves are turned off before you turn on the 12V solenoid and the valve on the cylinder.**

**Turn off the 12V solenoid and the valve on the cylinder when you do not use the appliances.**

Do not obstruct the access to the gas system components, in particular the access to the valves (cylinders and gas cooker).

The flexible hoses, which connect the gas cylinder at one end of the system and the stove at the other end, shall be changed in pursuance of the regulations in force in your country. Only use hoses, which meet the safety standards of your country.

Do not use the gas cylinder storage space to store other equipment.

Pay particular attention to keep in good condition the screw thread of the cylinder on which the regulator is attached. Check the condition of the regulator every year and change it if necessary. Use a regulator identical to the one which is fitted.



Make sure that the valve of the empty cylinder is turned off and disconnected from the system.

Do not use ammonia-based products to clean any part of the system or to discover a leak.

**The LP gas system should be checked for leaks on a regular basis. See the manual provided with the stove for instructions.**

## LAY OUT OF THE GAS SYSTEM

| REF | DESCRIPTION            |
|-----|------------------------|
| 1   | Gas Locker             |
| 2   | Valve and Regulator    |
| 3   | Gas Locker Ventilation |

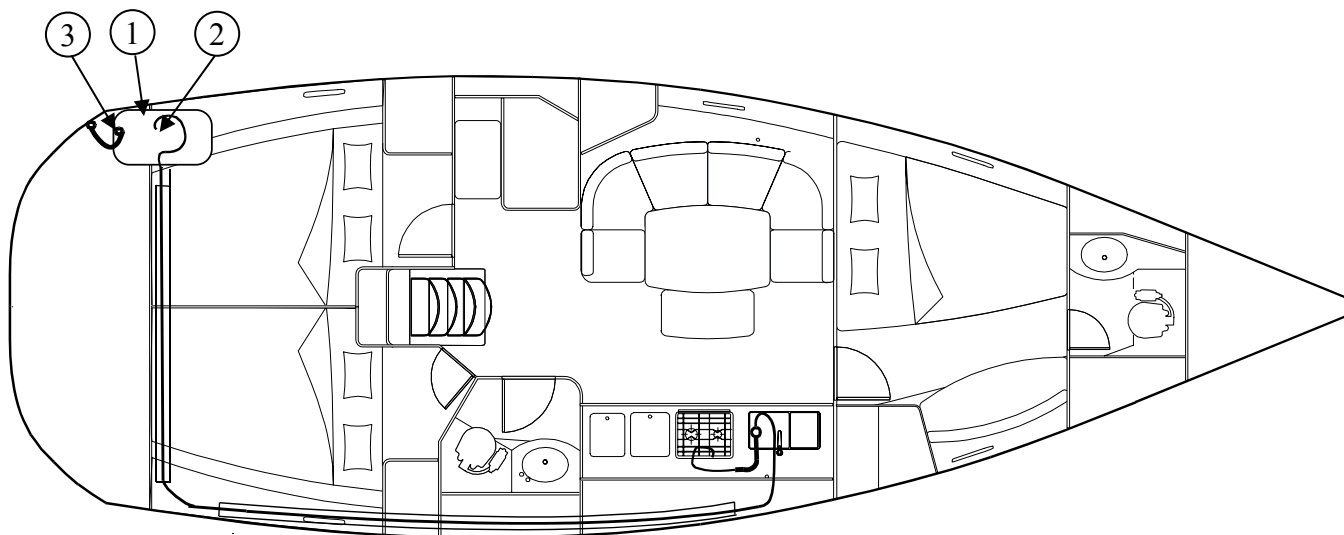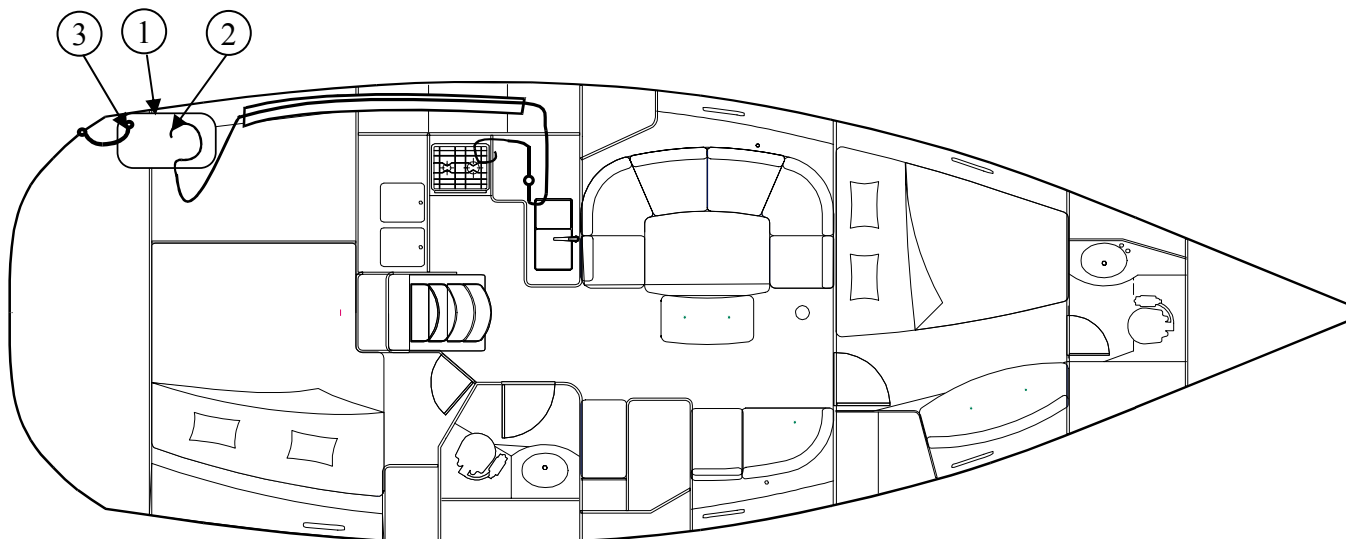




## **XIX) EMERGENCY STEERING SYSTEM**


Your boat is provided with an emergency tiller for use if there is a failure in the wheel steering system.

Check at least once a year that the steering cables are properly tightened and lubricated.

To use the emergency tiller, remove the cover over the rudder stock by using a winch handle; insert the tiller into the socket on the rudderstock. You may remove the steering wheel while using the tiller, to improve the tiller handle clearance.

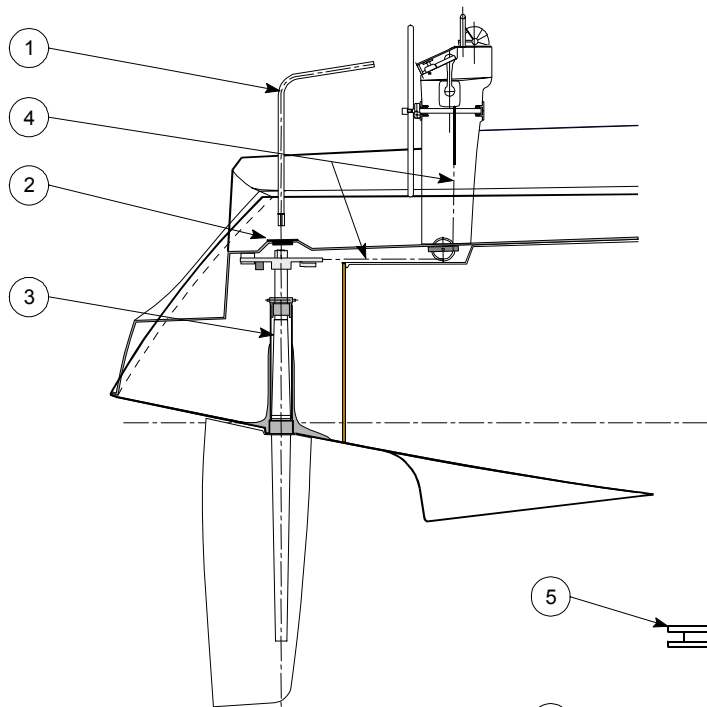

| REF | DESCRIPTION                |
|-----|----------------------------|
| 1   | Emergency Tiller           |
| 2   | Cap Over Rudder Stock      |
| 3   | Rudder Stock               |
| 4   | Steering Cable             |
| 5   | Quadrant                   |
| 6   | Upper Rudder Shaft Bearing |
| 7   | Split Sleeve               |
| 8   | Compensation Washer        |

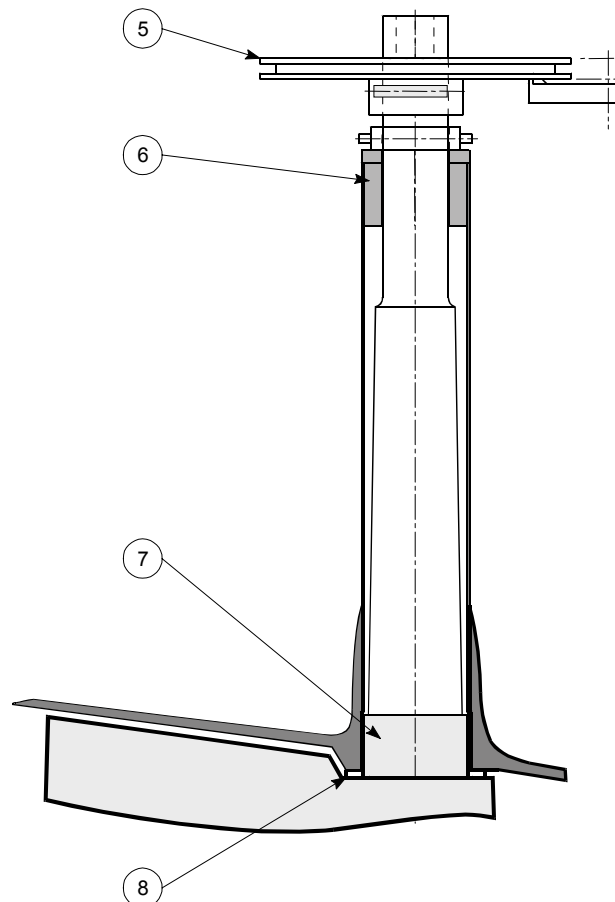

## **XX) ENGINE**

### STARTING THE ENGINE

Insert the ignition key and turn it to "ON" (and then to the intermediate preheat position if your boat's engine has this system). A warning alarm will sound as you start up - the engine manual explains the meaning of this alarm and its operation. Press the starter button or turn the key, as appropriate, and release the button or key, as soon as the engine is running.

**CHECK THE ENGINE EXHAUST FOR COOLING WATER DISCHARGE, IMMEDIATELY STOP THE ENGINE AND CHECK THE RAW WATER SYSTEM. IF NO COOLING WATER IS DISCHARGED FROM THE EXHAUST.**

Let the engine run for a moment, and then bring the throttle lever back to the idle position. After you engage the clutch, increase the engine speed very gradually (it should take at least five minutes to reach cruising speed), because a diesel engine will warm up only when it is under load.

Do not operate the starter for more than 10 seconds at a time. If the engine does not start, wait at least 30 seconds before trying again.

**CAUTION! OVER CRANKING ENGINE WITH WATER LIFT MUFFLER CAN CAUSE DAMAGE! IF THE ENGINE DOES NOT START-CLOSE THRU HULL AND SEEK ASSISTANCE.**

Once engine has started, check that the warning lights for oil and coolant pressure have gone out, and that the batteries are charging properly.

Check that the coolant water is circulating correctly, water should be either venting through the exhaust or passing through the heat-exchanger return circuit, depending on the cooling system fitted.

**CAUTION! NEVER OPERATE THE BATTERY CIRCUIT SWITCH OR THE IGNITION KEY WHEN THE ENGINE IS RUNNING. THE RESULTING CURRENT SURGE WILL DAMAGE THE ALTERNATOR DIODES.**

Engage the clutch firmly but not harshly. Do not rev the engine hard. When shifting from forward to reverse, or vice versa, the lever should be held in the neutral position for a moment before proceeding. Shifting should be performed with RPM reduced to idle. Keep a regular watch to make sure that the coolant water is circulating properly.

### STOPPING THE ENGINE

To stop the engine:

1. Place throttle/transmission lever in the idle/neutral position.
2. Let engine idle for one (1) minute to allow it to cool down.
3. Engage the engine kill button until the engine stops.
4. Turn the key to the "OFF" position.

**CAUTION! DO NOT SWITCH BATTERY SELECTOR UNTIL THE ENGINE HAS COME TO A COMPLETE STOP! THIS WILL PREVENT ALTERNATOR DIODE DAMAGE.**

**CAUTION! IF YOU CLOSE THE FUEL AND SEA WATER VALVES AFTER STOPPING THE ENGINE, BE SURE TO RE-OPEN THEM BEFORE RESTARTING. FAILURE TO DO SO COULD CAUSE ENGINE TO OVER-HEAT AND CAUSE DAMAGE TO THE PUMP IMPELLER OR CAUSE FUEL LINES TO BECOME AIR LOCKED.**


Stop the engine; and do not smoke while you are filling up the fuel tank.

Before you start the engine, make sure that the engine compartment bilge is clean and dry. If there is the slightest presence of fuel in the engine compartment, you must not start the engine.


Fuel that is stored outside the tanks (spare cans, jerrycans) should be kept and stored in a ventilated place.

Know exactly where the fire extinguisher aperture is located so you will be able to put out a fire breaking out in the engine compartment.

| REF       | DESCRIPTION                          | REF       | DESCRIPTION                           |
|-----------|--------------------------------------|-----------|---------------------------------------|
| 1         | Engine Ventilation Cowl              | 16        | Propeller                             |
| 2         | Engine Ventilation Hose              | 17        | Exhaust Hose                          |
| 3         | Anti- Siphon Valve                   | 18        | Hatch to the Engine                   |
| 4         | Companionway Stair                   | 19        | Battery Switches                      |
| <b>5</b>  | <b>Fire Extinguisher aperture</b>    | 20        | Intake Strainer                       |
| 6         | House Battery                        | 21        | Engine Panel (at port helm station)   |
| 7         | Engine                               | 22        | Skeg                                  |
| 8         | Coupling Plate                       | 23        | Exhaust Outlet                        |
| 9         | Muffler                              | 24        | Sea Water Filter                      |
| <b>10</b> | <b>Engine Water Intake</b>           | 25        | Fuel Filter                           |
| 11        | Engine Control Handle in the Cockpit | 26        | Engine Stop Control (on engine panel) |
| 12        | Shaft Seal                           | <b>27</b> | <b>Fuel Shutoff Control</b>           |
| 13        | Propeller Shaft                      | 28        | Fuel – Deck Fill                      |
| 14        | Fuel Tank                            | 29        | Stern Tube Valve                      |
| 15        | Stern Tube                           | 30        | Engine Battery                        |

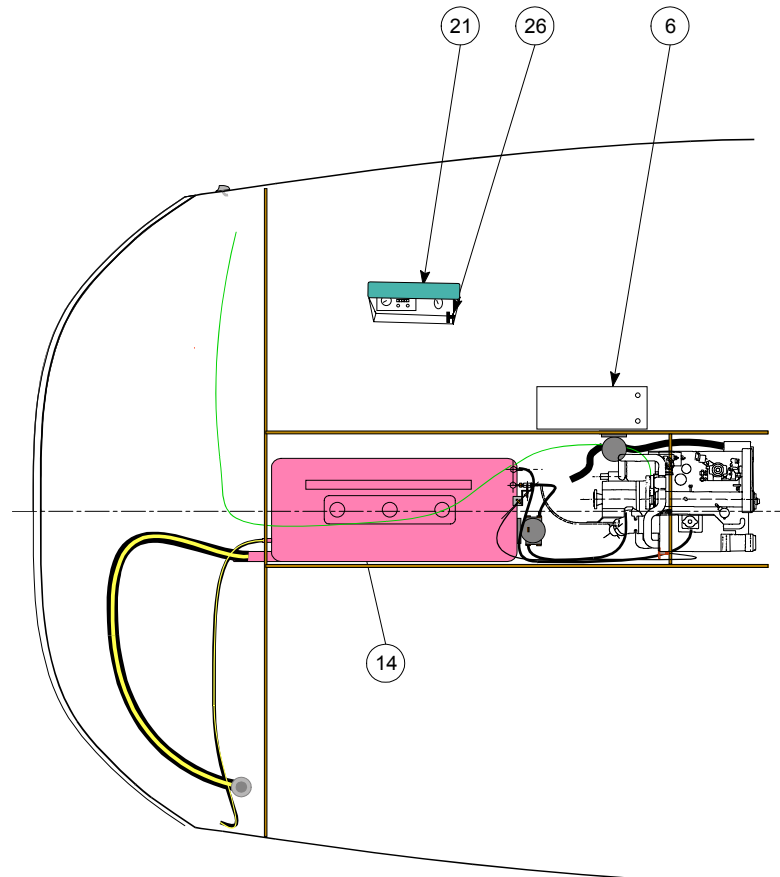

# ENGINE LAY OUT



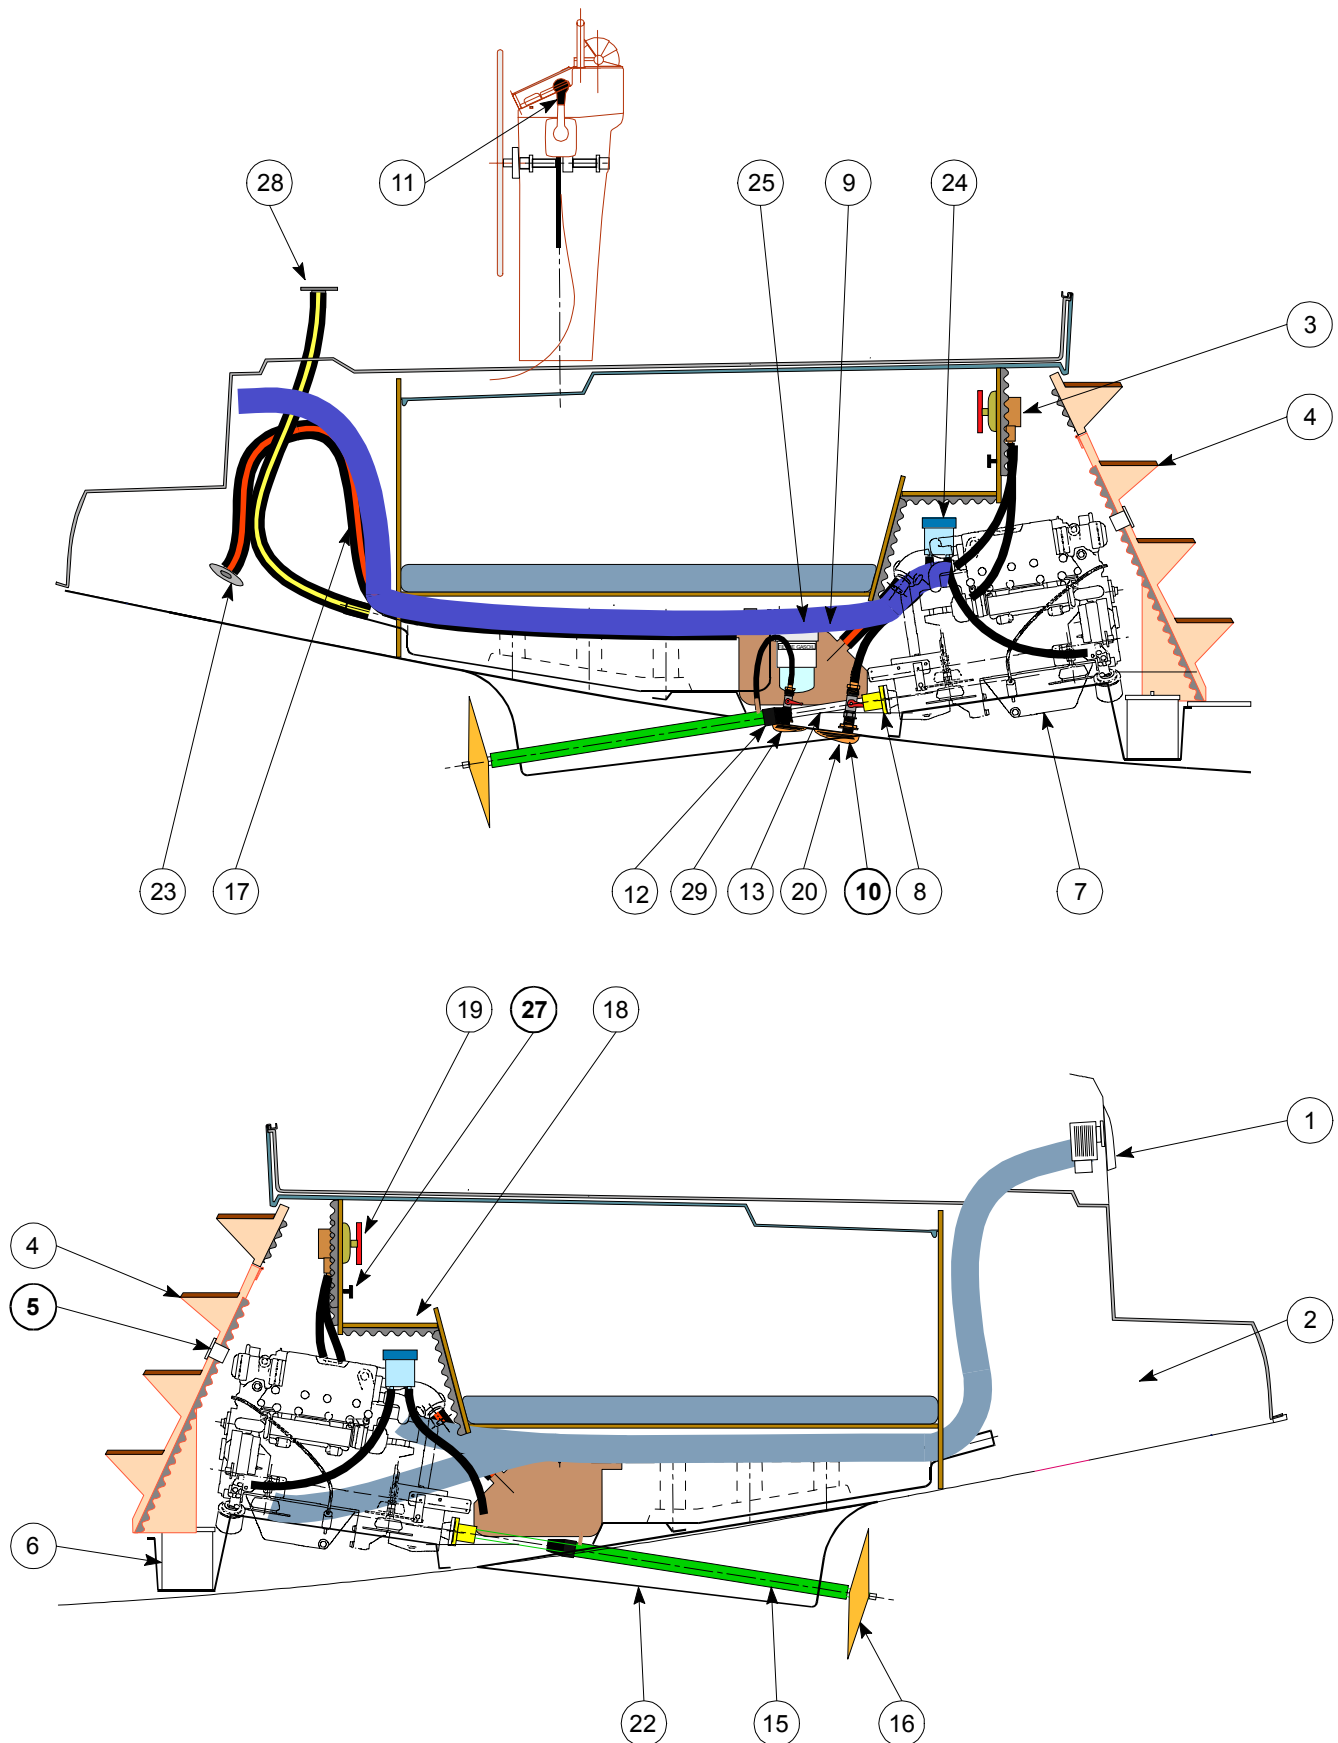


## **XXI) HANDLING**

Contact your BENETEAU dealer for maintenance and repair of your boat. The dealer will advise properly, or will supply you with the spare parts you need or the materials that are suited to your boat.

Have your boat hauled & serviced once a year.

### POSITION OF LIFTING STRAPS AND CRADLE POSITION.

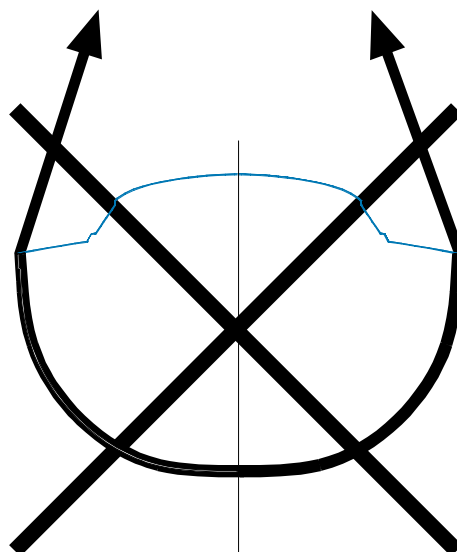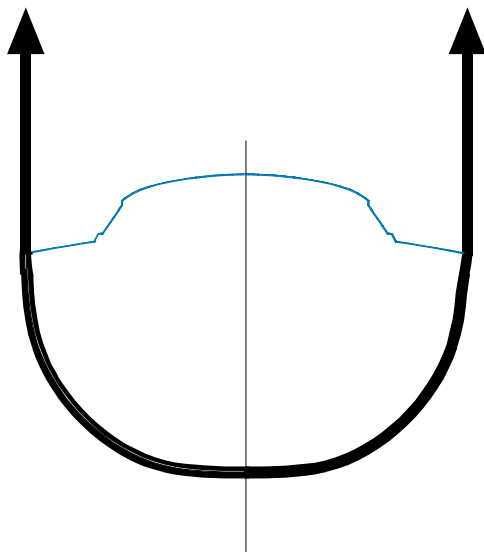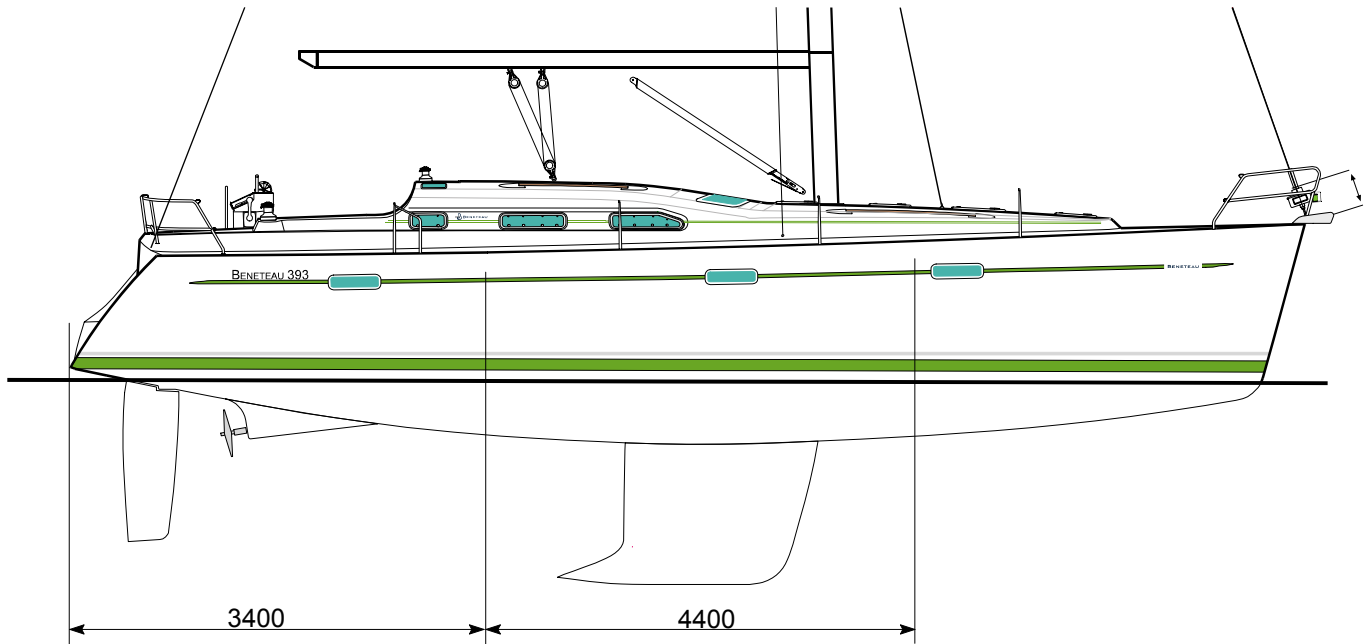

## **XXII) MAINTENANCE OF YOUR BOAT**

Your boat represents a sizable capital investment that needs special and regular care. Safeguarding your investment and looking after your own safety should persuade you of the importance of careful and regular upkeep of your boat. The maintenance suggestions in the following sections will help you with the basics. Always refer to the original manufacturer's manual for specific guidelines on individual components.

**NOTE: It is important to clean the bottom of your boat at least two or three times a year.**

### **General Hull Maintenance**

- **DO NOT SAND THE HULL WITH COARSE SANDPAPER.**
- **DO NOT USE SOLVENTS TO CLEAN HULL.**
- **DO NOT WASH WITH PRESSURE MACHINE USING WATER WARMER THAN 70 DEGREES F. (21 degrees C.).**
- **DO NOT USE PRESSURE EXCESS OF 2175 PSI (150 BAR.) WHEN USING A HIGH PRESSURE SPRAY WASH.**
- **DO NOT HOLD NOZZLE CLOSER THAN 4 INCHES (10 CM) TO SURFACE OF HULL.**
- **DO NOT MACHINE SAND.**

We believe the above points to be pertinent for all FRP boats.

### **GEL COAT**

The gel-coat is vulnerable to any nicks and scratches it may get during maneuvering in harbor and on a mooring. The best way to avoid them is to undertake maneuvering calmly, after thinking out all the relevant factors (such as speed, current, wind, and the layout of the harbor). Always have one of the crew ready to put out a fender at the right place. When bringing in the anchor chain, back off or swing the boat round so as not to rub the chain against the hull. Hold the anchor well clear as you bring it aboard so that it does not scrape the stem: lay it on deck and lash it down at once, if only temporarily.

Never use dirty fenders.

Hose off the hull and deck as often as possible, with fresh water.

Before hosing down, remember to check that the hatch covers are closed; and it is wise not to take on diesel oil or fresh water supplies while you are hosing off the hull.

After a few years, the gel coat may be re-polished, either with a lambs wool buffer and polish, or by hand using a polish or similar product. Your yard will also be able to supply you with special cleaning products for getting rid of stubborn stains.

## MINOR GEL COAT REPAIRS

To fill in a scratch or small nick, order a **Beneteau Gel coat Repair Kit** with instructions for use, from your dealer or obtain a small quantity of gel coat and catalyst.

Clean the affected area and rub it down with wet-and-dry sandpaper, then dry it off thoroughly (use a hair-dryer if necessary). Mix the components of the gel coat, and fill the scratch using a spatula avoiding any excess; cover with a sheet of cellophane. Once hardened remove cellophane and rub down with very fine wet/dry sandpaper (grade 600 or 800), and finish off by polishing the new surface.

## THE DECK AND DECK FITTINGS

Using a gentle liquid detergent, scrub all nonskid areas to keep them free of dirt.

Light-alloy sections (tracks, etc.) can be cleaned in the same manner.

The tiny spots of oxidation pitting that may appear on stainless steel parts are nothing to worry about. Polishing will remove them.

From time to time, lubricate pulley blocks and sheaves, turnbuckles, tracks and travelers with light grease or a water-repellent lubricant such as WD-40 or Triflow.

After a certain time at sea, your winches will need cleaning inside. They must be cleaned out completely once a year. Follow the manufacturer's instructions carefully.

When dismantling deck fittings, have a bowl close at hand for putting the parts in, and circle the area with a rolled dishcloth, or the like, so that any screws or springs you drop do not roll overboard. Use the lubricant recommended by the manufacturer before reassembling.

**Warning! Incorrect re-assembly can cause accidents. Note the order in which parts are dismantled, which will make it easier to put them together again later.**

Acrylic plastic hatch covers and portholes should be rinsed off with fresh water and rubbed over with a soft cloth soaked in liquid paraffin.

## THE RUDDER

Once a year, check steering gear. If necessary renew any parts (bushings, glands, etc.) that are worn. Lubricate the steering chain and cable and or gears.

Never lubricate Nylon, Ertalon or Teflon bushings, with either oil or grease, use only WD-40.

If you have wheel steering, maintenance should be in accordance with the manufacturer's recommendations.

Make regular checks on all the clamps, the condition of the quadrant, the cables or push rods, guide sheaves and the chain in the column to the wheel.

Make regular checks of the steering end stops to ensure they are adequately stopping the rotation of the rudder, this is important for direct drive push rod systems. Over rotation of the rudder could cause a steering lock up.

## INTERIOR WOOD

The internal woodwork used in most of our boats is varnished. This should be regularly rinsed off with fresh water and a little liquid detergent, then polished with a chamois leather.

Should the woodwork become damaged, gently rub it down with very fine sandpaper and touch it with several coats of the varnish. Your dealer will be able to order Beneteau varnish. When this is dry, rub it down with a very fine wet-and-dry sandpaper (grade 800 or 1000) and finish off with polish (or a silicone spray) or wax.

## ELECTRICAL SYSTEMS

It is essential for an electrical system to have a battery in sound condition to function properly. The following are some of the things to maintain a battery in the best condition.

- Keep the battery clean and the terminal posts well greased.
- Keep the battery electrolyte checked regularly
- Keep the battery fully charged.

If you have to leave your boat unused for more than a month it is best to leave your batteries with your yard so that they can be kept charged. Keep a suitable charger onboard so you can recharge your batteries at dockside without having to turn on the engine.

If you have an inboard engine, check the condition and tension of the alternator drive belt. From time to time, spray a little WD-40 or something similar on all the connections to the control panel, terminal boxes and lamp sockets. Make sure that cable grommets are watertight; smear them with Vaseline so that they do not dry out and deteriorate.



## BATTERY MAINTENANCE

Make sure that the level of the electrolyte is always at least 1/2" above the top of the plates. This level can change suddenly, due to evaporation in an overheated bilge.

**WARNING! THE ELECTROLYTE IN A BATTERY IS A SOLUTION OF SULFURIC ACID. IF ANY SHOULD ENTER THE EYES, RINSE IMMEDIATELY WITH LARGE AMOUNTS OF FRESH WATER, AND SEEK MEDICAL ATTENTION. ELECTROLYTE SPILLED ON SKIN SHOULD BE RINSED WELL WITH FRESH WATER. EVEN SMALL AMOUNTS OF ELECTROLYTE SPILLED ON CLOTHING WILL DESTROY THE CLOTHING.**

If the level is low, fill the battery with distilled water and nothing else. The level of acidity (i.e. the relative density of the electrolyte) should also be checked from time to time.

**CAUTION! USE ONLY PURE DISTILLED WATER TO REPLENISH ELECTROLYTE LEVELS. THE WATER FROM MANY CITY WATER SUPPLY SYSTEMS IS UNSATISFACTORY FOR BATTERY USE.**

Keep battery connections clean and tight. A cup full of strong baking soda solution and a toothbrush will clean corrosion from the terminals and neutralize any spilled acid (do not allow any of the solution to enter the battery cells). A coating of petroleum jelly or silicone grease on the battery terminals will inhibit corrosion.

## WATER SYSTEM

Check all joints regularly for leaks. Keep the tank(s) filled. If, however, you have to leave the boat unattended for several months, disconnect the water lines, purge them, and rinse them thoroughly with vinegar and water so that they do not form foul-smelling deposits.

**Important:** If the electric pump continues running when all the taps are closed, switch off the power supply at once and check the water system to find and overcome the leak that is causing this.

Check the thru-hulls, seacocks, connectors and hose clamps regularly. Make sure the seacocks turn freely.

## MARINE HEAD

Maintenance consists of regularly pumping the system out with fresh water and leaving the holding tank empty whenever possible.

Check the thru-hulls, seacocks, connectors and hose clamps regularly. Make sure the seacocks turn freely.

## ENGINE

Whether maintenance of the power system is to be performed by the owner or delegated to a mechanic, it is the owner who must first initiate any action that is to take place. He must either perform the maintenance or decide to call someone to do the job. A working knowledge of the power system is essential in the first case, and preventive maintenance desirable in the second. The engine manual is, of course, the prime source for engine information and should be consulted, preferably before the fact. The following paragraphs are included as a supplement to cover any required maintenance procedures that are not a part of the engine manual.

We have already stressed the points that are of importance for an engine to keep working properly. It might be added that the engine compartment should be kept scrupulously clean; check for any unusual oil or fuel leaks. Inspect all the electrical connections frequently.

Drain the bowl of the fuel/water separator at regular intervals to lessen the chance of water damage to your engine's fuel system. Keep fuel tanks filled.

Inspect the engine mounts and coupling for loose bolts regularly.

Check the oil and coolant levels everyday.

Check the alternator belt for the correct tension, keep a spare belt on hand.

Check all hoses and fuel lines for leaks regularly.

**NOTE:** Always have a spare set of sacrificial anodes on board, and regularly check those that are already fitted for deterioration; they should be replaced when their size has been reduced by half. The time this takes will vary with the waters in which the boat is used. Water temperature, salinity, the presence of neighboring boats, the nature of the bottom and the materials in the dock will all affect the life of your boat's anodes.

Order your spare anodes thru your dealer or from Beneteau Customer Service.

### **CALIFORNIA**

#### **Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

## SAILS

Check the sails regularly, as the slightest wear in the stitching or at a reinforced part can very quickly have dramatic consequences. Keep a small sail repair kit on board and a book showing how to carry out minor work yourself until you can get the job done by a professional sail maker.

Keep a special eye on points where the sails can chafe on the rigging or fittings - turnbuckles, lifelines, shrouds, spreaders, etc.

Salt water and sunshine take their toll on sails. Whenever possible, rinse the sails in fresh water and leave them stretched out (preferably on a lawn) to dry. Never dry a sail by hoisting it and letting it flog in the wind; this will very quickly cause the sail to deteriorate. Never fold and store a damp sail.

## **XXIII) WINTERIZING PROCEDURES**

The end of the season is a good time for a complete inspection of all of the boat's systems. It is easy to take shortcuts when decommissioning your boat but proper lay-up procedures will ensure trouble free recommissioning in the spring.

The following sections are oriented towards hauling your boat for winter storage in a cold climate, but they are also a good guideline as a lay-up procedure for your Beneteau in any climate.

An improperly winterized boat will lead to costly repairs and extensive delays, we recommend winterization by a competent yard or your Beneteau Dealer. The owner must ensure that the boat is correctly winterized.

### **HAULING**

Your Beneteau should be hauled for inspection and maintenance at least once a year; the frequency of haul-outs may vary due to your local conditions and marine growth. A good boatyard is seasoned in hauling and maneuvering boats on land, you may verify this by checking to see that the weight of the hull is resting firmly on the bottom of the keel and that even contact exists along the bottom of keel. Jack stands, or cradle uprights, are meant to balance the boat and not to support its weight.

### **BOTTOM**

Clean the yacht's bottom of any growth as soon as the boat is hauled. It is generally preferred to wait until spring to paint the bottom. Use the following guidelines when using a pressure washer:

**MAXIMUM WATER TEMPERATURE TO BE 70° F. (21° C.)**

**MAXIMUM PRESSURE TO BE 2175 PSI (150 BARS) AT NO CLOSER THAN 4"**

### **CUTLASS BEARING**

The shaft strut contains a rubber type cutlass bearing. At haul out, be sure the bearing slots are clear and apply silicone lubricant or castor oil to the bearing to preserve its suppleness. Replace the cutlass bearing if excessive wear is evident. Be sure to realign the engine if the bearing is replaced. Bleed the prop shaft seal after re-launching

### **ZINC**

Replace the sacrificial zinc before re-launching the boat.

## FRESHWATER SYSTEM

This system is best winterized with one of the non-toxic antifreezes available for use in boat and recreational freshwater systems. It is an easy method, which replaces fresh water with a non-toxic antifreeze mixture.

**Caution! Be sure to use non-toxic antifreeze in the fresh water system.**

1. Allow the water in the water heater to cool, and open the pressure release valve on top. Disconnect the hot and cold water hoses and allow the tank to drain either in a bucket or into the bilge. Connect and clamp the hot and cold water hoses together using a short length of 1/2" pipe in order to bypass the heater.
2. Mix the appropriate amounts of antifreeze and water, as directed on the label, to deliver the degree of protection desired. Put 1-1/2 to 2 gallons of the solution into each water tank.
3. Open both tank selector valves on the manifold.
4. Turn on the pump and open all fixtures until antifreeze runs through. Be sure to open the hot water selector valve in order to supply antifreeze to the hot water hoses and through the bypass loop.
5. At this point, the freshwater system should be completely protected by antifreeze against freezing to a degree indicated by the strength of the solution placed into the supply tanks.
6. New boats delivered have their freshwater systems filled with antifreeze as described above, and are protected to -30 degrees F.

## HEAD

Several days before completing haul-out procedures, fresh water should be allowed to stand in the head unit to dissolve any salt accumulation in the hoses and pump. Remove all water from the head. Special lubricants for the pump's internal mechanism are available. Check with your marine hardware dealer for a recommended brand. Never put oil, gas, kerosene, or alcohol in the head or they will ruin the internal valve.

Completely pump out all waste from the holding tank and pour in a cleansing, deodorizing solution. If possible, allow this to sit in the tank overnight, then completely pump out and drain the entire system. If antifreeze is used in the system, check in the manufacturer's literature for the recommended type.

## **ENGINE**

Winterization by a marine mechanic is highly recommended to ensure that your engine is properly protected. Consult the Engine Owner's Manual for your specific engine's guidelines for winterizing. Follow the instructions carefully to ensure the engine is adequately protected. The general procedure is to replace raw seawater with an antifreeze solution mixed to protect the engine in your local area and to check the heat exchanger side to ensure that it contains an adequate antifreeze solution as well.

1. Prior to hauling the boat, run the engine to achieve normal operating temperatures in order to open the thermostat.
2. Close the raw water intake thru hull and remove the hose from the valve hose barb.
3. Insert the intake hose in a bucket of antifreeze solution and run the engine briefly until all raw water is flushed thru the exhaust system and only the antifreeze solution is expelled from the exhaust.
4. Be sure the thru hull valve is opened after the boat is hauled.

## **FUEL SYSTEM**

Consult your engine manual to clean any engine mounted fuel filters.

Drain any water from the bottom of the fuel/water separator.

The fuel tank should be kept full for winter storage with about 5% expansion room left at the top. Empty fuel tanks encourage the formation of condensation.

## **BATTERIES**

Clean battery terminals and cable ends thoroughly of any corrosion with a baking soda and water solution, and apply a light protective layer of petroleum jelly.

Batteries should be fully charged before storage, and the fluid level maintained. Store batteries in a warm, dry place. Do not store batteries directly on a stone or cement floor.

## **SEACOCKS**

Open and drain all seacocks after boat is hauled. Open all seacocks for winter storage.

## **BILGE**

Completely pump out bilge of any water and clean out any debris present. Bilge pumps should be pumped dry and hoses disconnected, to ensure that no water is left in the system.

## ICEBOX

Remove any remaining food from the icebox and wash down thoroughly with warm water and detergent solution.

Odors can be removed with a baking soda and water solution, and an open box of baking soda left in the icebox will continue to remove odors throughout storage.

Completely pump out any water from the bottom of the icebox and make sure pump is completely dry of any water.

Leave icebox lid open during storage to allow ventilation.

## STOVE

Depressurize the gas system and close all valves. Clean stove thoroughly. Remove fuel tanks and clean to remove any salt accumulation from their surface. Wipe down stove and tanks with a rag while applying a light layer of WD-40 or other lightweight, protective oil.

## INTERIOR

Remove as much loose gear from the boat as possible and store in a clean dry place. If cushions are left on board be sure they are dry and propped on edge to encourage ventilation.

Rinse and dry all floorboards and store them on their edge to encourage ventilation. Leave all lockers clean and open for ventilation.

## COVERING THE BOAT

Cover the boat adequately during storage to prevent excessive weathering.

### **BE SURE THE COVER DOES NOT CHAFE BOAT.**

Ventilation between the winter cover and the boat is required to avoid build up of humidity.

**CAUTION! DO NOT USE BLACK POLYETHYLENE AND DO NOT SHRINK-WRAP THE BOAT BY TAPING TO THE HULL. ALWAYS ASSURE GOOD VENTILATION.**

## SAILS

Remove the sails, clean following the sail makers recommendations and store in a clean dry space.

## MAST

The aluminum mast requires a minimum of care and maintenance. At the end of each season it should be washed with a mild detergent and water solution, followed by a complete rinsing with fresh water. Tie off all halyards and lifts, and inspect the mast completely for scratches, cracks or stress marks. Apply paint or a clear lacquer to any scratches found to prevent corrosion. Consult your dealer or a marine rigger if any cracking or stressing of the aluminum tube is found.

Check all hardware on mast carefully for signs of corrosion, and check the tightness of the fastenings. Masthead sheaves should show no signs of wear and should move freely. Lubricate if necessary.



## **XXIV) ENVIRONMENT**

Do not pour oil overboard; use appropriate waste containers.

When you fill up the engine fuel tank, take all the precautions in order to avoid overflowing.

In the harbor, do not use the heads if they are not equipped with holding tanks.

The use of detergent contributes to the deterioration of the sea fauna and flora; choose entirely biodegradable products for your cleaning operations.

Do not throw plastic bags overboard.

You love the sea, just as we do; therefore, help us to protect it and do not pollute it.