

XIX) EMERGENCY STEERING SYSTEM

Your boat is provided with an emergency tiller for use if there is a failure in the wheel steering system. The access cover on the cockpit floor above the rudder must be kept clear at all times.

Check at least once a year that the steering cables are properly tightened and lubricated.

To use the emergency tiller, remove the access cover; insert the tiller into the socket on the rudderstock. You may remove the steering wheel while using the tiller, to improve the tiller handle clearance.

REF	DESCRIPTION
1	Emergency Tiller
2	Cap to Get to the Rudder Stock
3	Rudder Stock
4	Steering Cable
5	Quadrant
6	Rudder Retaining Ring
7	Rudder
8	Idler
9	Steering Chain
10	Steerer Unit
11	Wheel

