


Battery Switch Operation

- Off - House and Starting batteries isolated from house loads
- 1 - Normal - House loads powered by House Battery, Starting Battery isolated and used only for starting engine
- Both - Emergency - House and Starting Batteries tied, engine may be started by House Battery
- 2 - Emergency - House loads powered by Starting Battery, House Battery isolated

Note - Fuses may be replaced with circuit breakers of the same value

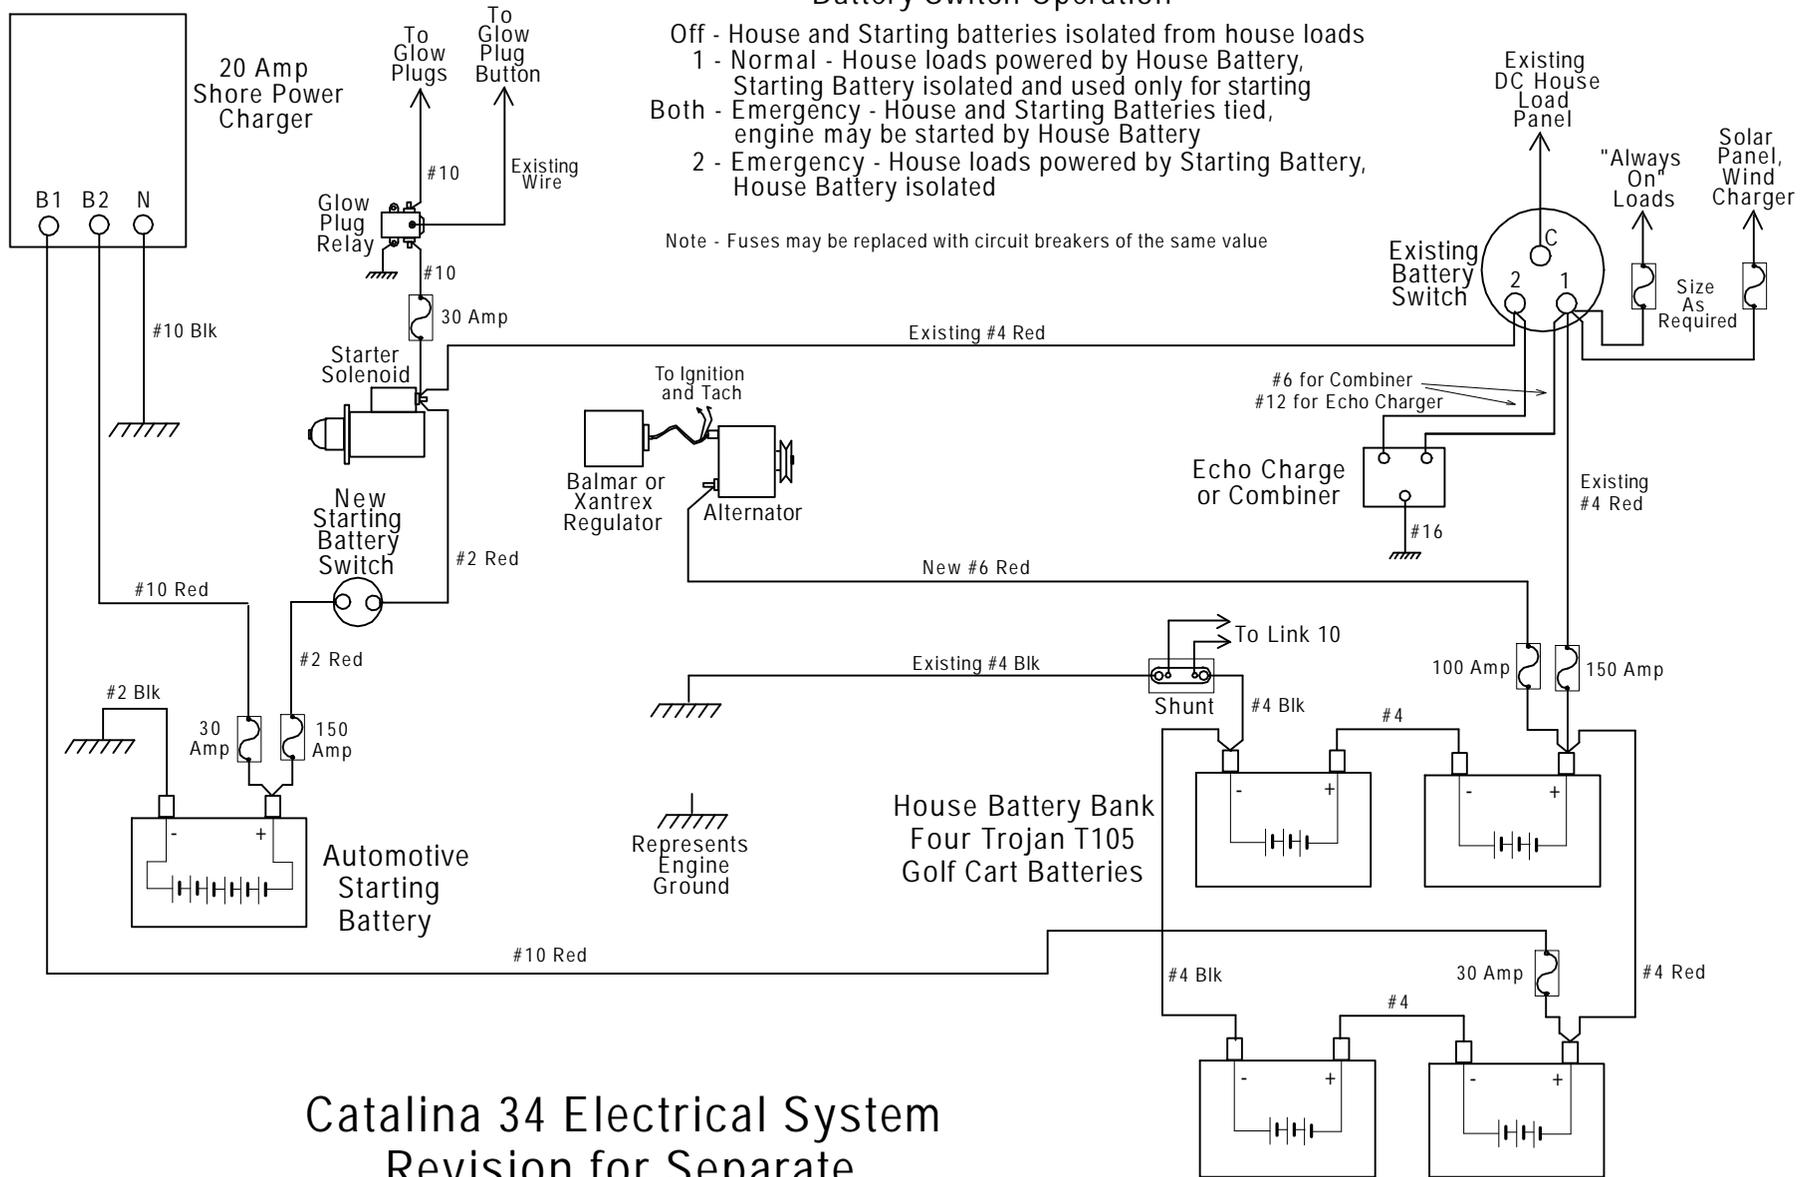

Catalina 34 Electrical System Revision for Separate House and Starting Batteries