



11. Using a large screwdriver, pry out the oil seal in the transmission case. Be careful not to damage the case or the adjacent bearing race.

12. Using a large screwdriver, pry out the oil seal in the transmission mounting flange. Be careful not to damage the case or the adjacent bearing race.