


Micro Air Corporation

FX-1 Direct Expansion Digital Control Operations Manual

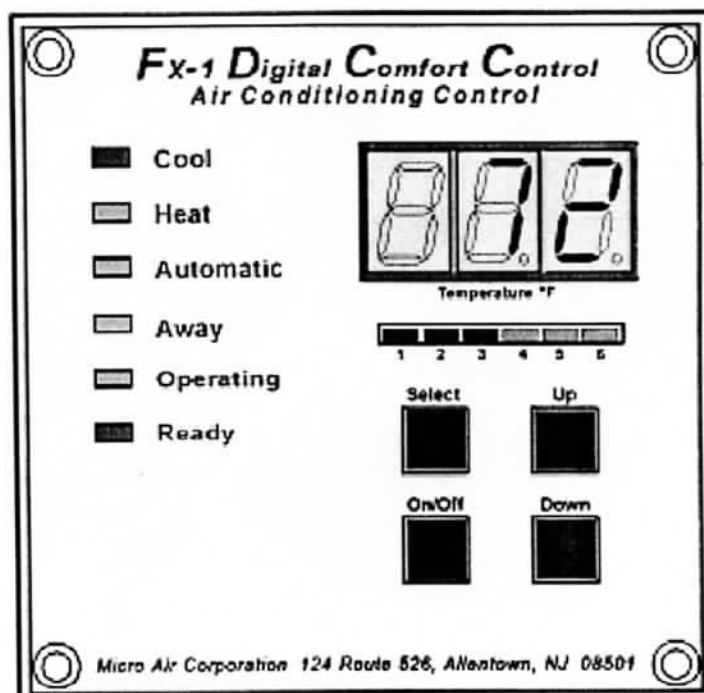

Micro Air Corporation
124 Route 526
Allentown, NJ 08501

Phone 609-259-2636
micro_air@msn.com
Fax 609-259-6601

Installed 4/17/06

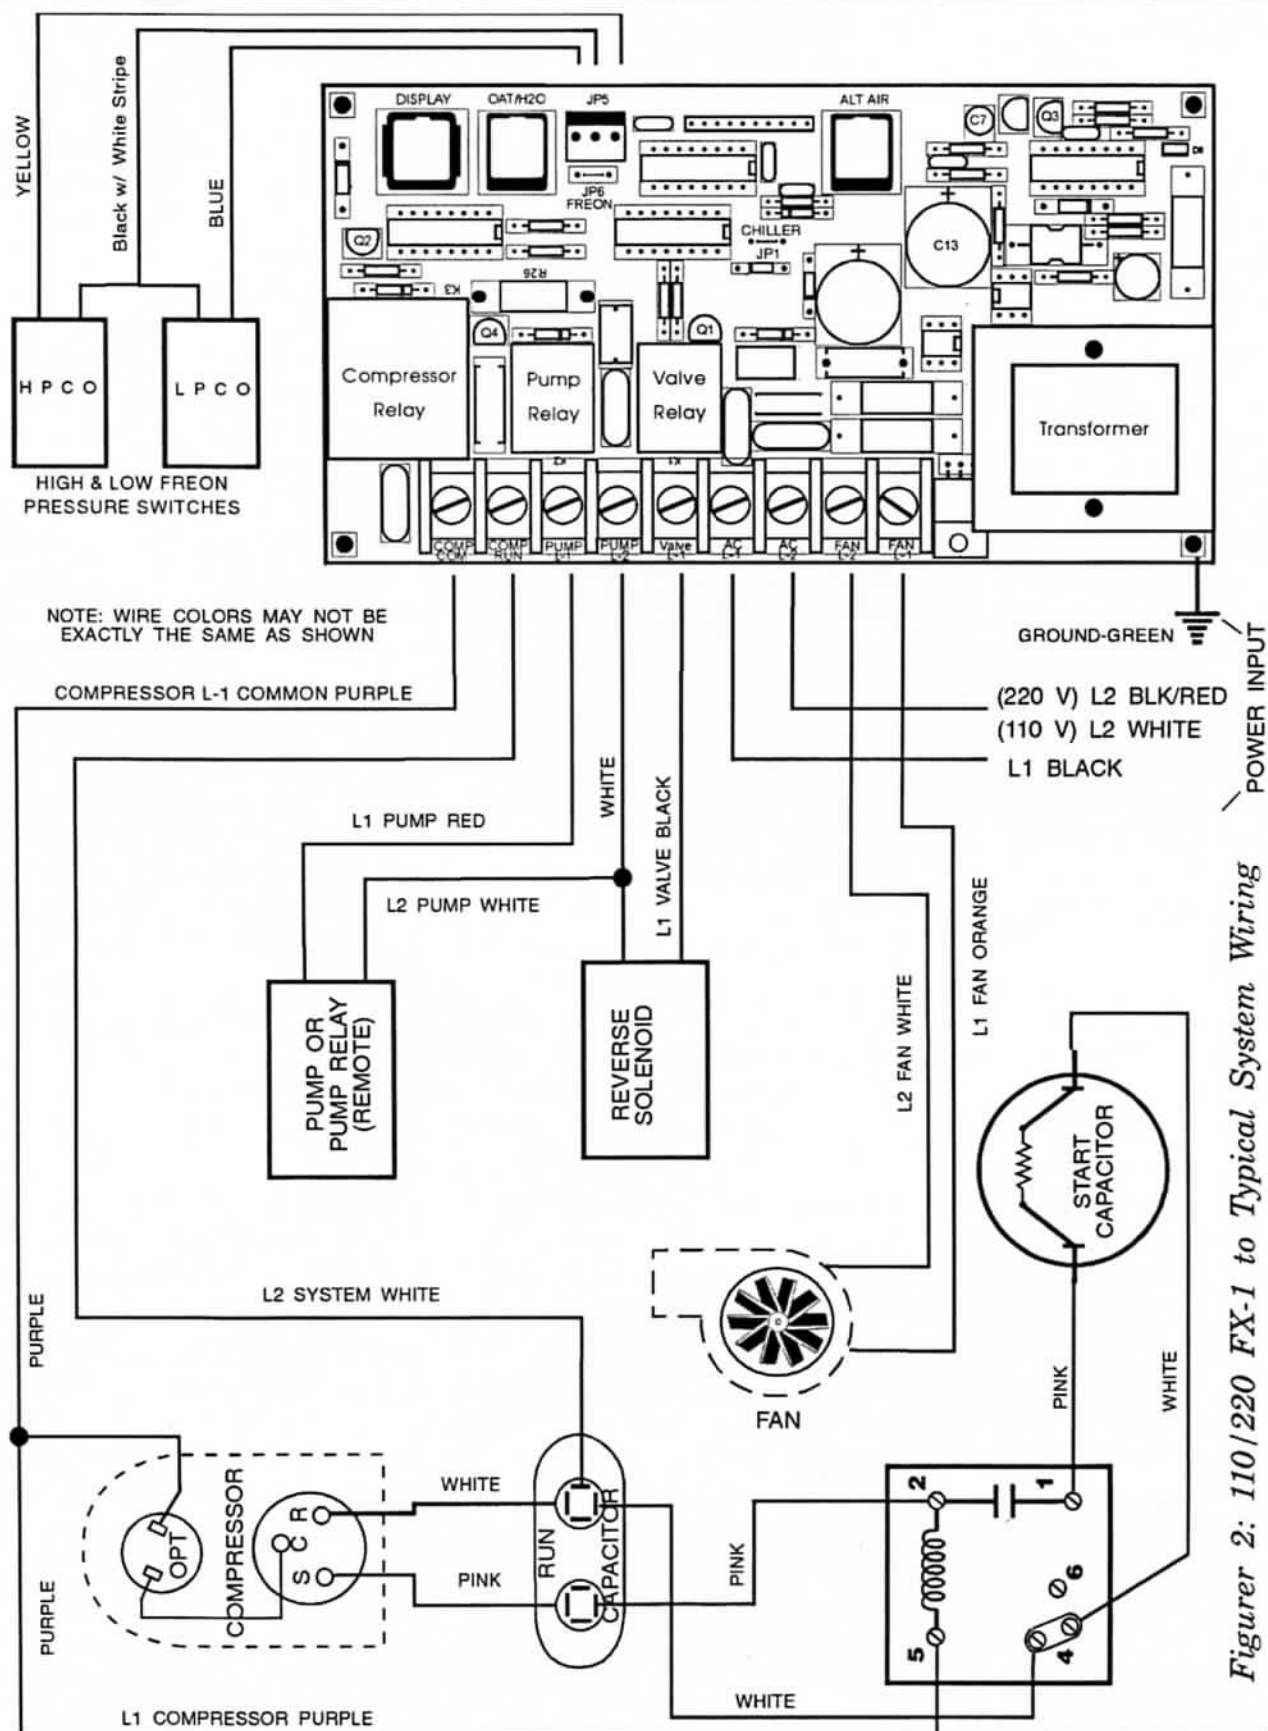


Figure 2: 110/220 FX-1 to Typical System Wiring

Optional Sensor Locations and Cable Connections

Optional Remote Air Sensor

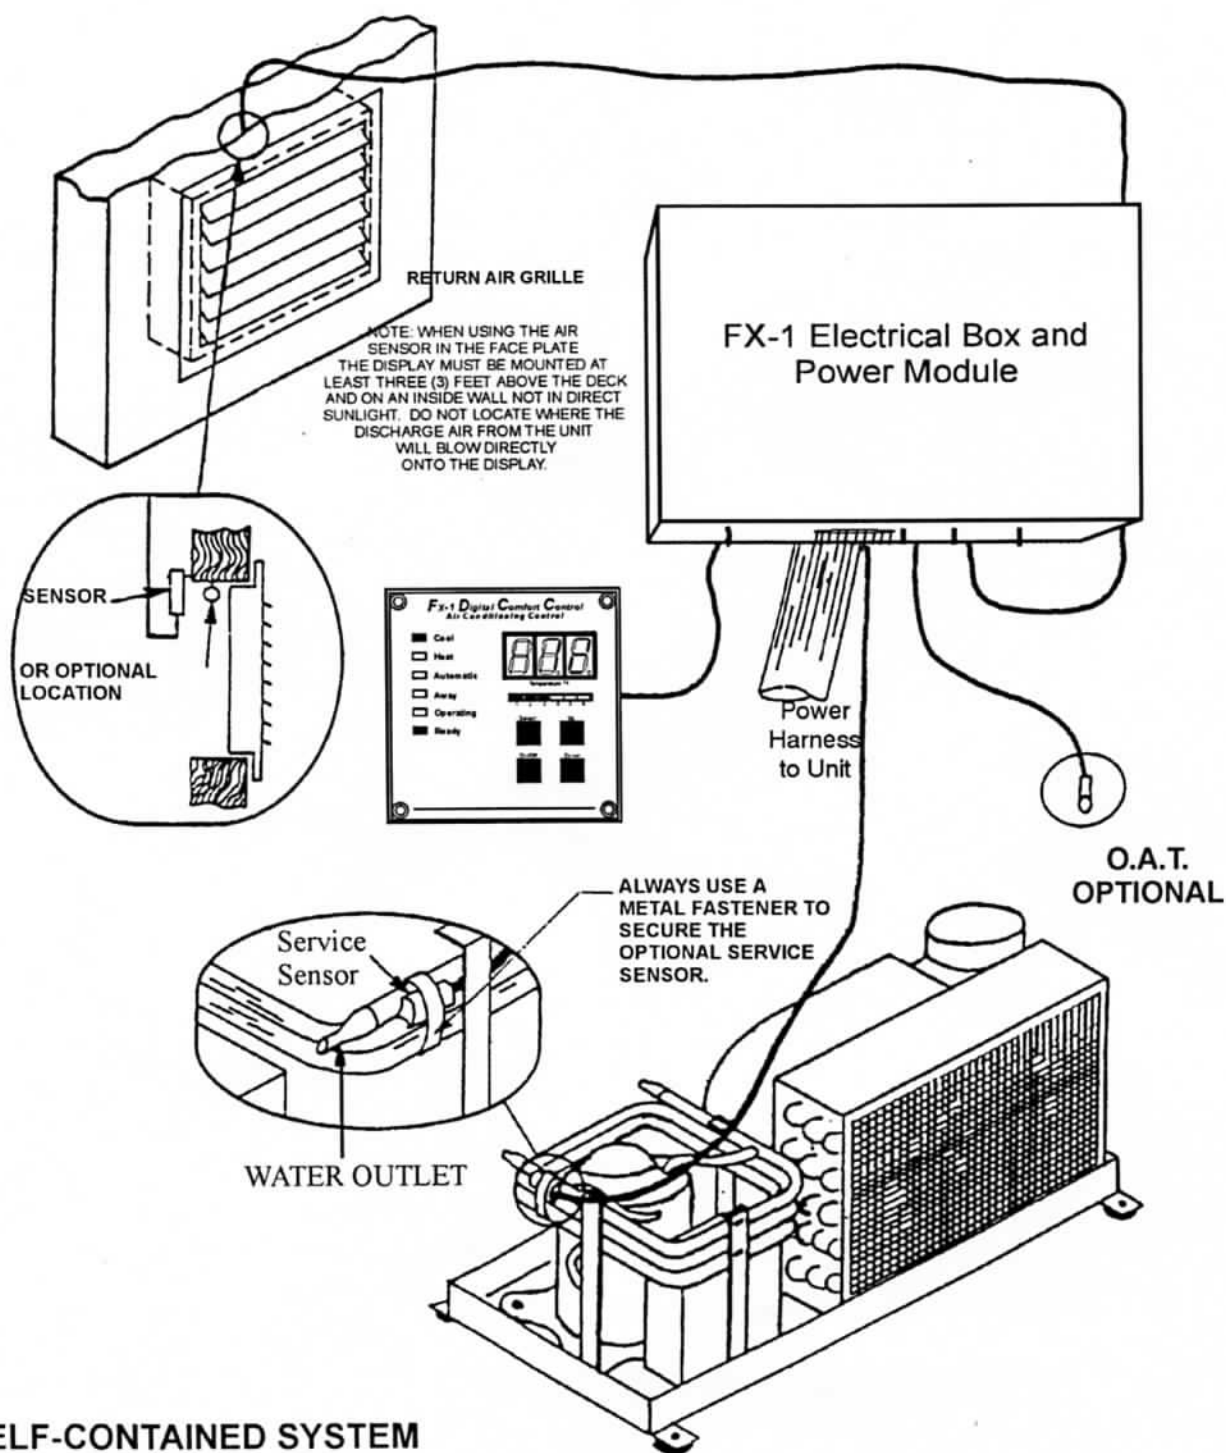


figure 3