

about your
O'day
Sailboat

- ★ operating tips
- ★ rigging instructions
- ★ boating safety act
- ★ glossary

O'Day 22

Operating & Rigging Instructions

CAUTION: Do not begin operating or rigging your boat until you have read all of the following operating and rigging instructions thoroughly.

SAFETY INFORMATION:

The mast, the stays, and all other parts of O'Day sailboats under 26 feet, following the general boating industry practice, are **not grounded**. Should your O'Day sailboat be struck by lightning or make contact with electrical power lines, substantial injury may result to the occupants. We recommend that if you wish to be protected from injury resulting from lightning that you have your O'Day sailboat grounded by an authorized O'Day dealer or other reputable boat yard in the manner recommended by the American Boat and Yacht Council of New York, New York. Under all circumstances, whether or not your boat is grounded, when lightning is present in your boating area, contact with the mast, the stays, and other metallic objects should be avoided.

We do not believe that grounding would be effective to avoid injury to occupants of your sailboat, if contact is made with electrical power lines.

When operating your sailboat on waterways, charts should be regularly consulted, not only for normal hazards, but also for the presence of electrical power lines. In addition, a lookout should be maintained for the presence of overhead electrical power lines, particularly during launching and hauling.

The following is a list of standard equipment which comes with your boat.

1. A mast with one set of spreaders.
2. A boom.
3. Flat package containing rudder and tiller.
4. Box of rigging containing main halyard, jib halyard, stays, main sheet, boom vang assembly (less plate), downhaul, outhaul, and jib sheet.
5. Berth cushions.
6. Sailbag containing mainsail and jib and battens for the mainsail.
7. Table leg and three penboards that seal off the cabin.

Optional Equipment

See your dealer on what is available. Optional equipment comes complete with installation instructions where applicable.

Suggested Equipment for Rigging Boat

A medium-sized screwdriver, a pair of pliers, and a small roll of tape to cover the cotter pins.

Mast

The first step is to remove the two spreaders which are taped on to the mast. You will notice that these two aluminum tubes, or spreaders, have a hole in one end and a slot in the other end. These spreaders should be fastened with the cotter pins on to the fittings on either side of the mast about one third up. Open ends of cotter pins after they are in place and tape. See Fig. 1.

Remove self-tapping screw at the end of each spreader and insert upper sidestay in each. Replace screws which will prevent stay from popping out of end of spreader.

Before you step the mast, pull the shackles on the ends of the halyards to the foot of the mast and cleat the other end of the halyards to prevent them from getting out of reach.

Stepping the Mast

We recommend that you have assistance in stepping the mast. Open the turnbuckles at ends of stays to half open position. Then, attach the back stay to the stern chainplate with clevis pin and cotter ring, and proceed to attach sidestays, both upper and lower, to the side chainplates. The lower stays that run up to the spreader bases are attached to the foreside chainplates, while the stays running from the top of the mast are attached to the aft side chainplates. See Fig. 4. Do not attach the headstay as of yet. A tabernacle is provided on the cabin top of the O'Day 22 for

case in mast stepping. With mast in a horizontal position and with sliding cabin hatch closed, insert base of mast with pin in tabernacle. Next push up and forward on the spar until the mast is in a vertical position. With one person holding the spar, attach the headstay to the stem fitting on the bow with the clevis pin and cotter ring. See Fig. 3. After all stays are securely attached, take the slack out of the rigging and tighten. With the mast plumb (in a vertical position), the headstay, back stay, and the two upper sidestays should be tightened no more than hand tight. The two lower sidestays should just be taut, not hand tight.

CAUTION: It is very important that you do not tighten the stays too much, as this can cause damage to the hull.

After the stays have been adjusted, take a pair of pliers, tighten the lock nuts on the turnbuckles which will prevent the turnbuckle from unwinding. To be on the safe side, we strongly recommend that you wire and tape the turnbuckle so it will not unwind.

Attaching Boom to Mast

Slip the gooseneck, which is on the forward end of the boom, in to the slot on the mast, Fig. 2. To hold up the after end of the boom, attach the tail with snap on back stay to aft end of boom.

Mainsheet

Take the free end of the mainsheet, thread it through the upper sheave on the block attached to the triangle plate in the backstay, bring it up through the block on the boom, then back down to the bottom sheave and thru the jam cleat. This type of mainsheet arrangement frees up the cockpit considerably. Tie a figure eight knot in the end of the mainsheet so you won't lose it. See Fig. 7.

For Boom Vang Instructions: See Glossary

To Attach Rudder

On the stern of the boat are two gudgeons into which are inserted the pintles on the rudder. Note that on the front of the rudder head between the pintles there is a rudder stop which prevents the rudder from accidentally coming loose. The top of the rudder stop with the rudder in place should rest under gudgeon. If adjustment is necessary, remove the stop and bend so it will bear against pintle. See Fig. 6.

To Hoist or Raise Mainsail










To raise the mainsail, insert battens and then starting near the gooseneck, feed the foot of the sail, clew first into the slot on the boom. The pin in the gooseneck slips through the tack of the sail to hold it in place. Draw the foot of the sail out along the boom until the foot is tight. The outhaul line should be attached to the clew of the sail, then passed through hole in fitting on end of boom, then cleated on boom cleat which is located approximately 2/3's of the way up on the right side of the boom. The cleat is located here to permit the crew to change the tension on the foot of the sail while sailing. A "block-action outhaul" is a help here as it greatly reduces the friction on the outhaul line. Next, fasten the main halyard to the head of the mainsail and feed the luff slugs of the sail into the mast slot cutout. Hoist the sail fully and cleat it. Located above sail-feed slot in mast is a cotter pin on a short length of line. This is inserted through holes drilled in mast groove above sail-feed slot and will prevent luff slugs from falling out when sail is lowered. See Fig. 8.

Downhaul

Tighten the luff of the sail by pulling down on the line attached to the gooseneck and then cleat it to the downhaul cleat. The position of this cleat on the mast may be changed by loosening the two screws, moving cleat, and then tightening screws again. See Fig. 2.

To Hoist Jib

Fasten all the snaps on the luff of the jib to the headstay and attach the shackle on the tack to the stemhead fitting. See Fig. 9. The jib halyard is then attached to the head of the jib. Tie the center of jib sheet to the clew of jib (see Fig. 5), and then run each jib sheet outside of the sidestays, and then through the block mounted on deck approximately three feet aft of the chainplates, then to the jib sheet cleat provided. See main drawing. Tie a figure eight knot in each end of the jib sheet so as not to lose it.

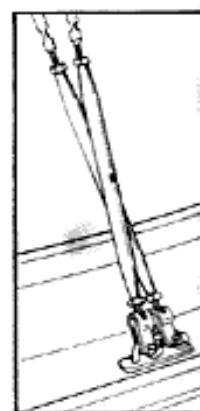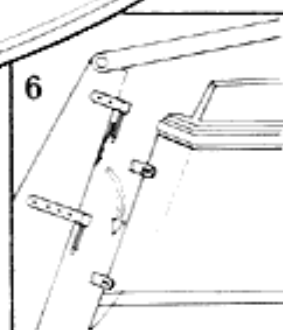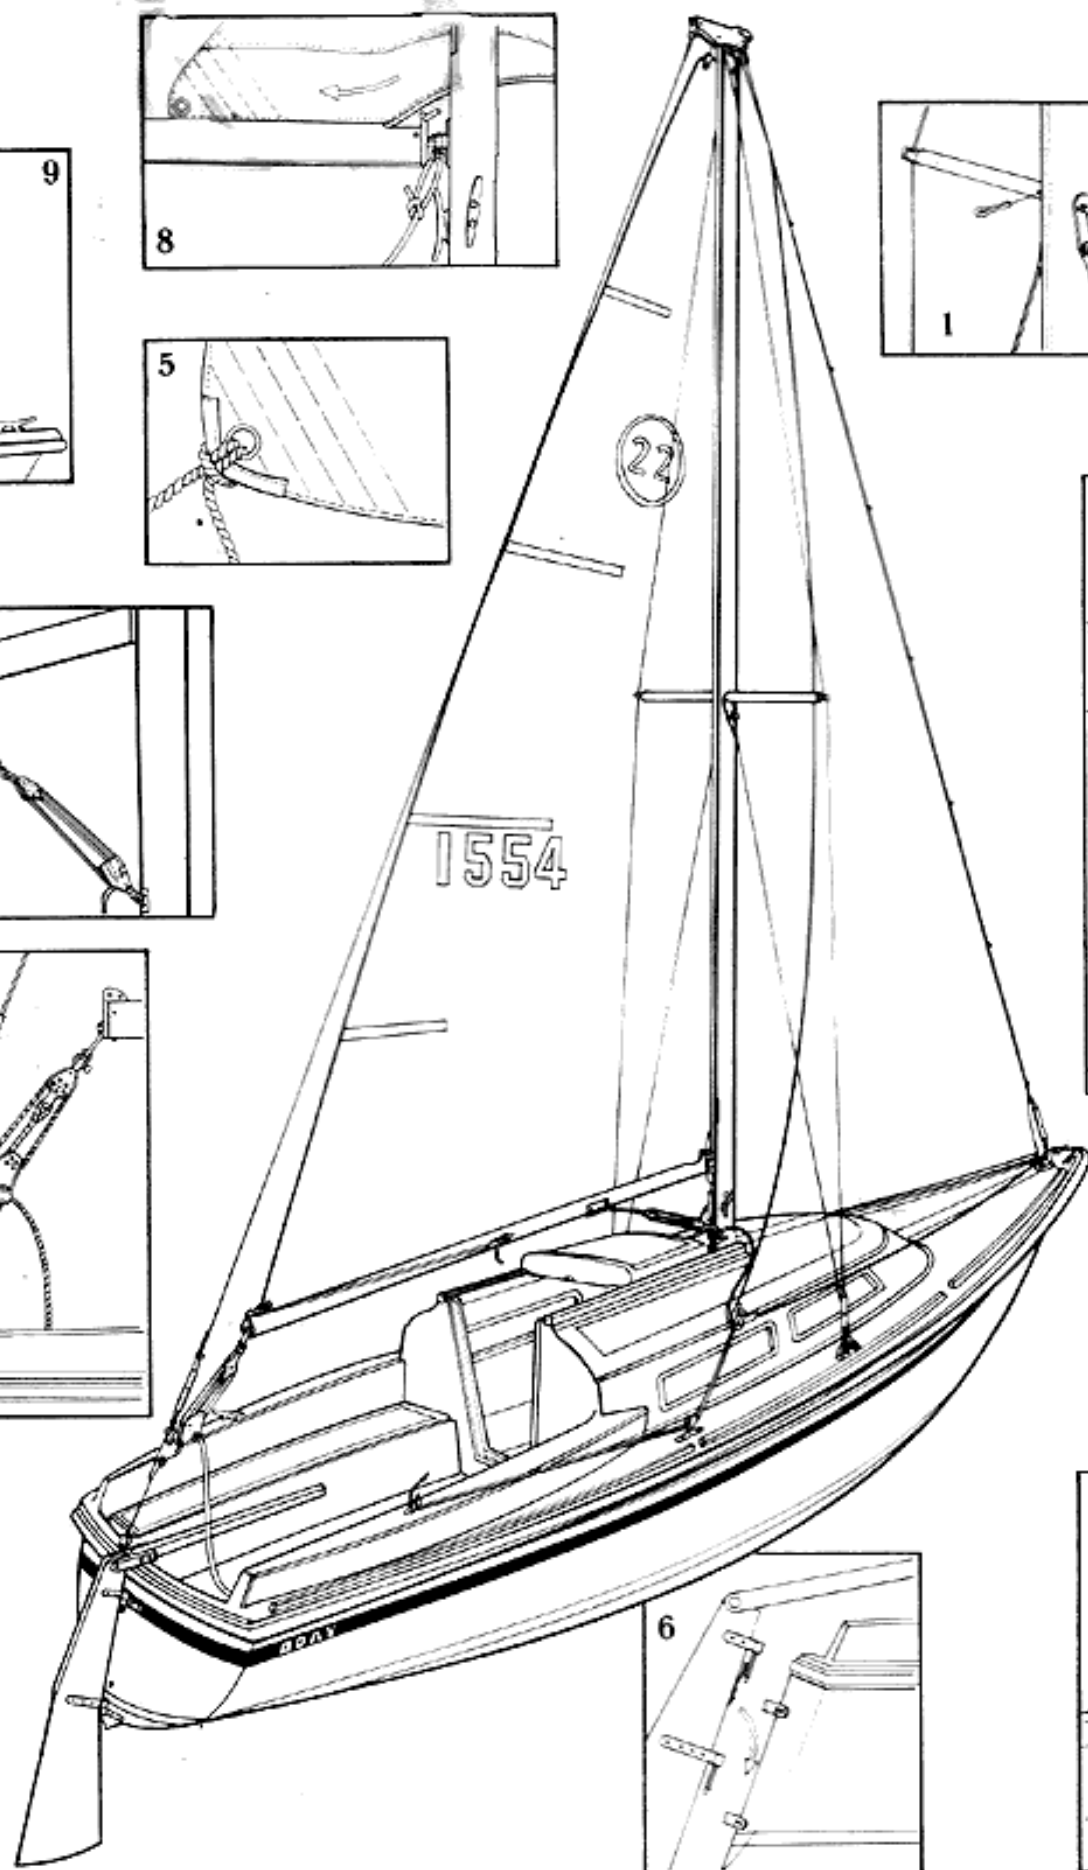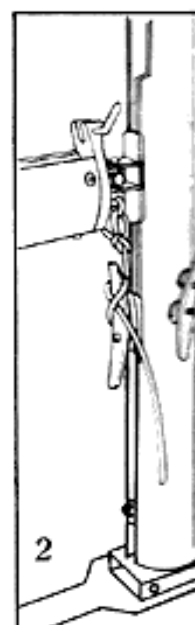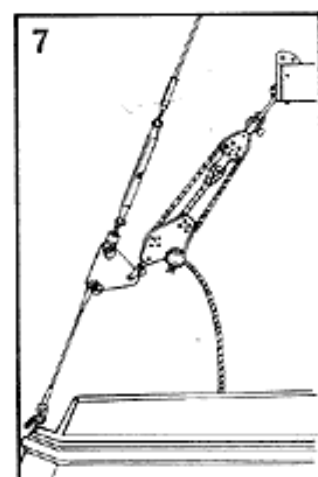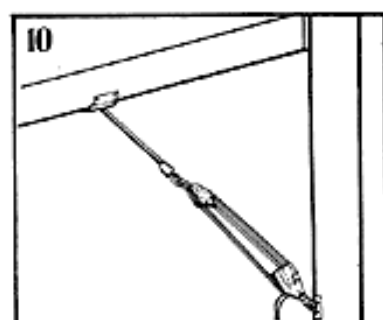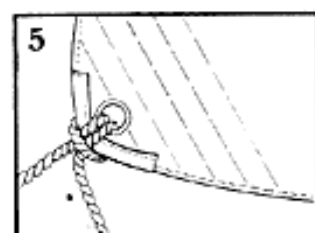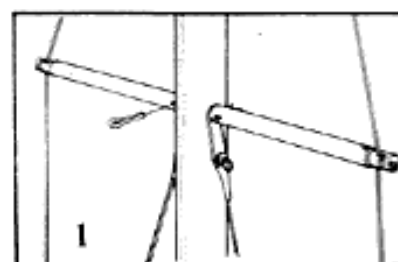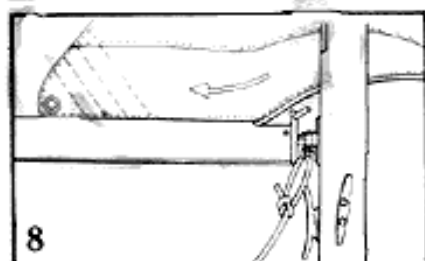

Roller Reefing

Your mainsail can be easily reefed, as the boat is equipped with a spring-loaded gooseneck. First, detach the vang pendant from the boom. Second, release the main halyard, but keep it under tension. Third, pull the boom back from the mast so that you can turn it. Fourth, roll the boom either way as you or your crew lets off slowly on the halyard. The sail will roll on the boom. Fifth, when you have rolled about 5 or 6 times, you will have reduced your sail area by 1/3. Experience will teach you how much to reef under various conditions. Sixth, lock your boom back into place by letting the boom go forward and tighten up halyard.

Outboard Motor

We recommend a maximum of 15 horsepower with a long shaft. The outboard motor is attached to the outboard motor bracket.

CAUTION! Be careful when turning the rudder blade as it can come in contact with the propeller.

Trailer

You will need a trailer that will support the complete boat's weight plus 20% which will cover weight of normal gear. A custom O'Day trailer may be purchased from your local dealer. It is a good idea to pad all areas of the mast that come in contact with the boat and trailer. All halyards and stays should be securely fastened to the mast while trailing. Also be sure that the boat is securely fastened to the trailer itself. The majority of hull weight should be in the keel support bed of the trailer.

Do not have excessive weight on the two side supports, for ease in hauling and launching, and for proper weight distribution on the hull.

When launching your O'Day 22, you will have to back the trailer into the water and float the boat off. This can easily be done with any average-sloped launching ramp. In salt water, be sure to wash the trailer down immediately to minimize corrosion. If your trailer is equipped with "bearing buddies," be sure to check for sufficient grease.

NOTE: Trailers rated for gross loads require a 2-inch trailer ball. (I.E., over 2,000 lbs.)

Flotation

There is sufficient flotation material (in block form) located in the boat to support the crew and normal gear, should the hull take on water through a leak or hull puncture. Be sure to check these areas prior to sailing and pump out any water.

Sink Drain





Be sure to check all connections for water tightness.

Bilge Drain Plug

The plastic plug in the cabin floor located over the aft end of keel is provided so that any water in the hull can be pumped out. Be sure to check this area prior to sailing.

Ballast

The O'Day 22 has 600 lbs. of lead ballast glassed into the keel, which is more than adequate; however, you can add more, if you prefer more stability. The easiest way to add is to pour lead shot (available at any good sporting goods store) into the keel area through the bilge drain plug. You may even mix with catalyzed resin for a more permanent job, but be sure area is dry. We have customers who have added 200 lbs. in this manner, but be sure to increase positive flotation at the same time in order to support extra weight, should the hull take on water through a leak or hull puncture.

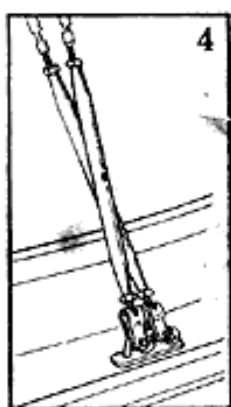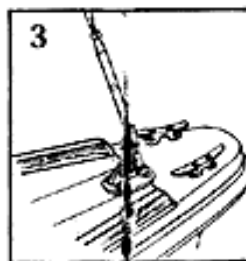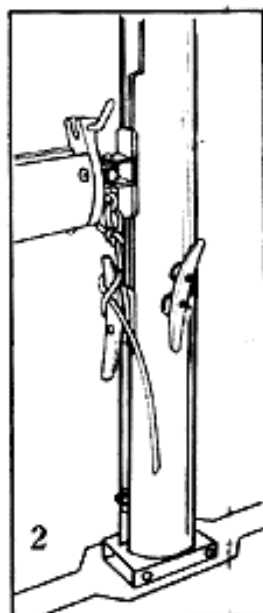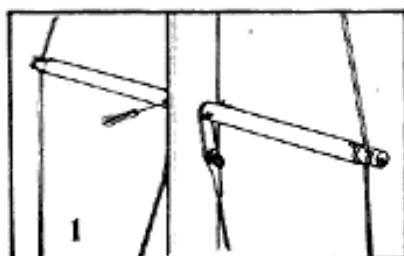

O'day

A Bangor Punta Company

P.O. Box 991, 848 Airport Road, Fall River, Massachusetts 02722
also 200-B Kalmus Drive, Costa Mesa, California 92626

Glossary

AFT: In the neighborhood or direction of the stern.
BATTEN: A thin wooden or plastic strip placed in a pocket in the leech of a sail to help hold its form.
BLOCK: Pulley consisting of a frame in which is set one or more sheaves or rollers. Ropes are run over these rollers.
BOOM: Spar at the foot of the mainsail.
BOOM VANG: The wire pendant attached to one of the boom vang blocks slides into a plate secured to the bottom of the boom, about 3' aft of the gooseneck. The other block attaches to an eye at the base of the mast. The vang's purpose is to keep the boom steady and horizontal while sailing.
BOW: The forward part of a boat.
CENTERBOARD: A keel-like device that can be hoisted or lowered in a trunk that acts as a keel in shoal draft boats.
CENTERBOARD PENDANT: Line used to raise and lower centerboard.
CHAINPLATES: Strips of metal fastened to the boat's hull near the deck line to take the stress of stays.
CLEAT: A fitting to which ropes are made fast.
CLEVIS PIN: A small stainless steel pin that has a hole in one end for a cotter pin and is used to secure stays to chainplates and mast fittings.
CLEW: The aftermost lower corner of a sail.
COCKPIT: The open area lower than a boat's deck where the occupants sit.
COTTERPIN: A straight or circular split metal pin used to hold a clevis pin in place.
DOWNHAUL: A device used to tighten the luff of a sail.
FAIRLEAD: An eye used to lead line in the direction desired.
FOOT: The lower edge of a sail.
GOOSENECK: A metal device that secures the boom to the mast.
GUDGEON: A metal socket attached to the transom to receive the pintle of the rudder.
GUNWALES: The upper edge of a boat's side, where it meets the deck.
HALYARD: A line for hoisting (or raising) the sails.
HEAD: The upper corner of a sail.
HEADBOARD: The fitting at the head of a sail with a hole in it to receive the main halyard.
HEADSTAY: The foremost stay on a sailboat. A jib is set on a headstay.
HULL: Main body of a boat.
JIB: A triangular sail set forward of the mast.
JIB SNAPS: Small fittings that are attached to the luff of a jib which secure the jib to the headstay.
JIBE: The action of the mainsail when shifting from one side of the boat to the other.
LEECH: The after edge of a sail.
LEEWARD: Away from the wind.
LINE: The common expression for a rope in use.
LUFF: The forward edge of a sail.
MAINSAIL: The principal sail on the mainmast.
MAINSHEET: The line used to trim a mainsail.

MAST: An aluminum tube designed to stand on end so as to support a boom plus one or more sails.
MASTHEAD: The top of the mast.
MASTHEAD FITTING: The fitting at the top of the mast.
MAST STEP: A metal fitting that holds the base of the mast in position.
OUTHAUL: A line used to haul the clew of a sail out to the end of the boom.
PINTLES: Pins on the forward side of a boat's rudder designed to rest in and pivot on the gudgeons secured to the transom.
PORT: The left side of a vessel facing forward.
REEFING: To reduce a sail by rolling or folding up part of it.
RIGGING: The wire supporting the spars is called standing rigging (stays or shrouds) and the ropes used in setting and trimming sails are known as running rigging (halyards and sheets).
RUDDER: A vertical plate attached to the stern of a boat used in steering it.
SELF-RESCUING: A feature which enables the crew to right and sail away a boat which has capsized.
SHACKLE: A U-shaped piece of metal with a pin across the open ends.
SHEET: A rope used to trim a sail.
SHROUD: Same as a stay.
SLACK: The opposite of taut. Slack away or off, to pay out.
SLOOP: A one masted vessel with two or more sails.
SPAR: A mast, a boom, etc.
SPREADERS: Aluminum tubes that project from a mast in a traverse direction in order to keep a stay at proper tension and to help hold the mast erect.
STARBOARD: The right side of a boat, facing forward.
STAY: A length of wire used to support a spar.
STEMHEAD FITTING: The fitting nearest the bow on the deck, where the headstay attaches.
STEP: To step a mast is to set it in position.
STERN: The after part of a boat.
TABERNACLE: A fitting designed so that the mast can be lowered when passing under obstructions; also facilitates stepping and unstepping the mast.
TACK: The lower forward corner of a sail.
TILLER: A piece of wood connected with the rudder head. By this the rudder is moved as desired.
TOPPING LIFT: A wire and/or rope with one end attached to the top of the mast, with the other end attached to the aft end of the boom. Its purpose is to hold the end of the boom up when the mainsail is lowered.
TRIM: To trim sails. To put them in correct relation to the wind, by means of sheets.
TRUNK: A centerboard housing.
TURNBUCKLE: A device used to maintain correct tension on rigging.
WINDWARD: Toward the wind.

Boating Safety Act

A Federal Boating Safety Act was passed in 1971 to further encourage safety in boating. O'Day endorses the general nature of this Act and certifies that it reasonably complies with requirements of the Act. There are several specific aspects of the Act new customers should understand.

1. Every O'Day boat has a special numbering system. Numbers are permanently molded into the transom on all models. The first three letters are our manufacturing serial number, the next letter represents the boat model code letter, the first four numbers are the sail or class number and the last four digits represent the model year and the month the boat was built.

2. Customers are required to provide approved life saving devices for each crew member on board.

3. Availability of approved fire extinguishers is required on many boats.

Customers should consider having an extinguisher even when not required.

4. Recommended horsepower for engines is included in O'Day's catalog and should be complied with for safety and warranty reasons.

5. After dark boats must be lit in an approved fashion — customers must make provision for this.

6. O'Day is obligated to inform customers of manufacturing defects which may exist in specific boats. O'Day must describe the defect, evaluate the hazards involved, and state the action it is taking to eliminate the defect. Obviously O'Day cannot do this readily without record of each boat's owner, which is supplied by the return of the Warranty Card. The Company strongly urges this Card be returned promptly.

General Information

The following information is to be used as a general guide, and if you are not sure or need more help, do not hesitate to call upon us or our dealer.

Tuning — Do not overtighten stays, as mainsheet tension will dictate tension on headstay. While sailing, the leeward stays will always go slack due to mast bend, stretching, etc., so under no circumstances should you tighten them under sail — all adjustments should be made while at rest with the sails down.

Maintenance

Fiberglass Repairs — although fiberglass is a relatively simple material to work with, we urge that you familiarize yourself with the proper procedures in order to insure good results.

The surface color (gelcoat) should be cleaned and waxed at least twice a year in order to maintain its luster. The color may fade due to weathering and if ordinary cleaning will not bring the color back, try a regular automotive compound followed up by waxing.

Sails — Dry and fold carefully after each use and if used on salt water, wash with fresh water every so often. Fold by stretching out the sail on the lawn or clean surface and starting at foot with person at clew and tack, make one foot to two foot folds by bringing the head down towards you gradually and evenly. Finally, fold from clew to tack or vice versa.

Woodwork — Varnish at least once a year, using any good marine varnish. Teak can be either oiled or varnished. Teak should be oiled at least twice a year to prevent splitting.

Bottom Paint — Recommended in both fresh and salt water. Follow directions on can carefully. Be sure to paint keel and/or centerboard as well as bottom.

Leaking — Should any leaks develop through hardware fastenings, hull and deck joints, etc., these can easily be fixed by applying a good marine sealant.

Trailer — Normally any good marine boat trailer is sufficient that will support the complete boat's weight plus say 20 percent which will cover weight of normal gear.

A "trailing package" is a great help, as it keeps mast and boom off the boat and makes tying down easier.

For The Racer

The rake of the mast can be changed by adjusting the headstay turnbuckle and then re-adjusting the sidestays. In general, a boat will perform better while sailing to windward with some aft rake and better downwind with the mast plumb or slightly raked forward. Races are usually won to weather, so favor more aft rake, if anything.

Sail Set

The jib halyard should be taken up so that the tension on the luff, while under sail, is the same as on the headstay. The tension on the foot and luff of the mainsail should be such that there are no stress lines or wrinkles in the sail. Apply more tension as the wind increases, which will move the draft forward and decrease heeling moment, etc. In general, the outhaul should be slackened while sailing off the wind in order to create more draft in sail.

Tell Tales are an invaluable aid in determining wind direction - 8 inch pieces of yarn tied to sidestays 2 ft. to 4 ft. up from chainplate, and a wind pennant on top of mast.

6 to 8 inch pieces of yarn taped to luff of jib on both sides every 3 feet or so on bottom half of sail 8 inches back from luff wire are excellent wind-flow guides. If you point too high, weather yarn flutters, and if pointing too low, leeward yarn flutters. Both should flow back evenly - remember this only tells you flow pattern for a given jib trim, so trim must be correct for sailing angle.