

MANUAL FURLING - PROCEDURE

- 1) Disengage Motor
- 2) Winch the sail in or out
- 3) Only use the locking pin if sail is partially furled (reefed). Never use motor with locking pin in the "locked" position as shown above.