





DOES THE GAUGE WORK?

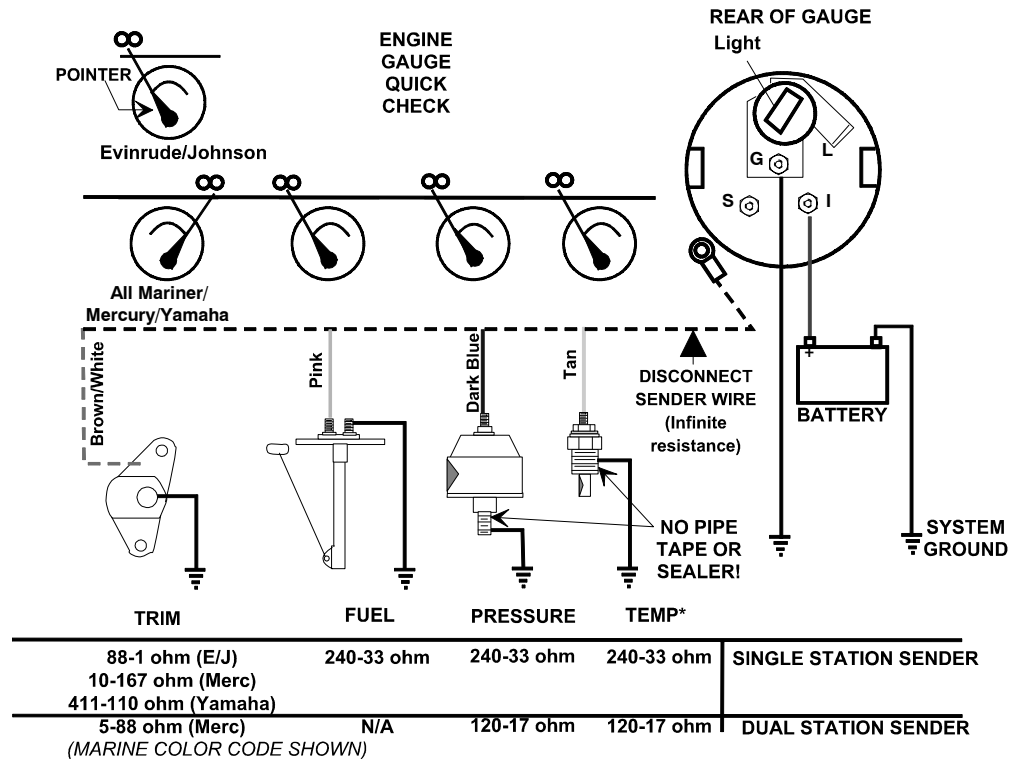

*TEMP Sender value @ 75°F is 550 to 750 ohm, 55 ohm @ 212°F Single. (Dual is one-half these values)

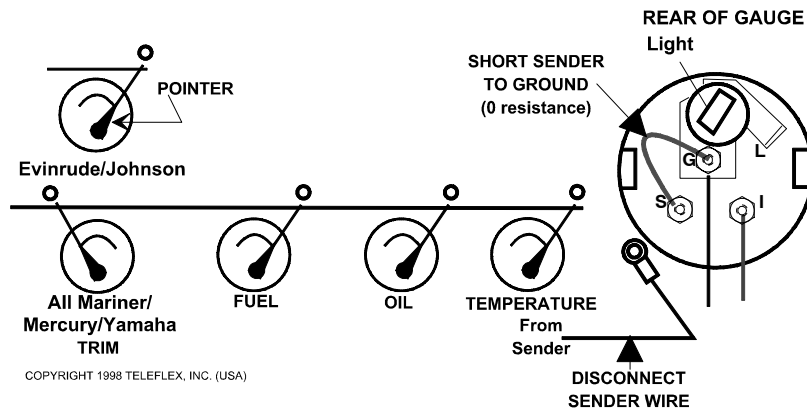

To see if the gauge is operating correctly:

1. Remove the gauge's sender wire. Turn on the power. The pointer of whatever gauge you are checking should be at the position shown in the top picture.
2. Next, take a short wire and connect to sender terminal and ground terminal (shorting sender terminal to ground). The pointer of that gauge should be at the position shown in the lower picture.
3. To test senders, the resistance values are shown at minimum and full gauge scales.



A Division of Teleflex Incorporated (USA)

6980 Professional Pkwy East
Sarasota, FL 34240-8414
Phone (941) 907-1000
FAX (941) 907-1020
www.tflx.com