


356 MID-DECK TOP HATCH INSTALLATION

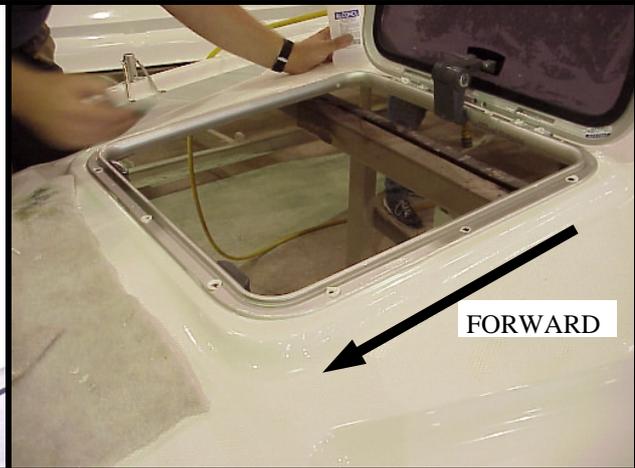

| # | #Ea. | Description | Size | Part # |
|---|------|----------------------|-------------------------|--------|
| 1 | 1 | Mid-Deck Top Hatches | Coastline Size 60 Hatch | 300670 |
| 2 | 17 | Hatch Fasteners | #10 x 1" O/H | 465630 |
| 3 | 8 | Trim Ring Fasteners | #6 X 5/8" P/H | 466810 |

1. From underneath the deck place the plastic trim ring up in the mid deck opening so the top edge is flush to the top of the deck. Using a 1/8" drill and the designated fasteners (approximately two per side) secure the trim ring to the deck.
2. Place the hatch in the deck opening (Make sure the hinge is aft and the hatch is straight).
3. Mark the outside of the hatch and the mounting hole locations.
4. Remove the hatch and make sure the deck is sanded properly (Inside of pencil line - no shiny areas).
5. Drill the marked mounting hole locations using a 5/32" drill bit.
6. Dremel the holes to expose raw edge of glass (only edge of hole).
7. Clean the surface of the hatch and deck using alcohol.
8. Caulk all mounting holes and inside of the marked line using designated caulk (See page 1 #1).
9. Place the hatch in position then secure using designated fasteners. (Fig 4)
10. Clean up excess caulk using alcohol.

Revision Dates:

Expected Time: 30 min.